

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER DANGER

To reduce the risk of electrocution:

1. Always unplug this appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquid.
5. Do not reach for an appliance that has fallen into water. Unplug immediately.

WARNING

To reduce the risk of burns, electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.

3. Use this appliance only for its intended use as described in the manual. Do not use attachments not recommended by Conair.

4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.

5. Keep the cord away from heated surfaces. Do not tightly wrap the cord around the appliance.

6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other material.

7. Never use while sleeping.

8. Never drop or insert any object into any opening.

9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

10. Do not use an extension cord with this appliance.

11. Do not immerse appliance in water.

12. Do not touch hot surfaces of the appliance.

13. Do not touch the posts that hold the curlers. They are hot.

14. Use appliance on level surface.

15. CAUTION: This is a dry hairsetter. This unit is not designed for mist. DO NOT use water or any liquid in this product.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

Basic Use Procedure:

1. Before plugging unit into outlet, insert rollers into the hairsetter unit.

2. Place hairsetter on a firm, flat surface. Plug into any ordinary household (120 AC) outlet. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

3. With lid closed, allow rollers to heat. This will heat up rollers fastest and most efficiently. In minutes, the rollers will be hot and you can begin setting your hair.

4. Allow rollers to heat longer for tighter curls. Never leave your hairsetter on and unattended. Always unplug the hairsetter when not in use. Allow hairsetter to cool, then store in a safe place.

MAINTENANCE

Your hairsetter is designed for household use and is virtually maintenance-free. This product represents the highest standards of workmanship and engineering research. If cleaning becomes necessary, disconnect the appliance from the power source. Allow the setter to cool. Occasionally you may want to clean your rollers. Use a damp cloth and mild detergent or soap. If any abnormal condition occurs, unplug the hairsetter, allow it to cool, and return it to a Conair service center for repair.

STORAGE

Unplug hairsetter and allow it to cool. Loosely wrap the cord around the base of unit for storage. Place in a safe, dry location, out of the reach of children.

TO ORDER EXTRA ROLLERS:

MODEL	DESCRIPTION	PRICE
RP40	3 Small Sticks	\$2.50
RP41 (purple)	3 Large Sticks	\$2.50
RP41-GRN	3 Large Sticks	\$2.50

*Three roller minimum

Add Postage and Handling to order.

Any order up to \$5.00, add \$.50

Any order from \$5.01 to \$10.00, add \$1.00.

Any order from \$10.01 and over, add \$1.50.

Mail Order To:

Conair Corp.	Conair Corp.
150 Milford Rd.	7475 N. Glen Harbor Blvd.
East Windsor, NJ 08520	Glendale, AZ 85307

Include return names, address and model # of replacement rollers. Please make check payable to Conair Corporation.

STYLING TIPS

Hot Sticks® Hairsetter, with its unique roller system, produces excellent curling power. You can achieve a professional "Perm Look" or a head full of spiral curls on any length hair, without leaving your home. Tight curls and full volume are possible, even on the straightest hair. With Hot Sticks® Hairsetter, your tight or soft curls will form quickly and last longer.

Soft curls can be obtained by using a shorter heat-up time and removing rollers soon after you have completed your set.

The amount of hair per section will determine the tightness of the curl: for firm curls, use small sections of hair; for soft, loose curls, use larger sections of hair.

After using Hot Sticks® Hairsetter several times, you will find the best timing suitable for the texture of your hair and for attaining the particular style desired.

HOW TO USE:


1. Place hairsetter on flat surface and plug into outlet.

2. With lid closed, allow rollers to heat. In minutes, your rollers will be hot and you can begin to set your hair. Allow to heat longer for tight curls. Ready dot will turn black, indicating optimum heat. For best use with short hair or for loose curls, remove a roller from unit and allow to cool for several seconds prior to use.

3. For optimal results, hair should be clean and dry. Take one section of hair at a time, as you would with any other roller. Comb section and hold with hand.

4. Placing the Hot Sticks® Roller vertically at the very end of hair section, start to roll the hair vertically toward the scalp, using the ribs on the roller as a guide. When rolling, be sure to include the very ends of the hair to ensure the most consistently formed curl. You may want to secure the ends of the hair around roller with thumb. Hair adheres easily to the roller.

PLEASE NOTE: Center of rollers will be hot. To prevent burns, be sure to hold rollers by ends to roll hair, and avoid contact with the scalp.

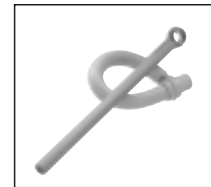

5. Hot Sticks® Rollers have an interlocking system which do not require clips. Simply bend both ends of roller together and secure by inserting one end (without hole) into center of the hole on opposite end of roller.

6. To create a larger diameter curl, take larger sections of hair and simply place two rollers together, and roll section of hair over both rollers, (use ribs on rollers as a guide,) bend ends together and secure. For looser curl, only roll hair halfway up before securing.

7. Repeat all steps until all sections of hair are set. After set is complete, unplug Hot Sticks® Hairsetter. Leave Hot Sticks® Rollers in hair for about 15 minutes or until they cool, to achieve the tightest curl. Soft curls will form well in only 5 minutes. The set time may vary depending on hair type.

TO REMOVE HOT STICKS® ROLLERS

Carefully remove rollers by sliding end of roller from hole and gently unwinding. Once all rollers are removed, allow hair to cool, then style as desired, using fingers or a wide tooth comb. We do not recommend using a brush, as brushing may change the look and shape of the curl and affect the style. Place rollers back into appropriate compartments for storage.

Hot Sticks® Rollers are washable. If desired, use a damp cloth with mild detergent or soap and let dry before putting back in the hairsetter unit.

HAIR STYLES

Look 1: Loose

Roll hair up 2" from roots. Unroll when cool, put gel on fingertips, comb through hair, and pull out a few separate strands.




Look 2: Smooth

Roll hair up all the way. Unroll when cool & brush lightly, scrunching hair with hands into curls or waves. Spray to hold shape.



**WARNING: IF YOU
THINK THE POWER
IS OFF WHEN THE
SWITCH IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

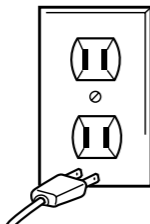

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

**ALWAYS UNPLUG
SMALL APPLIANCES**

A Public Service Ad from the Association of Home Appliance
Manufacturers and Underwriters Laboratories, Inc.

LIMITED ONE YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

SERVICE CENTERS:

CONAIR CORPORATION
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

CONAIR CORPORATION
Service Department
150 Milford Road
East Windsor, NJ 08520

Note: The items in bold are not absolutely necessary if space limitations are a concern. However, the bold items should be included whenever possible and if included should remain bolded. Also, the bolded information may be replaced, in bold, with the following:

ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12 MONTH DURATION OF THIS WRITTEN WARRANTY.



HotSticks

Make
Curly Spirals
tight to soft curls
on any length
of hair without
clips



CONAIR®

Instruction Booklet