

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER DANGER

— Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquid.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. Do not pull, twist, or wrap line cord around appliance even during storage.
3. This appliance should not be used by, or near children or individuals with certain disabilities.
4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.

5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.

6. Keep the cord away from heated surfaces.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Unit is hot when in use. Do not let heated surfaces touch eyes or skin.

11. Do not place the heated unit directly on any surface or on the appliance cord while it is hot or plugged in.

12. Never block the air openings of the appliance or place on a soft surface, such as a bed, couch, or towel, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like. Unplug before storing.

13. Do not use an extension cord with this appliance.

14. Do not touch hot surfaces of the appliance. Use handles or knobs.

15. Before plugging in, read the information about dual voltage contained in the instruction section of this manual.

16. Do not attempt to touch the housing of your appliance near the straightening plates as it is hot when in use.

17. Do not use with a voltage converter.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This straightening iron is intended for household use. This unit is designed to operate at 120/240 volts AC. Use on Alternating Current (50/60 hertz) only.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

DUAL VOLTAGE

This straightening iron will automatically adjust to the proper voltage. Use an adapter plug with correct configuration, prior to use in outlet.

DRYING SYSTEM WITH UNIQUE WET• DRY DESIGN

This Wet•Dry Straightener features our exclusive vent and channel design, allowing for use on dry or damp hair. When used on damp hair, excess water is forced into channels where it can escape as steam. The steam evaporates through the vents in the housing, while the hair's natural moisture is sealed into the cuticle.

CAUTION: Steam evaporating through the vents may be hot. During use, avoid touching or blocking the vents and direct drying vents away from your scalp and face.

TO STRAIGHTEN HAIR

Hair should be clean and completely dried or damp before using the straightening iron. Plug the iron into an electrical outlet. Turn on unit. The power indicator light should become illuminated. Allow unit to heat up for several minutes.

WARNING: The straightening iron's plates will get very hot within a few seconds and should not be placed in contact with the skin after the straightening iron has been turned on.

GETTING STARTED

The straightening iron's 30 temperature settings and Instant Heat technology combine to provide styling versatility for all hair textures. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-straighten hair, keep the heat setting high. You can vary the straightening iron's temperature according to your particular need!

STRAIGHTENING BASICS

1. Plug the straightening iron cord into any household outlet (120/240V). Press ON button, red indicator light will blink. The iron will heat up very quickly. The red indicator light will stop blinking and remain on when the iron is ready to use. To turn off, press OFF button, red light will go off. Never leave your straightening iron on and unattended. However, should you fail to turn the unit off, it will shut itself off automatically within 60 minutes.

2. Start with a hair section that is 2" wide and no more than ½" thick. Open the iron and place a hair section between the two hot plates, close to the scalp. Trap hair between the plates by firmly squeezing the handles together. While maintaining the tension, slowly pull the unit down along the hair section toward the end of hair. For best results, use a light styling lotion before blow-drying hair. At the end of hair section, release the pressure on the handle and allow the hair section to slide out. Repeat process on additional sections of hair until you achieve the hair style you desire. It may be necessary to repeat process on certain areas, depending on the texture of your hair.

Some experience is necessary when learning to use this straightening iron. After using iron several times, you will learn the ideal way to straighten and style your hair easily.

STYLING WITH EASY-GLIDE TITANIUM-TOURMALINE CERAMIC-COATED PLATES

The plates of this straightening iron are coated with a combination of the best materials for styling. A fusion of titanium, tourmaline and ceramic evenly distributes heat to gently style and protect hair from damaging hot spots. When heated, tourmaline naturally emits clouds of negatively charged ions that eliminate flyaways and frizzies and leave hair silky smooth and shiny.

Hair glides easily over the surface of these ultra smooth plates. As you straighten each strand, you'll achieve a salon-perfect finish.

Plates are exceptionally easy to clean, and you'll discover that this combination of technologies leaves your hair silky smooth.

Temperature Setting Guide

Temp. Setting	Hair Type
Low/Wet 1-10	Delicate, thin, easy-to-straighten hair
Med/Damp 11-17	Average to thick or treated hair
Med/High/Dry 18-23	Thick or wavy hair
High/Dry 24-30	Hard-to-straighten hair

USING INSTANT HEAT, THE 30 VARIABLE TEMPERATURE SETTINGS AND UNIFORM HEAT RECOVERY SYSTEM

 
This straightening iron features Conair's Instant Heat technology.

Within this Instant Heat technology there are 30 temperature settings for every type of hair, from the finest to the curliest and most resistant. Select the temperature range that's suitable for your hair type to help you create the look you want. Use the low settings for wet/damp hair and as your hair dries turn to the medium settings. Once hair is completely dry, use the medium to high settings to complete the straightening process.

And that's not all. Conair's professional salon standards of engineering provide you with a Uniform Heat Recovery System that maintains the straightening iron at a constant temperature.


There is a constant surge of power to ensure that heat is continuously delivered for optimal styling results, unlike other units which lose heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

REMOVABLE SILICONE DEEP SHINE ATTACHMENT

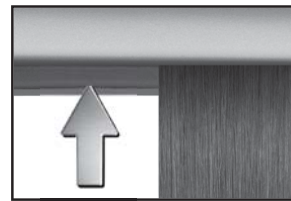

Your straightening iron includes a removable silicone deep shine attachment. This attachment will help to provide tension and guide your hair as you use the straightening iron. It also eliminates any gaps, creating silky, smooth strands with extra shine. To remove or attach the silicone strip, turn unit off and allow unit to cool. Hold unit firmly with one hand; with your other hand, slide silicone strip away from the iron to detach it. When attaching the silicone strip, align it with the slot on the side of the iron and slide silicone strip into position. Make sure the silicone strip securely locks into position.

 GET TO KNOW YOUR WET-DRY STRAIGHTENING IRON

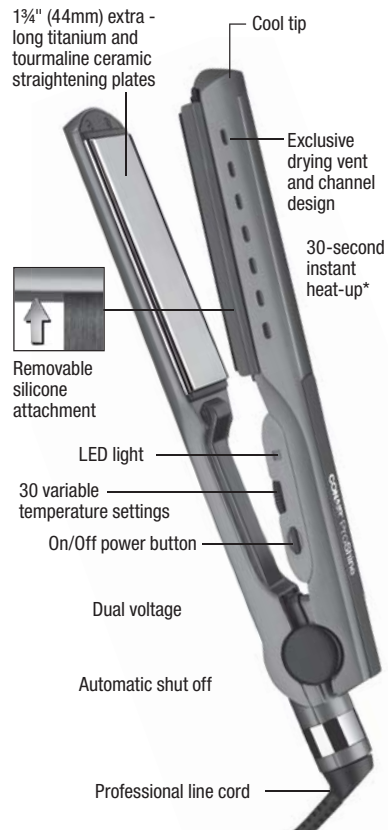

*Unit will not reach stabilized temperatures within 30 seconds

USER MAINTENANCE

Your straightening iron is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

 
NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply put back in the box and store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections.

WARNING:
IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG.

KEEP AWAY FROM WATER

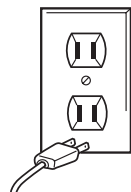

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

LIMITED TWO YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed, together with your purchase receipt and \$5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

ProShine
titanium & tourmaline ceramic



Instruction & Styling Guide

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.



SERVICE CENTER

CONAIR CORPORATION
Service Department
7475 N. Glen Harbor Blvd
Glendale, AZ 85307

©2009 CONAIR CORPORATION

08NP10406

IB-8884

CONAIR

Model CS66