



high velocity steam jet T-nozzle

CAUTION: Hose will be hot when in use. Avoid prolonged contact.

This steamer is designed to sit on the floor. Do not put on a table or chair when in use. **OTHER IMPORTANT NOTES** During operation, the steamer hose may collect condensation on the nozzle from the bottom of the fabric to allow the steam jets to reach away from you. Begin to flow back into the steamer. If you steam in a low position, condensation will collect inside the hose. This will form near the steam jets on the T-handle. To avoid this, frequently lift the nozzle from the garment and smooth the steam handle upward until the hose is extended to its full height. The gurgling are best steamed on the underside of the fabric with your free hand. Some fabrics will disappear when the excess moisture inside the hose has had a chance to drain back into the base.

HOW TO STEAM

Grasp the "T" handle steam nozzle with the steam jets facing away from you. Begin at the bottom of the fabric to allow the steam to rise inside and outside, removing wrinkles. Slowly move the nozzle from the bottom to the top of the fabric. Remove the nozzle from the garment and smooth the steam handle upward until the hose is extended to its full height. The gurgling are best steamed on the underside of the fabric with your free hand. Some fabrics will disappear when the excess moisture inside the hose has had a chance to drain back into the base.



using the over-the-door hook

Do not directly touch velvet or silk with the steam head.

Heavier fabrics may require repeated steaming. Repeat as necessary.

With practice, you will gain speed and efficiency. You will soon learn which fabrics require multiple steam applications.

NOTE: Test fabric for color fastness in an inconspicuous spot. Drape linens, towels, handkerchiefs and napkins over a rod or steam drapes when in place.

Wash and dry drapes as directed according to fabric type. Re-hang drapes and steam drapes when in place.

Always steam with hose in upright position, so any condensation is free to flow back into the steamer.

CLEANING AND STORING



ready for storage

1. Turn the ON/OFF switch to the OFF position, so any condensation is free to flow back into the steamer. If you steam in a low position, condensation will collect inside the hose. This will form near the steam jets on the T-handle. To avoid this, frequently lift the nozzle from the garment and smooth the steam handle upward until the hose is extended to its full height. The gurgling are best steamed on the underside of the fabric with your free hand. Some fabrics will disappear when the excess moisture inside the hose has had a chance to drain back into the base.

DECALCIFICATION

If the appliance begins to produce steam more slowly than usual, if the steamer stops producing steam and then starts again, you may need to decalcify your steamer. Decalcification refers to removing the calcium deposits which form over time on the metal parts of the steamer. For best performance from Conair Garment Steamer, decalcify the unit from time to time. The frequency depends upon the hardness of your tap water and how often you use the steamer.

To decalcify, use a solution of 1/3 white vinegar and 2/3 water in the water reservoir. Plug the unit into electrical outlet. Turn to the ON position and run until half the amount has steamed. Turn the unit to the OFF position, unplug from electrical outlet, and allow to sit for 30 minutes. Remove excess water from the reservoir by lifting the unit, inverting and pouring the water over sink, and allowing water to drain from internal reservoir. Repeat the cycle, use a fresh solution of vinegar and water. Run one cycle of fresh, cold water through the unit at the completion of decalcification, before using the unit again to steam garments.

RESOLUCIÓN DE PROBLEMAS

- PROBLEMA: El aparato no produce vapor
CAUSA: El aparato está apagado
SOLUCIÓN: Ponga el botón de Encendido/ Apagado en la posición "ON"
- PROBLEMA: El aparato no calienta
CAUSA: El aparato no esta enchufado
SOLUCIÓN: Enchufe el cable en una toma de corriente
- PROBLEMA: El aparato no produce vapor
CAUSA: El nivel de agua está bajo
SOLUCIÓN: Apague el aparato (OFF) y llene el tanque
- PROBLEMA: Gotas de agua caen de la boquilla
CAUSA: Condensación en la manguera
SOLUCIÓN: Mantenga la boquilla alta y recta para que el agua baje hacia el tanque
- PROBLEMA: La boquilla burbujea
CAUSA: Condensación en la manguera
SOLUCIÓN: Mantenga la boquilla alta y recta para que el agua baje hacia el tanque
- PROBLEMA: El aparato produce poco vapor
CAUSA: Depósitos de calcio
SOLUCIÓN: Limpie la cal presente en el tanque y en el depósito

Nota: Según el lugar donde vive, el agua local contendrá más o menos minerales. Para un funcionamiento óptimo, siempre limpie el aparato y vacíe el agua remanente en el tanque y en el depósito antes de almacenarlo.

TROUBLESHOOTING THE STEAMER

- PROBLEM - No steam
CAUSE - Steamer not turned on
SOLUTION - Turn ON/OFF switch to ON position
- PROBLEM - Steamer fails to heat
CAUSE - Steamer not plugged in
SOLUTION - Plug into electrical outlet
- PROBLEM - No steam
CAUSE - Water level is low
SOLUTION - Turn ON/OFF switch OFF and refill water container
- PROBLEM - Poor steam performance
CAUSE - Sediment in container
SOLUTION - Decalcify reservoir and apply to you.
- PROBLEM - No steam
CAUSE - Condensation in hose
SOLUTION - Hold the hose vertically and allow water to drain back into unit
- PROBLEM - Nozzle gurgles
CAUSE - Condensation in hose
SOLUTION - Hold the hose vertically and allow water to drain back into unit
- PROBLEM - Water drips from nozzle
CAUSE - Condensation in hose
SOLUTION - Hold the hose vertically and allow water to drain back into unit
- PROBLEM - Water drips from nozzle
CAUSE - Condensation in hose
SOLUTION - Turn ON/OFF switch OFF and refill water container
- PROBLEM - Water drips from nozzle
CAUSE - Condensation in hose
SOLUTION - Turn ON/OFF switch OFF and refill water container
- PROBLEM - Water drips from nozzle
CAUSE - Condensation in hose
SOLUTION - Turn ON/OFF switch OFF and refill water container



Listo para guardarlo

LIMITED ONE YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials. To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12 MONTH DURATION OF THIS WRITTEN WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, which vary from state to state.

Service Centers:
Conair Corporation
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

For information on any Conair products call: 1-800-3-CONAIR or visit us on the web at <http://www.conair.com>

©2006 Conair Corporation
East Windsor, NJ 08520, Glendale, AZ 85307

IB-5395D

Siempre mantenga la boquilla recta y alta. Esto permitirá que la condensación baje hacia el tanque.

Si mantiene la boquilla baja, la condensación se acumulará en la manguera. Esto causará gorgoteo y formará gotas en la boquilla, las cuales pueden mojar la ropa. Para evitar que esto ocurra mantenga la boquilla alta y la manguera extendida.

CÓMO DESARRUGAR CORTINAS

Lave y seque las cortinas según las instrucciones del fabricante. Cuelgue las cortinas y aplique vapor una vez que estén en su lugar.



Usar el gancho para colgar ropa en una puerta

LIMPIEZA Y MANTENIMIENTO

1. Apague (OFF) y desconecte el aparato.
2. Deje el aparato enfriar durante por lo menos 30 minutos.
3. Desconecte el cable en enróllelo alrededor de la base.
4. Vacíe el agua que quedó en el tanque.
5. Envuelva la manguera alrededor del aparato y regrese la boquilla en su soporte (tal como enseñado a continuación)

NOTA

Este aparato fue diseñado para permanecer en el piso. No lo ponga sobre una mesa o una silla mientras está funcionando.

OTRAS NOTAS IMPORTANTES

La manguera puede gorgotear durante el uso. Esto es un resultado normal de la condensación acumulada en la manguera. Para corregir, levante la boquilla hasta extender la manguera completamente. El gorgoteo desaparecerá cuando el agua haya bajado hasta el tanque.

PRECAUCIÓN: LA MANGUERA SE VOLVERÁ CALIENTE DURANTE EL USO. EVITE TOCARLA.



Boquilla con chorros de vapor de alta velocidad



COMPACT | FABRIC STEAMER

Convertible to use on DRAPEES & LINENS

Instructions for Use

Model GS4

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CENTROS DE SERVICIO:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520

Para información sobre cualquier producto de Conair, llame al 1-800-3-CONAIR o visite <http://www.conair.com>

©2006 Conair Corporation
East Windsor, NJ 08520, Glendale, AZ 85307

GARANTÍA LIMITADA POR UN AÑO

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 12 meses a partir de la fecha de compra si presenta defectos de mano de obra o en los materiales.

Para obtener servicio técnico bajo esta garantía, lleve o mande su aparato al Centro de Servicio más cercano, junto con su recibo de compra y un cheque de \$3,00US por gastos de envío y de manejo. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-366-0937 para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 12 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 12 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE EN NINGÚN CASO POR ALGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O DE CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted. Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.