

INSTRUCCIONES Y GUA DE PEINADO



DIGITALAIRE
INFINITI PRO™ BY CONAIR



This message about...

G ROUND
F AULT
C IRCUIT
I NTERRUPTERS

...can save a life!

IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI!

Your local electrician can help you decide which type is best for you – a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCIs in the bathrooms, garages, and outdoor outlets of all new homes.



WHY DO YOU NEED A GFCI? Electricity and water don't mix. If your hair dryer falls into water while it's plugged in, the electric shock can kill you...even if the switch is off. A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

A GFCI can save your life! Compared to that, the price is small! Don't wait...install one now!

*A GFCI is a sensitive device that reacts immediately to a small electric current leak by stopping the electricity flow.

USER MAINTENANCE

NEVER allow the power-supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short circuit. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.**

If the cord or dryer is damaged or does not operate properly, return it for repair to an authorized Conair Service Representative only. No repairs should be attempted by the consumer.

STORAGE – Important

When not in use, your dryer should be disconnected, allowed to cool, and stored in a safe, dry location, out of reach of children. Do not wrap line cord around dryer. Allow the cord to hang or lie loose and straight at the point of entry into the dryer.

Blocked or clogged air intake vents will cause the dryer to overheat. If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat turns off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

CAUTION

Product must be cleaned with a soft cloth.

CANADA SOLAMENTE

ANS (VALIDA EN LOS EE. UU. Y EN CANADA) LIMITADA DE CUBATRO

INDICADORES LED

MANTENIMIENTO

PRECAUCIÓN

NOTA

DE FALTA DE CORTACIRCUITO DE GCFI

LED INDICATORS

PRECAUCIÓN

NOTA

DE FALTA DE CORTACIRCUITO DE GCFI

LIMITED FOUR-YEAR WARRANTY (U.S. AND CANADA ONLY)

NOTA

DE FALTA DE CORTACIRCUITO DE GCFI

NOTA

DE FALTA DE CORTACIRCUITO DE GCFI

DE FALTA DE CORTACIRCUITO DE GCFI</