



Instruction Booklet For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.

CONAIRMAN Respect the Ritual™ Model HC7000

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, take basic safety precautions, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER FOR HOUSEHOLD USE ONLY

DANGER — Any appliance is electrically live, even when the switch is off. To reduce the risk of death or injury by electric shock:

- 1. Unplug this appliance before cleaning.
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not use while bathing or in the shower.
4. Do not place in, or drop into, water or other liquids.
5. Do not reach for an appliance that has fallen into water. Unplug immediately.
6. Except when charging, always unplug this appliance from electrical outlet immediately after using.

WARNING — To reduce the risk of burns, electric shock, fire, or injury to persons:

- 1. Except when charging, this appliance should never be left unattended when plugged in.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities...
3. Use this appliance only for its intended purpose as described in this manual.
4. Never operate this appliance if it has a damaged cord or plug...
6. Never drop or insert any object into any opening on this appliance.

- 9. Do not use outdoors or operate where aerosol (spray) products are being used...
10. Never operate the appliance with the air openings blocked...
11. Always attach plug to appliance first...
12. Avoid skin coming into contact with moving blade.
13. When using the appliance with its cord...
14. Do not short the polarity (output cord)...

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS USER MANUAL

Standards: FCC Part 15 Subpart B, ANSI C63.4-2014
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference...
DATE OF ISSUE: March 3, 2021

INSTRUCTIONS FOR USE CHARGING THE APPLIANCE IMPORTANT


To charge the clipper, first ensure the clipper is switched off...
Always unplug the unit before cleaning or when not in use.
This power unit is intended to be correctly oriented in a vertical or floor-mount position.
Be sure voltage is correct before plugging in.
Attach combs by holding them teeth up, then snapping onto the bottom of the clipper blade.

OILING INSTRUCTIONS IMPORTANT!

To oil the blades, ensure that the unit is switched on. Gently squeeze the oil tube and apply 2 drops of oil to the blades (see FIG. 1, 2, and 3).
Leave the unit on for a few seconds to allow the oil to thoroughly spread the length of the blades.
Be careful not to use too much oil and don't oil your clipper more than necessary.

PROSERVING THE BATTERIES


In order to maintain the optimum capacity of the rechargeable batteries, the appliance has to be fully discharged approximately every 6 months. Then recharge the appliance to full capacity, again for 3 hours.
The CONAIR GUIDE TO CUTTING HAIR AT HOME
Before you start:
1. Inspect your clipper. Make sure it's free of hair and dirt, properly oiled and running smoothly.

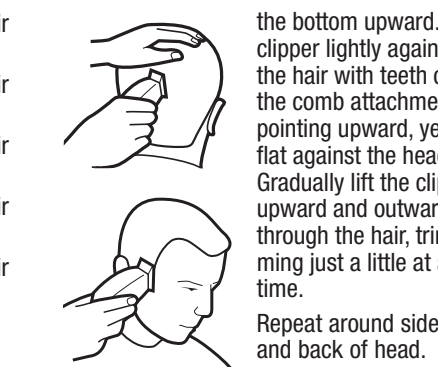

Remember, it's better to leave too much hair than too little. For longer hair on top, use the barber comb and lift hair on the top of the head, cutting over the comb.

For a flattop, use the flat comb, not the comb attachment. Cut hair on top of the head over flat comb.
The Fade: A fade is a transition in hair length from thin to full that appears around the sides and back of the head.
The Taper: A taper (or tape-up) is like a fade, but it sits lower on the head.

HAIRCUT KIT REPLACEMENT PARTS & ACCESSORIES ORDER FORM OR PURCHASE ON THE WEB AT WWW.CONAIR.COM
Pricing in effect through December 31, 2025. Orders postmarked after this date will be accepted, and the customer will be notified if pricing has changed.

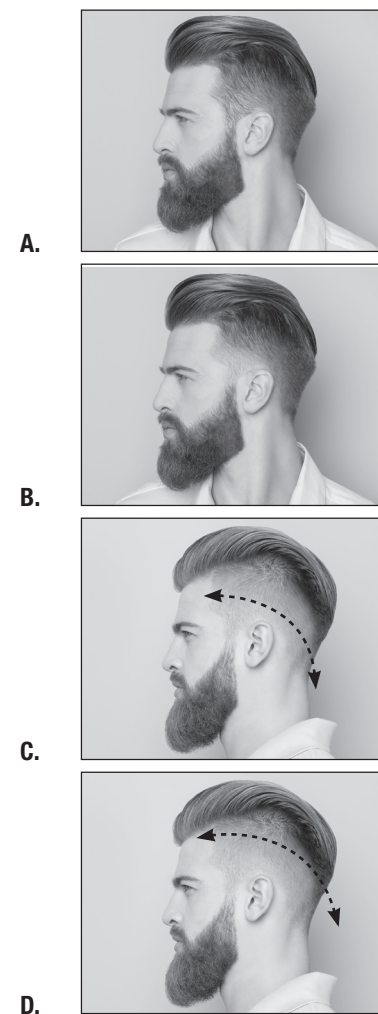


If you are unsure, go with a #6 and use the C-scoop or crescent-shape motion. The taper is considered a more conservative look, for men in the corporate workplace.
Low, Mid or High Fade: Where you stop fading is up to you. You can create a low, mid or high fade.
Technique: Start at the bottom of the hairline and use short, upward strokes, trimming as evenly as possible across the back hairline and around to each side, over the ears and sideburns.

Start with quarter-inch to half-inch strokes, using a gentle scrubbing motion, working square to the head surface at this point. Then, switch to the next-longer guide comb and trim around the hairline again, blending in with your first trim layer.
To prevent the clipper from contacting the skin or cutting too closely, make certain that the end top blade teeth are 1/32" to 1/16" back from bottom blade.

USER MAINTENANCE INSTRUCTIONS CARE OF YOUR CLIPPER

IF YOU DETERMINE THAT BLADE ALIGNMENT IS INCORRECT: CONAIRMAN® hair clippers are carefully inspected to ensure that the blades are in perfect alignment.
ADJUSTABLE TAPER LEVER: Just like on professional clippers, the CONAIRMAN® taper lever is positioned at your thumb.
To Align Blades: 1. Unplug clipper and slightly loosen screws.

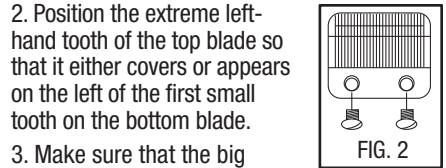

Position the extreme left-hand tooth of the top blade so that it either covers or appears on the left of the first small tooth on the bottom blade.
Make sure that the big tooth on the bottom blade touches the extreme right-hand tooth of the top blade.

BATTERY DISPOSAL: This appliance contains a lithium-ion battery. To protect the environment, this appliance and its battery must be disposed of safely.
WARNING: Never pull on the clipper cord. Never twist or wrap the cord around the clipper.
STORAGE: When not in use, your clipper should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children.



WARNING: IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF, YOU'RE WRONG. KEEP AWAY FROM WATER

LIMITED FIVE-YEAR WARRANTY (U.S. AND CANADA ONLY)
Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.
To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt.
ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.



stock.image
Please register this product at www.conair.com/registration
©2021 Conair LLC
Service Center
Conair LLC
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307
21PG078304

Table with columns: ITEM, PART #, PRICE, QUANTITY, AMOUNT. Includes subtotal, sales tax, and total.

Enclose check or money order made payable to Conair. (We cannot accept cash, stamps or C.O.D. orders.)
All prices include handling and return postage. Prices are subject to change without notice.
To avoid delays, please print clearly. We must have a street address, as UPS cannot deliver to a P.O. Box.
For information on other Conair® haircut kit parts, call 1-800-3-CONAIR.

