



**Instruction Booklet**  
For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.

**CONAIRMAN®**  
Respect the Ritual™  
Model HC6000

Remember, it's better to leave too much hair than too little. For longer hair on top, use the barber comb and lift hair on the top of the head, cutting over the comb. Or hold the hair between the fingers and cut to desired length. Always working from the front to the back of the head, gradually cut the hair shorter by reducing the space between the comb or fingers and the head. Comb often to check for uneven strands, and to get rid of trimmed hair.

#### OUTLINING

Outlining requires no attachments. Comb hair into the desired style. Position the clipper between the sideburns and the ear (see illustration), making sure the corner edge of the blade is against the hairline. With the outline of the hair as your guide, slowly move the clipper over, around and behind the ears. For the back of the neck and the sideburns, hold the clipper upside down (see illustration) and, holding it against the skin at the length desired, move the clipper downward.



#### STOP. COMB. CHECK.

 
For best results, do as the professionals do: Comb hair often, and check clipping results as you comb. This way you avoid uneven sides, bangs, neckline, etc.

#### SHORT CUTS TO PERFECT FLATTOPS, CREW CUTS, ETC.

Always cut from the back of the neck to the crown, using the longest comb setting. Hold the comb attachment flat against the head and slowly move the clipper up through the hair. Use the same technique for the sides, cutting from the bottom to the upper side of the head.

For the front to the crown, cut the hair against the direction in which it grows. Then even it up with the sides.

For a flattop, use the flat comb, not the comb attachment. Just cut hair on top of the head over flat comb (see illustration).






#### FADE OR TAPER

Fades and tapers can vary according to ethnic and regional preferences. Except among the most highly trained professionals, the two terms are often used interchangeably. The techniques to create them are quite similar.

**The Fade:** A fade is a transition in hair length from thin to full that appears around the sides and back of the head. You can have a low, mid or high fade, depending on your preference. Start by choosing your fade line. This is the point where the fade begins, where the hair is shortest. Select the first guide comb and be conservative to start. Choosing a #1 attachment comb will trim very close to the skin, whereas using no attachment comb will leave the skin bald. Therefore, we suggest starting with a #3 or #4 for your first attempt. You can always go shorter later, but you'll have to wait for weeks for hair to grow back if you cut too short at the start.

**The Taper:** A taper (or tape-up) is like a fade, but it sits lower on the head, closer to the ears and low on the nape of the neck. (see image A). It is usually done on the temple and sideburn areas, proceeding low above the ear, and around to the back of the head, but it can continue around the perimeter of the head if so desired (see image B). Choose longer guide combs for a taper than you would for a fade—#4 or #5 is a good start. If you are unsure, go with a #6 and use the C-scoop or crescent-shape motion. The taper is considered a more conservative look, for men in the corporate workplace. It is layered much like a fade, and the technique to create it is much the same with minor differences.

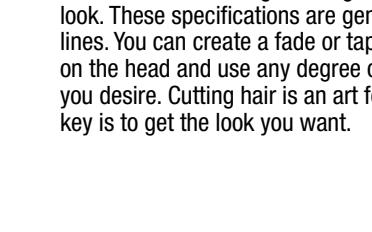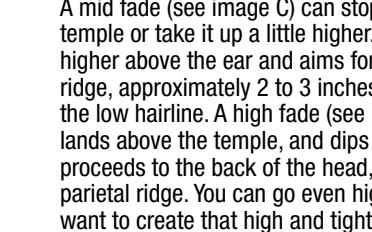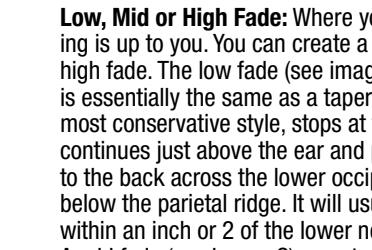

the blades as injury may occur. Before use, make certain blades are aligned properly. 9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered. 10. Never operate the appliance with the air openings blocked or while on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris. 11. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet. 12. This appliance is not a toy. Keep away from children.

**MEDIUM TO LONG CUT**  
To begin, cut only a small amount of hair until you become used to the length each attachment leaves the hair. Try the longest attachment on the clipper first. If you want a shorter cut, you can then use shorter combs.  
**OILING THE BLADES (OIL INCLUDED)**  
1. Oil the clipper blades once a month  
2. Turn the clipper ON  
3. Hold and point the blades downward  
4. Spread one drop of oil across the blades  
5. Turn the clipper OFF and wipe away any excess oil

#### KEEP OIL AWAY FROM CHILDREN.

#### THE CONAIR GUIDE TO CUTTING HAIR AT HOME

##### Before you start:

1. Inspect your clipper. Make sure it's free of hair and dirt, properly oiled and running smoothly.

2. Place the barber cape or a towel around the neck of the person whose hair is to be cut.

 
3. Seat the person so that his or her head is at eye level. This gives you greater visibility and control.

4. First, comb hair until it's tangle free. Then hold clipper in a comfortable grip. Now you're ready to cut.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in the outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Your new CONAIRMAN® haircut kit has everything you need to achieve professional haircuts at home. It features a high performance, metal series clipper with adjustable taper control. Engineered with Japanese stainless steel blades, considered one of the best brands of steel and renowned for its strength and the ability to hold the sharpest edge. Also included are 8 comb attachments for different hair lengths, barber scissors, a storage pouch, cleaning brush, lubricating oil and a blade guard.

Attach combs by holding them teeth up, then snapping onto the bottom of the clipper blade.



To remove comb attachments, place index finger and thumb as illustrated; then pull out and up.

- IF YOU DETERMINE THAT BLADE ALIGNMENT IS INCORRECT:**  
CONAIRMAN® hair clippers are carefully inspected to ensure that the blades are in perfect alignment. Of course, you will need to realign the blades after removal for cleaning or replacement, or if they should be knocked out of alignment. How can you tell if blades need realigning? Simply match them up, point for point, to conform with FIG. 1 below:



**NOTE:** Never push or shave the clipper through the hair to make it move more quickly. Professional experience shows that the clipper works most efficiently when it cuts through the hair at its own speed.

Because a different cutting edge is used in each setting, the taper lever lengthens the life of your blades.

Packed-in hair can slow down any clipper. To remove hair without removing the blades, do what the professionals do: Keeping the clipper on, quickly push the taper lever back and forth from "close" to "longer" cut a few times.

If you do this after every clipping, especially with heavy hair cutting, the blades should remain free of cut hair.

**To Align Blades:**  
1. Unplug clipper and slightly loosen screws. (See FIG. 2)  
2. Position the extreme left-hand tooth of the top blade so that it either covers or appears on the left of the first small tooth on the bottom blade.

 


FIG. 2

**ADJUSTABLE TAPER LEVER**  
Just like professional clippers, the CONAIRMAN® taper lever is positioned at your thumb. You can hold the clipper in your hand and adjust the lever at the same time... while you're clipping.

**STORAGE:** When not in use, your clipper should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. Any other servicing should be performed by an authorized service representative. This appliance has no user-serviceable parts. This appliance is for household use.

**To begin cutting hair:**  
1. The hair should be combed in its natural direction.

2. Using the longest comb attachment, trim sides from the bottom upward. Hold clipper lightly against the hair with teeth of the comb attachment pointing upward, yet flat against the head. Gradually lift the clipper upward and outward through the hair, trimming just a little at a time.

Repeat around sides and back of head.

If you want hair to be even shorter:

A) Apply more pressure to the head with the comb attachment that is in place. This takes a little practice, of course.

OR

B) Just switch to a shorter comb attachment.

#### LIMITED FIVE-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

#### ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60-MONTH DURATION OF THIS WRITTEN LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

#### IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

Please register this product at [www.conair.com/registration](http://www.conair.com/registration)

©2020 Conair Corporation Service Center

Conair Corporation Service Department

7475 North Glen Harbor Blvd.

Glendale, AZ 85307

20PG072544

NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_

CITY \_\_\_\_\_ STATE \_\_\_\_\_ ZIP \_\_\_\_\_

TELEPHONE ( ) \_\_\_\_\_

(We call only if we have a question about your order.)

For information on other Conair® haircut kit parts call: 1-800-3-CONAIR.

Subtotal \_\_\_\_\_

Sales Tax\* \_\_\_\_\_

TOTAL \_\_\_\_\_

Enclose check or money order made payable to Conair. (We cannot accept cash, stamps or C.O.D. orders.) CT, IL, AZ, and PA residents should add applicable state sales tax. Minimum order of \$10.00 or a \$2.00 handling charge will be added to order.

All prices include handling and return postage. Prices are subject to change without notice. Prices are valid only for shipments within the continental United States. Please allow 4-6 weeks for delivery.

To avoid delays, please print clearly.

We must have a street address, as UPS cannot deliver to a P.O. Box.

NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_

CITY \_\_\_\_\_ STATE \_\_\_\_\_ ZIP \_\_\_\_\_

TELEPHONE ( ) \_\_\_\_\_

(We call only if we have a question about your order.)

#### HAIRCUT KIT REPLACEMENT PARTS & ACCESSORIES ORDER FORM OR PURCHASE ON THE WEB AT [WWW.CONAIR.COM](http://WWW.CONAIR.COM)

**Order Form**

**Part #**

 
**Price**

**Quantity**

**Amount**



Model HC6000-1



Model HC6000-3



Model HC6000-4



Model HC6000-BLD



Model SC-1



Model HC OIL



Model HC-1

Stainless steel, self-sharpening blades

Locking taper control

High-torque, professional DC motor

ON/OFF switch

Smooth metal handle

6 ft. corded clipper

Conair

Part #

HC6000-BLD

\$6.50

\$5.00

\$5.00

\$2.00

\$1.00

\$2.00

\$1.00

Subtotal \_\_\_\_\_

Sales Tax\* \_\_\_\_\_

TOTAL \_\_\_\_\_

Enclose check or money order made payable to Conair. (We cannot accept cash, stamps or C.O.D. orders.) CT, IL, AZ, and PA residents should add applicable state sales tax. Minimum order of \$10.00 or a \$2.00 handling charge will be added to order.

All prices include handling and return postage. Prices are subject to change without notice. Prices are valid only for shipments within the continental United States. Please allow 4-6 weeks for delivery.

To avoid delays, please print clearly.

We must have a street address, as UPS cannot deliver to a P.O. Box.

NAME \_\_\_\_\_

ADDRESS \_\_\_\_\_

CITY \_\_\_\_\_ STATE \_\_\_\_\_ ZIP \_\_\_\_\_

TELEPHONE ( ) \_\_\_\_\_

(We call only if we have a question about your order.)

For information on other Conair® haircut kit parts call: 1-800-3-CONAIR.

#### USER MAINTENANCE INSTRUCTIONS CARE OF YOUR CLIPPER

**To Align Blades:**

1. Unplug clipper and slightly loosen screws. (See FIG. 2)

2. Position the extreme left-hand tooth of the top blade so that it either covers or appears on the left of the first small tooth on the bottom blade.

This taper lever eliminates the need in some situations for a comb attachment because it lets you gradually adjust the closeness of the cut. For the closest cut and the shortest hair, push taper lever up as far as it will go, to level #

