

*Congratulations on the purchase of your new Satiny Smooth® Total Body Epilator. For maximum information about the advantages of this appliance, and tips for successful depilation (scrubbing and hair removal from every part of your body), please take a minute to read the following operating and care instructions. Thank you for choosing Conair, the #1 brand in Personal Care Appliances.*

## IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, especially when children are present, basic safety precautions should always be taken, including the following:

## READ ALL INSTRUCTIONS BEFORE USING FOR HOUSEHOLD USE ONLY KEEP AWAY FROM WATER

**DANGER** – Any appliance is electrically live, even when the switch is off. To reduce the risk of death or injury by electric shock:

1. If you are using the appliance in a bathroom, unplug it after you have finished using it. Using the appliance close to a source of water can, in fact, be dangerous, even if the unit is switched off.

### COSMETIC/FACIAL EPILATION

NOTE: Facial epilaton is for upper lip and chin ONLY.

1. For optimum results, attach the sensitive-area attachment.
2. To ensure comfort, set the unit to the low speed.
3. Hold the skin taut.

### TIPS FOR BEST RESULTS

1. For first-time epilator users, we recommend epilating the skin in the evening to allow time for redness to disappear.
2. To prepare skin for epilaton, we recommend taking a warm bath or shower to clean the skin. Ensure that it is completely dry before using the epilator.
3. Following epilaton, it is recommended that moisture creams be applied to relax the skin.
4. Hair removal of any kind may result in ingrown hairs. We recommend regular exfoliation of skin to prevent ingrown hairs.
5. To avoid infection, we recommended regular cleaning of the epilaton head.

### IMPORTANT

Do not use on open sores, burns, warts, beauty spots, sunburned skin or varicose veins. Do not use if you have a skin irritation or infection, like psoriasis or eczema, on your legs. Do not use for shaving or removing hair from your face (with the exception of upper lip and chin), head, chest, eyebrows, eyelashes, or genitals. The Satiny Smooth® Total Body Epilator is intended exclusively for use on legs, arms, underarms, and bikini line.

2. Never immerse the appliance in water or any other liquids.
3. Do not use while bathing or in the shower.
4. Do not place or store appliance where it can fall or be pulled into a tub or sink.
5. Always unplug the appliance after each use and before cleaning it.

## WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

1. This appliance should not be used by, on, or near children or individuals with certain disabilities.
2. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Use only the adapter provided to operate or charge the unit.
4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged. Return the appliance to a service center for examination and repair.**
5. Keep cord away from heated surfaces.
6. Never drop or insert any object into any opening.
7. Do not use if unit has fallen in water.
8. Do not leave the appliance unattended when it is plugged in or switched on.
9. Do not leave the appliance plugged into the outlet for longer than 24 hours.
10. Unplug the appliance immediately if you have problems when using it.

### MAINTENANCE

NOTE: For long-lasting performance, we recommend you regularly disinfect the epilaton head and attachments.

### CLEANING

1. Check to make sure the epilator is in the OFF position and the adapter is removed from the outlet.
2. Press the epilaton attachment release button, removing the attachment.
3. After the attachment is removed, press the epilaton release button once again, gently pulling the epilaton head out of the unit.
4. Once the epilaton head is removed from the unit, submerge ONLY the head under water to clean it.
5. Dry completely before replacing the head back onto the unit.
6. Do not use a dryer or heater to dry the epilator. This may result in a malfunction or damage to the epilator.
7. To remove additional debris from the epilaton head, gently wipe with alcohol. Using a cotton swab, place a small amount of alcohol on the swab and gently dab the epilaton head until debris is removed.

**NOTE: The body of the epilator is NOT to be washed.**

11. To prevent damage to the cord, do not wrap it around the appliance. Ensure that it is stored without twisting and folding the cord.
12. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to OFF position before removing plug from outlet.
13. This appliance is not a toy. Keep away from children.

Voltage: This appliance comes with an adapter that can be used on an alternating current (100-240V AC).

### USER MANUAL

Before using the Class 2 power supply, read these instructions carefully.

**Use with adapter:** CA51  
**Rated input voltage:** 100-240V, 50/60Hz, 0.2 Amax  
**Rated output:** 6.0VDC, 70mA

### OPERATION

1. For dry location use only. Do not expose to water.
2. When not in use or charging, unplug unit completely.
3. Unit will become warm during use.

### CAUTION

1. Dry location use only. Do not expose to liquids, vapor or rain.
2. Do not short the polarity (output cord). Ensure jack is plugged into the epilator unit before plugging the adapter into the outlet.
3. Always unplug the unit before cleaning or when not in use or charging.
4. Be sure voltage is correct before plugging in.

### STORAGE

When not in use, your epilator should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children.

Any other servicing should be performed by an authorized service representative. This appliance has no user-serviceable parts. This product is for household use.

**CONTAINS NICKEL METAL HYDRIDE BATTERIES. MUST BE COLLECTED, RECYCLED OR DISPOSED OF PROPERLY. DO NOT DISPOSE OF IN THE MUNICIPAL WASTE.**

**NOTE:** Never twist or wrap the cord around the unit. Lay it flat with the cord coiled up when not in use.

**NOTE:** The batteries are recyclable. At the end of their useful life, under various state and local laws, it may be illegal to dispose of these batteries into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. The socket outlet should be installed near the equipment and should be easily accessible.
4. Consult the dealer or an experienced radio/TV technician for help.

## SAVE THESE INSTRUCTIONS



1. Full-size epilaton head  
Two speed settings  
Charging indicator light
2. Sensitive skin attachment

## OPERATING INSTRUCTIONS

### CHARGING THE EPILATOR

1. Insert plug into appliance and connect the adapter. Before using the epilator for the first time, allow it to charge for 16 hours. Make sure the epilator switch is in the OFF position.
2. Check that the charging indicator light is on.
3. A full charge provides a minimum of 60 minutes use of the trimmer.
4. Subsequent charges should be 16 hours.

### LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$7.50 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.** Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

### IMPORTANT INFORMATION REGARDING THE NI-MH BATTERIES OF THIS UNIT

To obtain and maintain the longest battery life possible, allow it to charge for 16 hours approximately every three months. Full battery life of the unit will only be obtained after three-complete recharge cycles.

## WARNING

1. Women whose skin is sensitive to cosmetics or easily irritated by shaving, or who suffer from a skin allergy, should test one section of the leg or arm before using the epilator.
2. **The epilaton head is a precisely finished piece. Do not press hard against the epilaton head. A warped or distorted epilaton head will produce poor depilation results. Also, a damaged epilaton head may cause skin injury. A damaged epilaton head should be replaced immediately.**
3. When cleaning, use cold or warm water. Do not use hot water, seawater, or cleaners, as they can cause damage to the waterproof seals.
4. To prevent damage to the epilaton head, women who use underarm deodorant must thoroughly clean and air-dry the epilaton head after use. Failure to do this may result in corrosion.
5. Keep out of reach of children.

The Satiny Smooth® by Conair Total Body Epilator gives you complete epilaton for long-lasting results. It has two interchangeable attachments that are specially designed to work quickly and leave you perfectly groomed all over.

### USING THE EPILATOR

If you are new to epilaton or have not used an epilator in a long time, it may take a short while for your skin to adapt to epilaton. Initial discomfort felt will decrease over time. While using the Satiny Smooth® Total Body Epilator, you may find that quantity and density of hair growth lessen.

The Satiny Smooth® Total Body Epilator is designed for efficient and comfortable removal of unwanted hair. The ergonomic design is specially designed for precise epilaton of all parts of the body, even the least accessible. Our ultra-precision tweezers capture even the finest hair (optimal length 0.5 cm). The hair that grows back should be both thinner and softer. Epilating will leave your skin satiny smooth for several weeks.

### EPILATION

NOTE: Using an epilator may cause reddening or irritation of the skin. This is a normal reaction that will disappear shortly. If the irritation does not disappear within a few days, you should consult your doctor.

1. Be sure the unit is plugged in.
2. **Make sure your skin is clean, dry, and free of any creams, greases or oils.**
3. Choose your desired speed: Low speed for sensitive areas and high speed for your legs and arms.
4. With your free hand, hold the skin tight to ensure that the hairs stand up straight.
5. Place the Satiny Smooth® Total Body Epilator flat against the skin, with the epilaton head forming a 90° angle to the skin.

6. **With a slow continuous movement, pass the unit in the direction of hair growth across the skin.** If results are not optimal passing the unit in the direction of the hair growth, small circular movements along the skin will also produce desired results.
7. Repeat process over desired areas until unwanted hair is removed.
8. Once complete, turn off the epilator and remove the adapter if corded.

### SENSITIVE AREA ATTACHMENT

For hair removal on your most sensitive areas, remove the full-size epilaton attachment and replace it with the sensitive-area attachment as follows.

1. Ensure that the Satiny Smooth® Total Body Epilator is turned off.
2. Press the epilaton attachment release button located on the side of the unit.
3. Remove the full-size epilaton attachment.
4. Position the sensitive-area attachment in the correct location covering the top of the unit.
5. Press gently until the attachment clicks into position.

### LEG/FULL ARM EPILATION

1. Using the full-size epilaton attachment, begin epilaton at the lower leg/arm and move upward.
2. For optimal results behind the knee/elbow, keep the leg/arm out straight, so that the skin is taut.

### UNDERARM/BIKINI AREA EPILATION

NOTE: The underarm and bikini area are especially sensitive to epilaton. Sensitivity reduces over time.

1. For optimum results, attach the sensitive-area attachment and have the hair at 0.5 cm in length.
2. To ensure comfort, set the unit to the low speed.
3. Hold the skin stretched. For your underarm, raising the arm can create stretched skin. To remove hair, move the epilator in an upward motion and then a downward motion.
4. To remove hair from your bikini line, carefully stretch your skin and move the epilator from the outside in.

SATINY SMOOTH®  
TOTAL BODY EPILATOR

Please register this product at  
[www.conair.com/registration](http://www.conair.com/registration)

**Service Center**  
Conair Corporation  
Service Department  
7475 North Glen Harbor Blvd.  
Glendale, AZ 85307

©2018 Conair Corporation  
150 Milford Road, East Windsor, NJ 08520  
7475 North Glen Harbor Blvd., Glendale, AZ 85307

18PG053674

IB-15690

MODEL E20

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.