



This message about...

GROUND
FAULT
CIRCUIT
INTERRUPTERS

...can save a life!

IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI* NOW!

Your local electrician can help you decide which type is best for you – a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCIs in the bathrooms, garages, and outdoor outlets of all new homes.

WHY DO YOU NEED A GFCI? Electricity and water don't mix. If your hair dryer falls in water while it's plugged in, the electric shock can kill you... **even if the switch is off.** A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.



A GFCI can save your life! Compared to that, the price is small! Don't wait... install one now!

*A GFCI is a sensitive device that reacts immediately to a small electric current leak by stopping the electricity flow.

USER MAINTENANCE

Your dryer is virtually maintenance free. No lubrication is needed. For proper operating performance, the dryer must be kept clean.

When cleaning is needed, unplug the cord, allow to cool and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a cloth only.

Blocked or clogged air intake vents will cause the dryer to overheat. If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat turns off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short circuit. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.** If the cord or dryer is damaged or does not operate properly, return it for repair to an authorized Conair service representative only. No repairs should be attempted by the consumer.

STORAGE — Important

When not in use, your dryer should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. **Do not wrap line cord around dryer.**

LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Please register this product at www.conair.com/registration

SERVICE CENTER

CONAIR CORPORATION
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2020 CONAIR CORPORATION

For info on any Conair product, call 1-800-3-CONAIR or visit us on the web at www.conair.com

20PD074703

IB-16944



SMOOTHWRAP™

Smooth. Balanced. Healthy Looking.
A New Drying Experience.

Instructions and Styling Guide

Model 910

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER — Any hair dryer is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. ALWAYS UNPLUG APPLIANCE IMMEDIATELY AFTER USING.
 2. Do not use while bathing or in the shower.
 3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
 4. Do not place in, or drop into water or other liquids.
 5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**
- WARNING** — To reduce the risk of burns, electrocution, fire, or injury to persons:
1. This appliance should never be left unattended when plugged in.
 2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
 3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to a Conair Service Center for examination and repair.
5. Keep the cord away from heated surfaces. Do not pull, twist, or wrap line cord around dryer, even during storage.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord to operate dryer.
11. Do not direct hot air toward eyes or other heat-sensitive areas.
12. Attachments may be hot during use. Allow them to cool before handling.
13. Do not place appliance on any surface while it is operating.
14. While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.
15. Do not use with a voltage converter.
16. This appliance is not a toy. Keep away from children.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This appliance is intended for household use only. Use on Alternating Current (60 hertz) only. Standard dryers are designed to operate at 110 to 125 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

IMPORTANT 1875 WATT OPERATING GUIDE

Use of this dryer on the same circuit or fuse with other electrical products or appliances may trip a 15 amp circuit breaker or blow a 15 amp fuse. **NEVER replace the fuse with one rated higher than the capacity of the circuit. Doing so could result in an electrical fire.**

CHECK ALCI SAFETY FEATURE EVERY TIME YOU USE APPLIANCE.

This appliance is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under some abnormal conditions, such as immersion in water. To make sure the ALCI is functioning properly, perform the following test. The purpose of this test is to allow you to make sure the water sensing system (ALCI) is working.

1. Plug in the appliance and press test button on plug.
2. The appliance will stop working. There will be an audible click and reset button will pop out. This indicates the ALCI is functioning properly.
3. To reset ALCI, unit should be unplugged. Then push reset button in and reinsert plug into outlet.



4. If ALCI is not functioning properly, return appliance to nearest service center.
5. It is important that if immersion occurs, this unit be brought to a service center. Do not try to reset.
6. Be sure to repeat test every time you use the unit to confirm ALCI is operational. Should the appliance go off and the reset button pop up during use, it could indicate a malfunction in the unit. Remove plug from outlet and allow the appliance to cool. Make sure air intake openings are clean. Reinsert plug into outlet.

The appliance should then function normally. If not, return it to an authorized Conair Service Center for evaluation and repair.

SUPER STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

DRYING BASICS

1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel-dry hair to remove excess moisture. Using the dryer along with your styling brush, start at a lower setting and direct hot air through a section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct airflow at hair, not scalp. Clouds of negatively charged ions will help to reduce static electricity, control frizzy flyaways and contribute to your hair's shine.
2. Keep dryer's air intake vents unobstructed and free from hair while drying.
3. To avoid over-drying, do not concentrate heat on any one section for any length of time. Keep dryer moving as you style.
4. For quick touch-ups between shampoos, dampen hair with a mist of water before styling with the dryer.
5. When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting with the snap-on diffuser attachment, then finish styling with cool shot feature to close hair shaft and lock in style.
6. Use snap-on/snap-off concentrator for more direct airflow and pinpoint styling.

BODY & VOLUME

To create extra volume, turn head upside down while drying. Position the airflow toward the roots for maximum lift. When hair is dry, toss head back and brush hair into place.



STRAIGHTENING

Work with hair in sections when creating a super-straight look. Use a large round brush (approximately 2" in diameter), to smooth out as you dry.

 
 


MAKING WAVES

Tousled, natural-looking waves are easily created by grasping hair at the roots and scrunching between fingertips while drying. For curlier, wavier hair, use the diffuser attachment.



GETTING TO KNOW YOUR DRYER

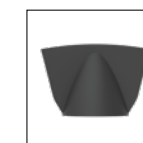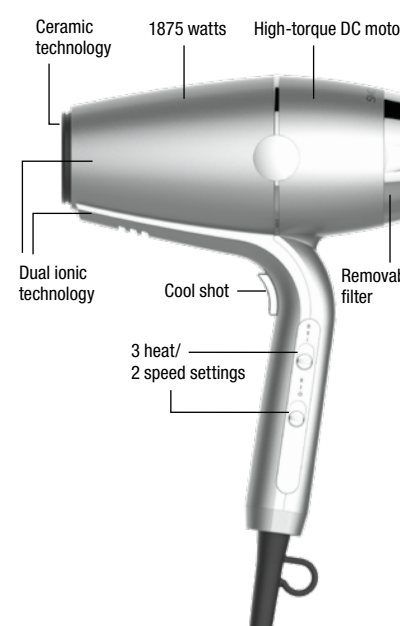

Concentrator



Diffuser



DUAL IONIC TECHNOLOGY uses positive and negative conditioning ions to create the perfect balance for your hair, reducing frizz and maintaining body. The SmoothWrap™

maximizes the absorption of the conditioning ions to leave your hair feeling moisturized and conditioned.

POWERFUL HIGH-TORQUE MOTOR increases the velocity at which air moves through the dryer and into your hair, helping you dry and style your hair faster.

CERAMIC TECHNOLOGY is full spectrum, infrared heat that works on hair molecules to dry them inside and out. This fast and easy drying process helps minimize heat damage and makes hair less frizzy and more manageable.

select your setting	
speed/temp.	hair type
low(I)/cool(I)	delicate, thin, or easy-to-style hair
low(II)/warm(II)	average to thick or treated hair
high(III)/hot(III)	thick, coarse or hard-to-style hair
cool shot	sets style in place for all hair types



Este mensaje sobre los...

GROUND FAULT CIRCUIT INTERRUPTERS

(Interruptores de circuito

de falla a tierra)

...puede salvar una vida.

 
¡SI DEBE USAR EL SECADOR EN EL CUARTO DE BAÑO, INSTALE UN INTERRUPTOR DE CIRCUITO DE FALLA A TIERRA* AHORA!

Su electricista le puede ayudar a decidir cuál sistema escoger – un sistema removible que se conecta a la toma de corriente o un sistema permanente que él instalará. El Código Nacional de Electricidad ahora exige que todos los enchufes ubicados en los cuartos de baño, los garajes y las partes exteriores de las casas nuevas sean equipados con un interruptor de circuito de falla a tierra (GFCI, por sus siglas en inglés).



¿POR QUÉ NECESITA UN INTERRUPTOR DE CIRCUITO DE FALLA A TIERRA? La electricidad y el agua no deben juntarse. Si el aparato se cae al agua mientras está conectado, una descarga eléctrica puede causar su muerte... **aunque el interruptor esté en la posición de apagado.** Un fusible o un disyuntor/interruptor de circuito regular no le protegerán en esta situación. Un interruptor de circuito de falla a tierra ofrece más protección.

¿Un interruptor de circuito de falla a tierra puede salvar su vida! ¡Comparado con ella, el precio es bajo! ¡No espere...instale uno ahora mismo!

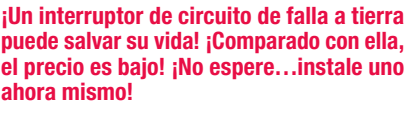

*Un interruptor de circuito de falla a tierra (GFCI, por sus siglas en inglés) es un dispositivo sensible que reacciona inmediatamente a una pequeña pérdida de corriente, deteniendo el flujo de electricidad.



- se este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Solo use accesorios recomendados por el fabricante.
- No use este aparato si el cable o el enchufe están dañados, si no funciona correctamente, si está dañado, o después de que se haya caído, incluso en el agua; devuélvalo a un centro de servicio autorizado para su revisión y reparación.**
- Mantenga el cable alejado de superficies calientes. **No jale, retuerza ni enrolle el cable alrededor del aparato, incluso para guardarlo.**
- unca obstruya los orificios de ventilación ni coloque el aparato sobre una superficie blanda, tal como una cama o un sofá, donde se puedan obstruir. Mantenga los orificios de ventilación libres de pelusas, cabellos y elementos similares.
- No lo use mientras duerme.
- unca deje caer ni inserte ningún objeto en ninguna de las aberturas.
- o use el aparato en exteriores, ni lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.
- No use un cable alargador/de extensión con este aparato.
- No dirija el aire caliente hacia los ojos u otras áreas sensibles al calor.
- Los accesorios pueden ponerse calientes durante el uso; permita que se enfrien antes de manipularlos.**
- No coloque el aparato sobre ninguna superficie durante el funcionamiento.
- Mantenga su cabello alejado del aparato durante el uso. Mantenga su cabello alejado de los orificios de ventilación.**
- No use este aparato con un convertidor de voltaje.
- Este aparato no es un juguete; manténgalo fuera del alcance de los niños.

INSTRUCCIONES DE MANTENIMIENTO

Su secador requiere poco mantenimiento. No necesita lubricación. Para que funcione correctamente, debe mantenerlo limpio.

 
 
 
 
 
Cuando sea necesario limpiarlo, desenchúfelo, permita que se enfríe y quite el polvo y las pelusas de los orificios de ventilación con un cepillo pequeño o el cepillo accesorio de una aspiradora. La superficie exterior del secador solo se debe limpiar con un paño limpio.

El secador se recalentará si los orificios de ventilación están obstruidos o tapados. Si esto sucede, un sistema de seguridad apagará el secador o cortará la temperatura automáticamente para evitar daños al aparato o lesiones personales. En caso de que esto suceda, desenchufe el aparato y permita que se enfríe por 10 a 15 minutos antes de encenderlo de nuevo. Cerciórese de que los orificios de ventilación están limpios.

PRECAUCIÓN:

NUNCA jale, retuerza ni doble mucho el cable. Nunca lo enrolle con fuerza alrededor del aparato; esto puede dañar la junta flexible que lo conecta al aparato, produciendo su rotura o un cortocircuito. Revise el cable con frecuencia para comprobar que no está dañado. **Deje de usar el aparato inmediatamente si el cable está visiblemente dañado, o si el aparato deja de funcionar, o funciona de manera intermitente.** Si el cable o el aparato están dañados o si el aparato no funciona correctamente, devuélvalo a un centro de servicio autorizado. no trate de repararlo.

ALMACENAJE — Importante Después del uso, desenchufe el aparato, permita que se enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. **No enrolle el cable alrededor del aparato.**

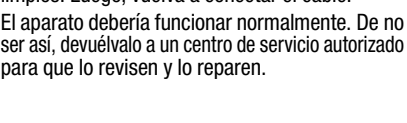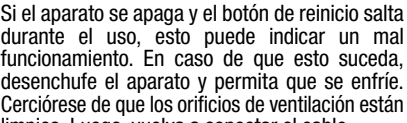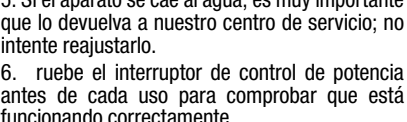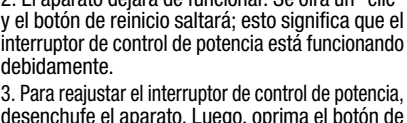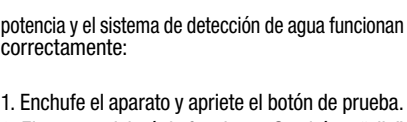

GARANTÍA LIMITADA DE DOS AÑOS (VÁLIDA EN LOS EE.UU. Y EN CANADÁ SOLAMENTE)

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
Conair reparará o reemplazará (a su opción) este producto sin cargo por un periodo de 24 meses a partir de la fecha de compra si presenta defectos de fabricación o materiales.

Para obtener servicio técnico bajo esta garantía, devuelva el producto defectuoso al Centro de Servicio indicado a continuación, junto con su recibo de compra. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO, PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

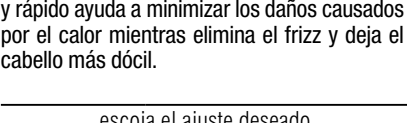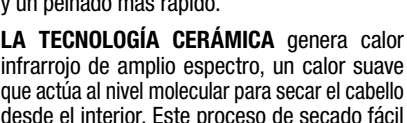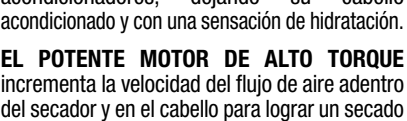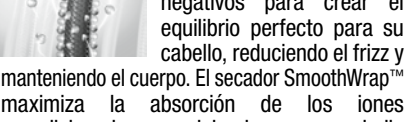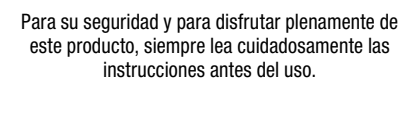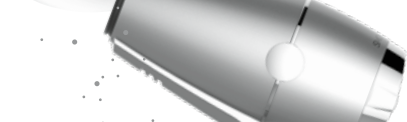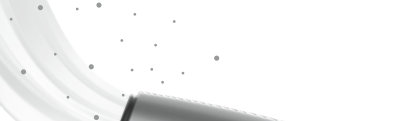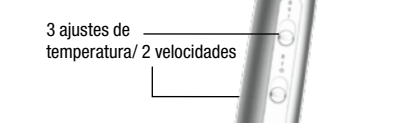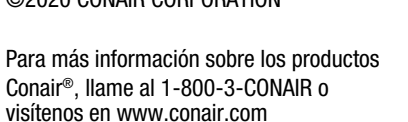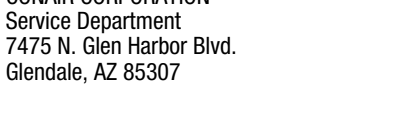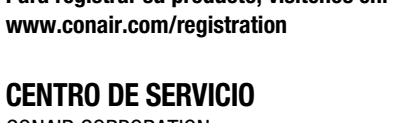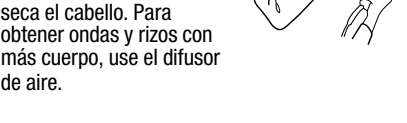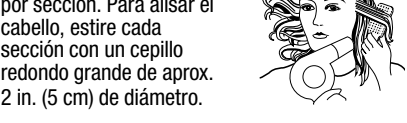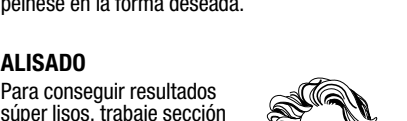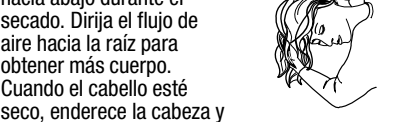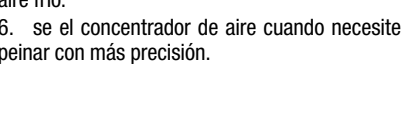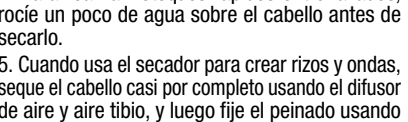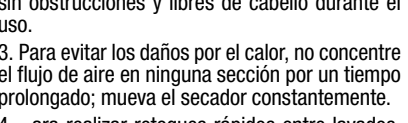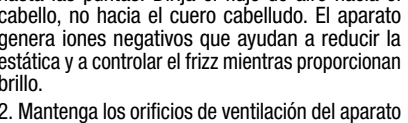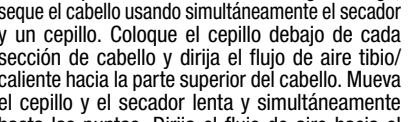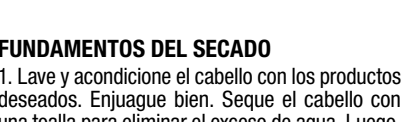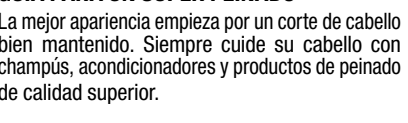

MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, especialmente en presencia de niños, siempre debe tomar precauciones básicas de seguridad, entre ellas las siguientes:

 
LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO MANTÉNGALO ALEJADO DEL AGUA

PELIGRO — Cualquier aparato enchufado permanece bajo tensión, aunque esté apagado. Para reducir el riesgo de electrocución o lesiones por descarga eléctrica:

- SIEMPRE DESENCHUFE EL APARATO INMEDIATAMENTE DESPUÉS DEL USO.**
- o lo use en el baño o la ducha.
- No coloque ni guarde el aparato donde pueda caerse o ser empujado a una bañera o un lavabo.
- No coloque el aparato ni lo deje caer al agua u tro líquido.
- i el aparato se cae al agua, desenchúfelo inmediatamente; **no toque el agua.**

ADVERTENCIA — Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

- Nunca descuide/deje el aparato sin vigilancia mientras está conectado.**
- Este aparato no debe ser usado por, en o cerca de niños o personas con ciertas discapacidades.

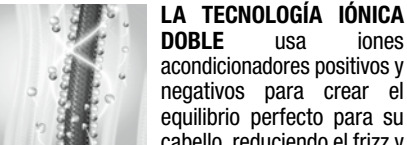

La **TECNOLOGÍA IÓNICA DOBLE** usa iones acondicionadores positivos y negativos para crear el equilibrio perfecto para su cabello, reduciendo el frizz y maximiza la absorción de los iones acondicionadores, dejando su cabello acondicionado y con una sensación de hidratación.

El **POTENTE MOTOR DE ALTO TORQUE** incrementa la velocidad del flujo de aire adentro del secador y en el cabello para lograr un secado y un peinado más rápido.

La **TECNOLOGÍA CERÁMICA** genera calor infrarrojo de amplio espectro, un calor suave que actúa al nivel molecular para secar el cabello desde el interior. Este proceso de secado fácil y rápido ayuda a minimizar los daños causados por el calor mientras elimina el frizz y deja el cabello más dócil.

escoja el ajuste deseado	
velocidad/calor	tipo de cabello
bajo (I) / frío (I)	cabello delicado, fino o dócil
bajo (I) / tibio (II)	cabello normal a grueso, o tratado
alto (II) / caliente (III)	cabello espeso, grueso o resistente
botón de aire frío	fija el peinado