

AVAILABLE IN THESE SIZES

1 in.
(25 mm)
Model CD250T

1 1/4 in.
(32 mm)
Model CD251T

1 1/2 in.
(38 mm)
Model CD252T

USER MAINTENANCE

Your curling iron is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

 
NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

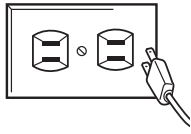

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

LIMITED FIVE-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$7.50 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

BEAUTY TIPS:

To achieve the looks you love and for more great InfnitiPRO by Conair® products, visit infniti.conair.com

Service Center

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

Please register this product at www.conair.com/registration

For information on any Conair or InfnitiPRO by Conair product, call 1-800-3-CONAIR or visit us on the web at www.conair.com/infniti

©2018 Conair Corporation
150 Millford Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

17PA031799

IB-15404

INFINITI PRO
BY CONAIR

ROSE GOLD TITANIUM CURLING IRON



Instru- & Styli

For your sa-
continued e-
of this produ-
read the insti-
book carefully
using.

Models CD25C
- All Versions

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. **Always unplug appliance immediately after using.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons: **1. This appliance should never be left unattended when plugged in.**

2. **Do not pull, twist, or wrap line cord around appliance.**
3. This appliance should not be used by, on or near children or individuals with certain disabilities.

GETTING STARTED

Plug the iron into an electrical outlet. Turn on unit. The indicator light setting will become illuminated. Allow unit to heat up for 30 seconds.

WARNING: The curling iron's Rose Gold Titanium barrel will get very hot within a few seconds and should not be placed in contact with the skin after the curling iron has been turned on.

TO CURL HAIR

Hair should be clean and completely dry before using the curling iron. Section hair evenly, and comb each section before winding. For best results, use a light styling product before blow-drying hair.

1. Start curling with a hair section that is 1 inch wide and no more than 1/2 inch thick. Open the spoon and place curling iron midway up the hair section, then spread hair evenly between spoon and barrel. Gently slide the curling iron down to hair ends. To avoid crimped ends, make sure they are securely wound under the spoon in the direction of the desired curl. Remember, always place the spoon above the hair strand when making a curl you want rolled under; place the spoon under the hair strand when creating a flip style.

2. Wind the hair up as far as you want it curled, being careful not to let the iron touch the scalp. Hold 8–12 seconds, depending on the length and texture of your hair. For tighter, bouncier curls, roll less hair. For looser, free-flowing curls, roll more hair. Repeat process on additional sections of hair until you achieve the style you desire.

3. To remove the curling iron, unwind the hair and press the handle and allow curl to slide out. To set curl, do not comb or brush curls until cool.

USING INSTANT HEAT, THE HIGH HEAT TEMPERATURE SETTINGS & UNIFORM HEAT RECOVERY SYSTEM

This styling iron features a ceramic heater that maintains constant temperature during use for precision styling.

Conair's professional salon standards of engineering provide you with a uniform and improved heat recovery system that maintains the iron at constant temperatures. There is a constant surge of power to ensure that heat is continuously and quickly delivered for optimal styling results, unlike other units, which lose heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

STYLING WITH THE NEW ROSE GOLD TITANIUM EASY-GLIDE BARREL

The barrel of your new curling iron has a Rose Gold Titanium easy-glide surface, the newest technology. This means it's not only simpler to clean off styling product residue, etc., after each use, but you'll find that hair glides easily over the surface of the barrel as you're curling. The Rose Gold Titanium surface also helps smooth down flyaways for polished results. It evenly distributes heat so that the style you create has a salon-perfect, silky smooth, shining finish. Hair also slips right through the barrel after it's curled.

The new Rose Gold Titanium technology is a pleasure to work with and makes styling your hair easier and the results more professional. **Never leave your curling iron on and unattended. However, should you fail to turn the iron off, it will shut itself off automatically within 60 minutes.**

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This curling iron is intended for household use. Use on Alternating Current (60 hertz) only. This unit is designed to be operated at 120V AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

NOTE: Do not use this styling appliance on hair extensions.

INSTANT HEAT TECHNOLOGY

The iron's unique 30 high heat temperature settings and Instant Heat technology provide styling versatility for all hair types. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-curl hair, keep the heat setting on high. You can vary the iron's temperature according to your particular need!

Temperature Setting Guide

Temp. Control	Hair Type
Low ON-5	Fragile/Fine Hair
Medium 6-10	Thin Hair
Med-High 11-15	Medium/Normal Hair
High 16-20	Wavy/Curly Hair
Maximum 21-30	Coarse/Thick Hair

4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.

5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**

6. Keep the cord away from heated surfaces.

7. Never use while sleeping.

8. Never drop or insert any object into any opening or hose.

9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

10. Unit is hot when in use. Do not let heated surface touch eyes or bare skin.

11. **Do not place the heated unit directly on any surface while it is hot or plugged in. Use the stand provided.**

12. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair and other debris.

13. Do not use an extension cord with this appliance.

14. Do not touch hot surfaces of the appliance. Use handles or knobs.

15. Do not attempt to touch the housing of your appliance near the barrel, as it is hot when in use.

16. Do not use with a voltage converter.

17. This appliance is not a toy. Keep away from children.

TAMAÑOS DISPONIBLES:



 
1"
(25 mm)

Modelo CD250T



1 1/4"
(32 mm)

Modelo CD251T

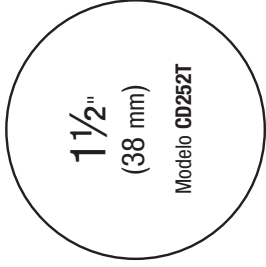


1 1/2"
(38 mm)

Modelo CD252T

ADVERTENCIA: SI CREE QUE CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO.

 MANTÉNGALO ALEJADO DEL AGUA

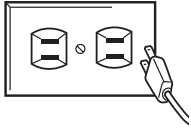

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿Sabe usted que un aparato eléctrico permanece bajo tensión aunque esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchúfelo los aparatos eléctricos después del uso.

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

GARANTÍA LIMITADA DE CINCO AÑOS

(VÁLIDA EN LOS EE.UU. Y EN CANADÁ SOLAMENTE)

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 60 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio Indicado al dorso, junto con su recibo de compra y un cheque o giro postal de US\$7.50 para cubrir los gastos de manejo y envío. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 60 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPOSITO ESPECIFICO, ESTARÁN LIMITADAS POR LOS 60 MESES DE LA PRESENTE GARANTÍA ESCRITA.

Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA.

Algunos Estados no permiten la exclusión o limitación de

Su aparato requiere poco mantenimiento. No necesita lubricación. Mantenga todas las aberturas libres de polvos y pelusas. Cuando sea necesario limpiarlo, desenchúfelo, permita que se enfríe y limpie la superficie exterior con un paño humedecido. En caso de mal funcionamiento, desconecte el aparato, permita que se enfríe y regreselo a un centro de servicio autorizado; No trate de reparar este aparato.

PRECAUCIÓN:

NUNCA jale, retuerza ni doble mucho el cable. Nunca lo enrolle con fuerza alrededor del aparato; esto puede dañar la junta flexible que lo conecta al aparato, produciendo su ruptura o un cortocircuito. Revise el cable con frecuencia para asegurarse de que no está dañado. Deje de usar el aparato inmediatamente si el cable está visiblemente dañado o si el aparato deja de funcionar o funciona de manera intermitente.

ALMACENAJE

Cuando no lo utiliza, su aparato es fácil de almacenar. Permita que se enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. No tiree ni retuerza el cable al nivel del enchufe. No enrolle el cable alrededor del aparato. Permita que el cable cuelgue o que la junta que lo conecta al aparato esté suelta y recta.

MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, especialmente en presencia de niños, siempre debe tomar precauciones básicas de seguridad, incluso las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO MANTÉNGALO ALEJADO DEL AGUA

PELIGRO — Cualquier aparato enchufado permanece bajo tensión, aunque esté apagado. Para reducir el riesgo de electrocución:

1. **Siempre desconecte el aparato inmediatamente después del uso.**
2. No lo use en el baño o la ducha.
3. No coloque ni guarde el aparato donde pueda caerse o ser empujado a una bañera o un lavabo.
4. No coloque el aparato ni lo deje caer al agua u otro líquido.
5. Si el aparato se cae al agua, desconéctelo inmediatamente; **no toque el agua.**

ADVERTENCIA — Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

1. **Nunca descuide/deje el aparato sin vigilancia mientras está conectado.**
2. **No jale, retuerza ni enrolle el cable alrededor del aparato.**
3. Este aparato no debe ser usado por, en o cerca de niños o personas con ciertas

CALENTAMIENTO INSTANTÁNEO

Este aparato cuenta con calentamiento instantáneo y 30 opciones de temperatura ultra alta para proporcionar mayor versatilidad durante el peinado, cualquiera que sea su tipo de cabello. Si su cabello es fino/dejado, le recomendamos que utilice temperatura baja. Si su cabello es espeso, grueso, ondulado o resistente, le recomendamos que utilice el nivel de temperatura alto. Personalice la temperatura según su tipo de cabello!

Ajuste de temperatura	Tipo de cabello
Bajo: ON-5	Cabello frágil/fino
Medio: 6-10	Cabello delgado
Medio-alto: 11-15	Cabello medio/normal
Alto: 16-20	Cabello ondulado/rizado
Máximo: 21-30	Cabello grueso/espeso

CALENTAMIENTO INSTANTÁNEO, TEMPERATURA VARIABLE Y SISTEMA DE RECUPERACIÓN DEL CALOR

Este aparato cuenta con un potente elemento calentador de cerámica que logra un calentamiento muy rápido y mantiene la temperatura constante durante el uso, para resultados precisos.

Su aparato también disfruta de los mismos estándares de calidad e ingeniería que los aparatos profesionales y cuenta con un sistema de recuperación del calor. A diferencia de otras herramientas cuya temperatura baja durante el uso, este sistema mantiene la temperatura constante, sin pérdida de calor. Se usa la misma temperatura para peinar cada sección, lo que permite obtener resultados uniformes y peinados perfectos.

REVESTIMIENTO DE TITANIO “ORO ROSADO” DE FACIL DESLIZAMIENTO

El tubo de su nueva tenaza está cubierto con una capa de titanio “oro rosado” increíblemente suave, lo último en tecnología de peluquería. Notará que el cabello se desliza fácilmente sobre el tubo y que es muy fácil limpiar el aparato después de cada uso. El revestimiento de titanio “oro rosado” también ayuda a controlar la estática y el frizz, para resultados brillantes y sedosos.

Distribuye el calor uniformemente para peinados sedosos y brillantes, igual que en el salón. Además, no retiene el cabello después de rizarlo. Es un placer trabajar con esta nueva tecnología, pues facilita el peinado y logra resultados óptimos.

Nunca descuide/deje el aparato sin vigilancia después de encenderlo. Para su seguridad, el aparato se apagará automáticamente después de 60 minutos.

FUNCIONAMIENTO BÁSICO

Conecte el cable a una toma de corriente. Encienda el aparato; el indicador luminoso se encenderá. Permita que la unidad se caliente por 30 segundos.

ADVERTENCIA: el tubo se pone muy caliente en segundos; evite el contacto con la piel después de encender el aparato.

FAMILIARÍCESE CON SU TENAZA



Punta asiente

Tubo con revestimiento de titanio "oro rosado"

Apagado automático

Sistema de recuperación del calor

Soporte integrado

Control de temperatura

Indicador luminoso

Cable giratorio profesional

CONSEJOS DE BELLEZA:

Para conseguir los peinados que le gustan o descubrir más productos InfnitiPRO by Conair® visite infniti.conair.com

Centro de servicio

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

Para registrar su producto, visítenos en: www.conair.com/registration

Para más información sobre los productos Conair o InfnitiPRO by Conair, llame al 1-800-3-CONAIR o visítenos en www.conair.com/infniti

©2018 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

17PA031799

IB-15404



INFINITI PRO
by CONAIR

TENAZA CON TITANIO
“ORO ROSADO”

Instrucciones y guía de peinado

Para su seguridad y para disfrutar plenamente de este producto, siempre lea cuidadosamente las instrucciones antes de usarlo.

Modelos CD250/CD251/CD252T
(todas las versiones)

3. Para sacar la tenaza, desenrolle el cabello y oprima la manija para soltarlo. Permita que el cabello se enfríe antes de peinarlo para “fijar” los rizos.