

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

## READ ALL INSTRUCTIONS BEFORE USING

**DANGER** — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock: 1. **Always unplug this appliance from the electrical outlet immediately after using and before cleaning.**

2. Do not place or store appliance where it can fall or be pulled into a tub or sink. 3. Do not place in, or drop into water or other liquids. 4. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

**WARNING** — To reduce the risk of burns, electrocution, fire, or injury to persons: 1. **This appliance should never be left unattended when plugged in.**

2. This appliance is not a toy! Keep away from children. 3. Close supervision is necessary when this appliance is used by or near children or individuals with certain disabilities. Unsupervised use could result in fire or personal injury. 4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Do not attempt to repair the appliance. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used. Return the appliance to an authorized service center for examination and repair.**

6. Keep the cord away from heated surfaces. Do not allow cord to contact heated surfaces. Do not pull or twist cord. Let appliance cool completely before putting away. Loop cord loosely around appliance when storing.

7. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

8. Never drop or insert any object into any opening.

9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

10. Do not handle plug with wet hands.

11. Do not use an extension cord to operate appliance.

12. Surfaces of this appliance may be hot when in use. Do not let heated surfaces touch eyes or skin.

13. Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in.

14. Unplug this appliance before filling or emptying.

15. Do not operate steamer without properly filling the water container with distilled water.

16. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.

17. Burns could occur from touching hot parts, hot water, or steam. Use care when removing water reservoir or when you turn a steam appliance upside down – there may be hot water in reservoir. Always position steamer with head away from you and any other person when turning on.

18. To reduce likelihood of circuit overload, do not operate another high-wattage appliance on the same circuit.

19. Use caution when installing or removing attachments to avoid contact with hot water from condensation. Ensure the unit is off and has cooled with no steam being released before installing or removing attachments. 20. Never steam clothes you, or someone else, are wearing.

21. Do not hold hand in front of steam.

22. When emitting steam, appliance may cause burns if it is used too close to the skin or eyes, or if it is used incorrectly. To reduce the risk of contact with hot water emitting from the steam vents, test appliance before use by holding it away from the body.

## SAVE THESE INSTRUCTIONS IMPORTANT FOR HOUSEHOLD USE ONLY

### FILLING INSTRUCTIONS

1. Make sure unit is unplugged.
2. Place unit on its side on a flat and stable surface.
3. While holding the water reservoir with one hand, slide the water reservoir out away from the steam nozzle.



4. Pull the reservoir out, away from the steamer body.
5. Turn the reservoir over, revealing the rubber inlet cover.
6. Open the inlet cover and fill the reservoir with distilled water (which can be found in grocery stores). We recommend that you use distilled water only, as this will prevent mineral deposits in the boiler that can reduce performance or clog the water system.
7. Close the inlet cover and return the reservoir to its place, making sure that it is secure.

### GETTING TO KNOW YOUR STEAMER



Folding Handle Release Button

# OPERATING INSTRUCTIONS

1. Fill water reservoir with distilled water. We recommend that you use distilled water only, as this will prevent mineral deposits in the boiler that can reduce performance or clog the water system.

2. Plug the unit into the electrical outlet.

3. The POWER light will blink (blue). Allow approximately 60 seconds for the unit to warm up. The appliance is ready to use when the READY light goes on continuously (blue).

4. Pointing the steam jets away from you, and anyone else in the room, engage the trigger. Steam should now be released from the steam jets. To have continuous steam, press switch one time so you will have continuous steam without having to hold the trigger. **Always have steam facing away from you or anyone in the room.**

5. When first using the device, test on an old cloth, as there may be sediment left from the manufacturing process or transportation.

6. To stop the flow of steam, release the switch.

7. Unplug the device when it is not in use.

### OPERATING AND STORAGE

To open, unwrap cord and unfold garment steamer. A click sound will indicate the handle is locked in open position. Plug in garment steamer to turn ON and allow to heat up before use. Allow unit to cool completely after use before storing. Do not store with

water. To store the garment steamer, press button on side of unit to fold the garment steamer. Do not wrap cord around unit; coil the cord loosely and use cord tie.

### STEAMING TIPS

1. Hang your garment or fabric. **NOTE:** Avoid using metal clothes hangers, if possible.

2. Pass the steam jets just above the fabric where the wrinkles are. It may take a few passes to remove the wrinkles completely.

3. After use, unplug steamer and empty any remaining water from the tank to avoid leakage.

4. **CAUTION: When hanging garment on a door while steaming, be careful not to damage the door with steam.**

5. First test unit on an inconspicuous area of the item to be steamed, to ensure fabric can tolerate the effects of steam. If there is no evidence of damage, you can proceed to use the steamer on that item.

6. When steaming, always keep the unit in motion and about one inch from the surface of the item being steamed to avoid potential damage. Do not continuously hold steamer over an area or touch steamer jets directly to fabric, as this can cause damage, including shrinkage, melting, or color shift on certain types of material.

7. In the case of heavier, durable fabrics such as wool coats or bedding, slower passes with the steamer may be necessary to achieve desired results. As always, start by testing on an inconspicuous area of the item to be steamed, to ensure fabric can tolerate the effects of steam, and adjust your technique as needed to obtain the results desired.

**CONAIR GARMENT  
STEAMING ACCESSORIES**  
(sold separately)



**Door Press Pad**  
Model GDPP1



**Steaming/Storage  
Station**  
Model DH1



**Steaming Mitt**  
Model GPP1

**FEDERAL COMMUNICATIONS  
COMMISSION NOTICE**

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV

technician for help.

**SUPPLIER'S DECLARATION  
OF CONFORMITY**

**Brand:** CONAIR®

**Model No.:** GS36X

**Description:** Handheld Steamer

**Responsible Party:** Conair Corporation,  
1 Cummings Point Road,  
Stamford, CT 06902 (203) 351-9000

**Standards:** FCC Part 15 Subpart B,  
ANSI C63.4-2014  
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation.

**DATE OF ISSUE:** August 21, 2020



**LIMITED ONE-YEAR WARRANTY  
(U.S. AND CANADA ONLY)**

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed, together with your purchase receipt. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

**ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.**

Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

**Service Center**  
**Conair Corporation**  
Service Department  
7475 N. Glen Harbor Blvd.  
Glendale, AZ 85307

For information on any Conair product, call 1-800-3-CONAIR or visit us on the web at **www.conair.com**

Please register this product at **www.conair.com/registration**

©2020 Conair Corporation  
Made in China

20PA075276

IB-16994

**HANDHELD  
FABRIC STEAMER**  
ALL GS36 MODELS



**INSTRUCTION BOOKLET**

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

