

SUPER STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

CURLING BASICS

1. Plug the hot brush cord into a standard household electrical outlet (120V). When the red ready dot has turned white, the proper styling temperature has been reached. The supreme hot brush has 10 heat settings – HIGH settings are for use on thick, wavy hair, MEDIUM settings are for use on normal hair, LOW for dry or chemically treated hair.

2. Use of the hot brush is very easy to master. Roll one section of hair at a time around the hot brush from the bottom up. **To avoid tangling, never roll the hair around the hot brush more than two times.** When hair is warm (not hot) to the touch, the curl is set. For hair that is harder to curl, leave the hot brush in place a little longer. A hot brush generally gives a lighter curl than a curling iron – for very hard to curl hair, try switching to your curling iron.

3. The hot brush can be used for quick touch-ups without shampooing. After heating the hot brush, simply brush the hair back to its original style. To change the style, mist the hair lightly with water before using the hot brush. No combing is necessary!

TO STRAIGHTEN

To straighten hair, pull small section taut, then pass brush over hair from roots to ends. Repeat procedure until natural waves are relaxed.

TO WAVE

For flowing waves, separate a wider section of hair than you normally do for curling, and roll it as you usually do. For best results, hair should be at least 6–8 inches long.

ON BLUNT CUTS

Use hot brush on blunt cuts to eliminate kinks or unwanted flips by just turning the hair under.

FOR TOUSLED HAIR

Create soft, tousled waves by curling each hair section in a random direction. Then, turn head upside down, shake, and gently scrunch hair with fingers. Bring head back to position and repeat for fullest volume.

WIDE WAVES

Pick up a section of hair and place the hot brush under it close to the scalp, making half a turn downward. Remove the hot brush. Working with the same hair section, start where you left off and place the hot brush on top of the hair, curling it up half a turn. Proceed down the same hair section, alternating the curl upward and downward. Repeat procedure with remaining sections of hair. For best results, hair should be about 6–8 inches long.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING
KEEP AWAY FROM WATER

DANGER – Any appliance is electrically live even when the switch is off:

To reduce the risk of death by electric shock:

- 1. **Always unplug appliance immediately after using.**
- 2. Do not use while bathing or in a shower.
- 3. Do not place or store appliance where it can fall or be pulled into a tub or sink
- 4. Do not place in, or drop into, water or other liquids.
- 5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:

- 1. **This appliance should never be left unattended when plugged in. Do not pull, twist, or wrap line cord around appliance.**

- 2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
- 3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate appliance.

4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**

5. Keep the cord away from heated surfaces. **Do not pull, twist or wrap the cord around the appliance, even during storage.**

6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.

7. Never use while sleeping.

8. Never drop or insert any object into any opening or hose.

9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

10. This hot brush is hot when in use. Do not let heated surfaces touch eyes or skin.

11. **Do not place the heated appliance directly on any surface while it is hot or plugged in. Use the stand provided.**

12. Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air opening free of lint and other debris.

13. Do not use an extension cord with this appliance.

14. Do not touch hot surfaces of the appliance. Use handles or knobs.


15. Do not attempt to touch the housing of your appliance near the barrel, as it is hot when in use.

16. Do not use with voltage converter.

SAVE THESE INSTRUCTIONS

WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.

KEEP AWAY FROM WATER

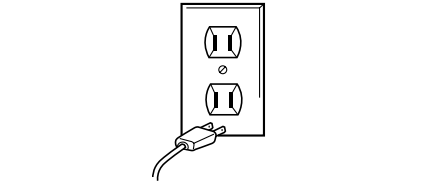

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG
SMALL APPLIANCES

OPERATING INSTRUCTIONS

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

MAINTENANCE

Your hot brush is designed for household use, and is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the hot brush from the power source, allow to cool, and wipe exterior with a damp cloth. If any abnormal condition occurs, unplug the hot brush, allow it to cool and return it to place of purchase or an authorized service representative only for repair. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the hot brush. Damage will occur at the high flex point of entry into the hot brush, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if unit stops or operates intermittently.

STORAGE

When not in use, your hot brush is easy to store. Allow hot brush to cool and store out of reach of children in safe, dry location. Do not jerk or strain cord at plug connections.

LIMITED TWO-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and \$5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Please register this product at:
www.conair.com/registration

SERVICE CENTER

CONAIR CORPORATION
Service Department
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

©2011 CONAIR CORPORATION
150 Milford Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307
www.conair.com

11PA117708

IB-10403



Instruction & Styling Guide

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

Model BC37NBC

Conair Supreme® Hot Brushes are available in these sizes:



BC37XBC



CD36NBC



CD42NBC



Temperature Setting Guide

Temp. Setting	Hair Type
Low 1–3	Dry/chemically treated
Medium 4–6	Normal
High 7–10	Thick/wavy

