

GET TO KNOW YOUR STRAIGHTENING IRON

100% pure ceramic plates

Stainless steel finish

Auto Off

Powerful ceramic heater

Uniform heat recovery system

BONUS Heat Shield Storage Pouch

5 ultra-high heat levels with LED temperature displays

Ultra-slim design

Professional swivel line cord

Turns curls into smooth hair in seconds

Before

After

User Maintenance

Your straightening iron is virtually maintenance-free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. **Do not jerk or strain cord at plug connections.** Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

WARNING: IF YOU THINK THE POWER IS OFF WHEN THE SWITCH IS OFF YOU'RE WRONG.

KEEP AWAY FROM WATER

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

LIMITED FIVE-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 5 years from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Haircare Hotline

Call: 1-800-3-CONAIR
Or visit us on the web at:
<http://www.conair.com>
For info on any Conair product

Service Center

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

For information on any Conair® or Infiniti by Conair™ product call 1-800-3-CONAIR or visit us on the web at: www.conair.com/infiniti

©2008 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

08PA10796

IB-8870

PROFESSIONAL Solid Ceramic 1½" Straightener

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

Instruction & Styling Guide

infiniti

by CONAIR™

Model CS33F

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER - Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into, water or other liquid.
5. If an appliance falls into water, unplug it immediately. Do not reach into the water.

WARNING - To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. Do not pull, twist, or wrap line cord around appliance.
3. This appliance should not be used by, on or near children or individuals with certain disabilities.

4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.
5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.
6. Keep the cord away from heated surfaces.
7. Never use while sleeping.
8. Never drop or insert any object into any opening.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Unit is hot when in use. Do not let heated surfaces touch eyes or bare skin.
11. Do not place the heated unit directly on any surface while it is hot or plugged in.
12. Never block the air openings of the appliance or place on a soft surface such as a bed or couch, where the air openings may be blocked. Keep the air opening free of lint and other debris.
13. Do not use an extension cord with this appliance.
14. Do not touch hot surfaces of the appliance. Use handles or knobs.
15. Do not attempt to touch the housing of your appliance near the straightening plates, as it is hot when in use.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This straightening iron is intended for household use. Use on Alternating Current (60 hertz) only. This unit is designed to be operated at 120V AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

TO STRAIGHTEN HAIR

Hair should be clean and completely dry before using the straightening iron. Plug the iron into an electrical outlet. Turn on unit. The Power 285°F setting will become illuminated.

To turn off, press Off button (light will go off). Never leave your straightening iron on and unattended. However, should you fail to turn the unit off, it will shut itself off automatically within 60 minutes.

WARNING: The straightening iron's pure ceramic plates will get very hot within a few seconds and should not be placed in contact with the skin after the straightening iron has been turned on.

GETTING STARTED

The iron's unique 5 ultra-high heat temperature settings and instant heat technology provide styling versatility for all hair types. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-straighten hair, keep the heat setting on high. You can vary the iron's temperature according to your particular need!

Temperature Setting Guide	
LED TEMP. CONTROL	HAIR TYPE
Power/Low 285°F–310°F	Delicate, thin, easy-to-style hair
Medium 310°F	Average-to-thick or treated hair
Med-High 330°F	Thick or wavy hair
High/Max 360°F–395°F	Hard-to-style hair

Start with a hair section that is 1" wide and no more than ¼" thick. Open the iron and place a hair section between the two hot plates, close to the scalp. Trap hair between the plates by firmly squeezing the handles together. While maintaining the tension, slowly drag the unit down along the hair section toward the end of hair strands. For best results, use a light styling product before blow-drying hair. At the end of hair section, release the pressure on the handle and allow the hair section to slide out. Repeat process on additional sections of hair until you achieve the hair style you desire. It may be necessary to repeat process on certain areas, depending on the texture of your hair.

Some experience is necessary when learning to use this straightening iron. After using the iron several times, you will learn the ideal way to straighten and style your hair.

A bonus protective heat shield storage pouch has been included to safely store product away when hot. Great for use at home or when traveling.

FLOATING PLATES

Your straightener provides a more uniform contact with the hair as the floating plates self adjust. These plates allow for better contact, giving straighter results.

STYLING WITH THE NEW PURE CERAMIC TECHNOLOGY EASY-GLIDE PLATES

The plates of your new straightening iron have an easy-glide pure ceramic surface, the newest technology. You'll find not only that hair glides easily over the surface of the plates as you're straightening, but it's simpler to clean styling product residue, etc. off after each use. The pure ceramic surface also helps smooth down flyaways and frizzies. It evenly distributes heat so that the style you create has a salon-perfect, silky smooth, shiny finish. Hair also slips right through the plates after it's straightened.

The new ceramic technology is a pleasure to work with and makes styling your hair easier – and the results more professional.

USING INSTANT HEAT, THE 5 ULTRA-HIGH HEAT TEMPERATURE SETTINGS & UNIFORM HEAT RECOVERY SYSTEM

This straightening iron features a powerful ceramic heater that maintains temperature during use for precision styling. It quickly heats up to the temperature you've selected for your hair type.

This instant heat technology has 5 ultra-high heat temperature settings. There is a temperature range that's gentle and safe for every type of hair, from the finest to the curliest and most resistant, and helps you create the look you want. And that's not all. Conair's professional salon standards of engineering provide you with a uniform and improved heat recovery system that maintains the iron at constant temperatures. There is a constant surge of power to ensure that heat is continuously and quickly delivered for optimal styling results, unlike other units, that lose heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

FAMILIARÍCESE CON SU PLANCHA ALACIADORA



ALISE SUS RIZOS EN SEGUNDOS



Antes

Después

INSTRUCCIONES DE MANTENIMIENTO

Su aparato casi no necesita mantenimiento. No necesita lubricación. Mantenga todas las aberturas libres de polvos y pelusas. Cuando sea necesario limpiarlo, desenchúfelo, permita que enfíe y limpie la superficie exterior con un paño húmedo. En caso de mal funcionamiento, desconecte el aparato, permita que enfíe y regréselo a un centro de servicio autorizado. No intente reparar el aparato.

PRECAUCIÓN


NUNCA jale, tuerza ni retuerza el cable eléctrico. Nunca lo enrolle con fuerza alrededor del aparato. Esto podría dañar la junta flexible que lo conecta, produciendo su ruptura o un cortocircuito. Inspeccione el cable con frecuencia para asegurarse que no esté dañado. Deje de usar el aparato inmediatamente si el cable pareciera dañado, si el aparato dejara de funcionar o funcionara de manera intermitente.

ALMACENAJE

Cuando no lo utiliza, su aparato es fácil de almacenar. Permita que enfíe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. **No tiree ni retuerza el cable al nivel del enchufe** y no enrolle el cable alrededor del aparato. Permita que el cable cuelgue o que la junta que lo conecta al aparato esté suelta y recta.

ADVERTENCIA: SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO.

MANTÉNGALO ALEJADO DEL AGUA

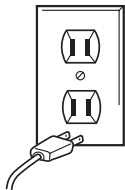

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿Sabe usted que un aparato eléctrico permanece bajo tensión aunque esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe sus aparatos eléctricos después de usarlos.

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

FUNCIONAMIENTO BÁSICO

Asegúrese que su cabello esté limpio y totalmente seco. Nota: Para lograr resultados óptimos, le aconsejamos que utilice un fijador ligero antes de secar el cabello. Conecte el aparato al tomacorriente y oprima el botón de encendido (ON). El indicador de temperatura 285°F se iluminará.

Para apagar el aparato, oprima el botón de apagado (OFF). El indicador de temperatura se apagará. Nunca deje el aparato desatendido mientras esté conectado. Para su seguridad, el aparato está dotado de un sistema de apagado automático que apagará el aparato después de 60 minutos si usted no lo hace.

ADVERTENCIA: Las placas de cerámica maciza se volverán muy calientes en segundos. No permite que hagan contacto con la piel después de encender el aparato.

ESCOGER LA TEMPERATURA

Su plancha calienta instantáneamente y cuenta con 5 ajustes de calor ultra alto, para que usted pueda escoger la temperatura perfecta para su tipo de cabello, desde el más fino hasta el más resistente. ¡Su plancha se adapta a sus necesidades!

GARANTÍA LIMITADA DE CINCO AÑOS

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un periodo de 60 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque o giro postal de \$5.00US por gastos de manejo y envío. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el periodo de garantía será de 60 meses a partir de la fecha de fabricación.

CUALQUIERA GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 60 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted. **CONAIR NO SERÁ RESPONSABLE EN NINGÚN CASO POR ALGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA.** Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted. Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.



Centro de Servicio
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

Para más información sobre los productos Conair o Infiniti by Conair, llame al 1-800-3-CONAIR o visítenos en www.conair.com/infiniti

©2008 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

08PA10796

IB-8870

Plancha Alaciadora Profesional Con Placas de Cerámica Maciza de 1½"



Para su seguridad y para disfrutar plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.

Instrucciones
infiniti
by **CONAIR™**
Modelo CS33F

MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, especialmente en la presencia de niños, debe tomar precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO MANTÉNGALO ALEJADO DEL AGUA

PELIGRO

— Cualquier aparato enchufado permanece bajo tensión, aunque el interruptor esté apagado. Para reducir el riesgo de muerte o herida por descarga:

1. **Siempre desconecte el aparato inmediatamente después de usarlo.**
2. No lo utilice en el baño o la ducha.
3. No coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.
4. No coloque el aparato ni lo deje caer al agua u otro líquido.
5. Si el aparato cayera al agua, desconéctelo inmediatamente. No toque el agua.

ADVERTENCIA

– Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

1. **Nunca deje el aparato desatendido mientras esté conectado.**
2. Nunca jale, retuerza o enrolle el cable alrededor del aparato.
3. Este aparato no debería ser utilizado por, sobre o cerca de niños o personas con alguna discapacidad.
4. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las .
5. **No opere este aparato si el cable o la clavija estuviesen dañados, después de que hubiese funcionado mal o que se hubiese caído o si estuviere dañado. Regréselo a un centro de servicio autorizado para que lo examinen y lo reparen.**
6. Mantenga el cable alejado de las superficies calientes.
7. Nunca utilice el aparato mientras esté dormida/o o adormilada/o.
8. Nunca deje caer ni inserte un objeto en ninguna de las aberturas.
9. No lo utilice en exteriores, ni lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.
10. Este aparato se vuelve muy caliente. Mantenga los ojos y la piel alejados de las superficies calientes.
11. **No coloque el aparato en ninguna superficie mientras esté caliente o conectado.**

12. Nunca bloquee las aberturas de aire ni coloque el aparato sobre una superficie blanda, como una cama o un sofá, donde se puedan obstruir.
13. No utilice una extensión con este aparato.
14. No toque las partes calientes de este aparato. Use el agarre y los botones o perillas.
15. El cuerpo del aparato cerca de las placas se vuelve muy caliente. No lo toque

GUARDE ESTAS INSTRUCCIONES

INSTRUCCIONES DE USO

Este aparato fue diseñado para uso doméstico. Úselo solamente con Corriente Alterna de 120V (60 hertz).

El cable de este aparato está dotado de una clavija polarizada (una pata es más ancha que otra). Como medida de seguridad, se podrá enchufar de una sola manera en el tomacorriente. Si no entrara en el tomacorriente, invírtela. Si aún no entrara completamente, comuníquese con un electricista. No intente vencer esta función de seguridad.