

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug appliance immediately after using.
 2. Do not use while bathing or in the shower.
 3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
 4. Do not place in, or drop into water or other liquids.
 5. If an appliance falls into water, unplug it immediately. Do not reach into the water.
- WARNING** — To reduce the risk of burns, electrocution, fire, or injury to persons:
1. This appliance should never be left unattended when plugged in.
 2. Do not pull, twist, or wrap line cord around appliance.
 3. This appliance should not be used by, on or near children or individuals with certain disabilities.

TO SMOOTH AND STRAIGHTEN

1. Start with a hair section that is 1½ inches wide and no more than ½ inch thick.
2. Press the spoon handle to open iron and place the hair section between the two hot plates, close to the scalp. Trap hair between the plates by closing the handles together.
3. While maintaining the tension, slowly pull the unit down along the hair section toward the ends. At the ends, press the spoon handle to open iron and allow the hair to slide out.
4. Repeat the process on additional sections of hair until you achieve the hairstyle you desire. It may be necessary to repeat the process on certain areas, depending on the texture of your hair.

Some experience is necessary when learning to use this flat iron. After using the iron several times, you will learn the ideal way to straighten and style your hair.



This message about...

GROUND
FAULT
CIRCUIT
INTERRUPTERS

...can save a life!

18. Before plugging in, read the information about dual voltage contained below.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This styler is intended for household use. Use on Alternating Current (50/60Hz) only. This unit is designed to be operated at 120/240V AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

DUAL VOLTAGE

This straightening iron will automatically adjust to the proper voltage. Use an adapter plug with correct configuration prior to use in outlet.

NOTE: Do not use this styling appliance on hair extensions.

AUTO-MONITORING FUNCTION ALCI WITH LED INDICATOR

IF THE LED INDICATOR IS OFF WHEN THE APPLIANCE IS OPERATING, THIS INDICATES THAT THE ALCI IS NOT FUNCTIONING PROPERLY. STOP USING AND RETURN APPLIANCE TO AN AUTHORIZED SERVICE CENTER.

should then function normally. If not, send it to an authorized service center for evaluation.

5. IF THE UNIT IS IMMERSSED IN WATER. DO NOT ATTEMPT TO RESET AND USE THE APPLIANCE. IT SHOULD BE SENT TO AN AUTHORIZED SERVICE CENTER IMMEDIATELY.

CHECK ALCI SAFETY FEATURE EVERY TIME YOU USE THE APPLIANCE.

This appliance is equipped with an auto-monitoring Appliance Leakage Circuit Interrupter (ALCI), a safety feature that provides protection under abnormal conditions, such as immersion in water. To ensure that the ALCI is functioning properly, perform the following test each time you use the appliance.

1. Plug in the appliance with the power off and press the test button on the ALCI. (see diagram above).
 2. There will be an audible click, the reset button will pop out and the LED indicator will be off. The appliance will not turn on. This indicates the ALCI is functioning properly.
 3. To reset the ALCI, unplug the unit, press the reset button and plug the unit back into the outlet. The LED indicator should light up and the appliance should work normally when switched on.
- WARNING – IF THE LED INDICATOR IS OFF AND THE UNIT TURNS ON, THIS INDICATES THAT THE ALCI DEVICE IS NOT WORKING PROPERLY. STOP USING THE APPLIANCE IMMEDIATELY AND RETURN TO AN AUTHORIZED SERVICE CENTER FOR EVALUATION.**
4. If the appliance shuts off and the reset button pops up during use, this could indicate a malfunction. Remove the plug from the outlet and allow the appliance to cool. Press the reset button and plug it into the outlet. The appliance

FEDERAL COMMUNICATIONS COMMISSION NOTICE

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

should then function normally. If not, send it to an authorized service center for evaluation.

5. IF THE UNIT IS IMMERSSED IN WATER. DO NOT ATTEMPT TO RESET AND USE THE APPLIANCE. IT SHOULD BE SENT TO AN AUTHORIZED SERVICE CENTER IMMEDIATELY.

STYLING WITH THE CERAMIC-COATED, EASY-GLIDE FLOATING PLATES AND BARREL

Your new styler has a ceramic-coated, easy-glide surface. This means it's not only simpler to clean off styling product residue, etc., after each use, but you'll find that hair glides easily over the surface as you're styling. The ceramic surface also helps smooth down flyaways. It evenly distributes heat so that the style you create has a salon-perfect, silky smooth, shiny finish.

UNIQUE AIRFLOW SYSTEM

This styling iron features a unique cooling system for the outer barrel. A fan releases cool air through the vents in the barrel to help set your style and create long-lasting results.

 
USING INSTANT HEAT, THE 4 HEAT SETTINGS AND UNIFORM HEAT RECOVERY SYSTEM

This styling iron features a heater that maintains constant temperature during use for precision styling.

The Instant Heat technology has 4 heat settings plus cool air setting. There is a temperature range that's gentle and safe for every type of hair, from the finest to the most resistant, to help you create the look you want.

If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-style hair, keep the heat setting on high. Always test a small section of hair to ensure the proper heat setting for your hair. You can vary the iron's temperature according to your particular need!

GET TO KNOW YOUR STYLER

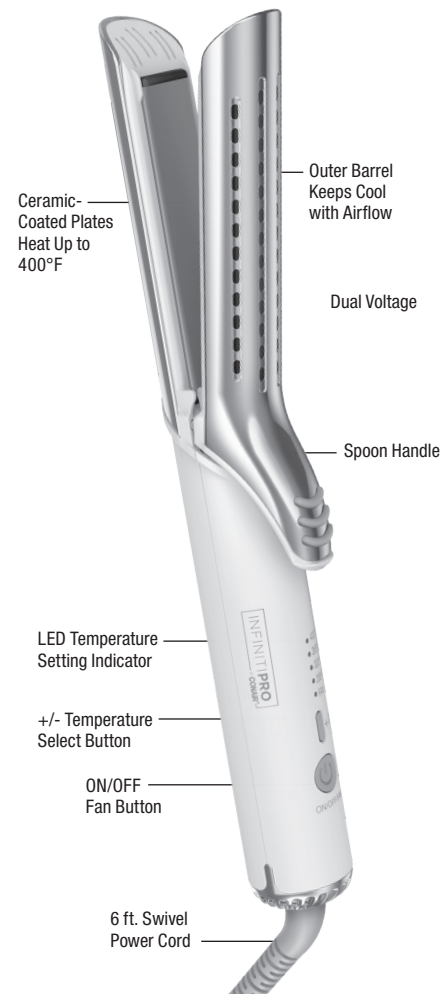

VARIOUS STYLES

Straight and Smooth

The ceramic-coated floating plates glide effortlessly for the silky straight looks you love.

Curls and Waves

The ceramic-coated plates pre-heat hair before wrapping around the vented titanium-plated barrel for the long-lasting curls you love.

TEMPERATURE SETTING GUIDE

HAIR TYPE	TEMP. CONTROL
FRAGILE/FINE HAIR	285°F
MEDIUM/NORMAL HAIR	320°F
WAVY/CURLY HAIR	355°F
TEXTURED/THICK HAIR	400°F
OUTER BARREL	Stays cool with airflow system on

Conair's professional salon standards of engineering provide you with a uniform and improved heat recovery system that maintains the iron at constant temperatures. There is a constant supply of power to ensure that heat is continuously and quickly delivered for optimal styling results, unlike other units, which lose heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

Never leave your styler on and unattended. However, should you fail to turn the iron off, it will shut itself off automatically within 60 minutes.

LIMITED ONE-YEAR WARRANTY (U.S. AND CANADA ONLY)

 
Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed, together with your purchase receipt. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.


ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

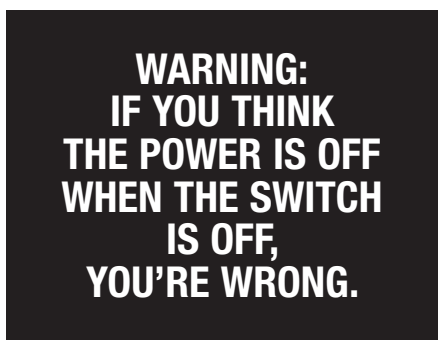

KEEP AWAY FROM WATER

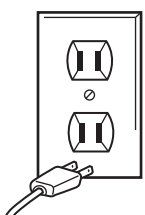 

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

GETTING STARTED

Plug the styler into any standard electrical outlet. Press and hold the ON/OFF/FAN button (⏻) for 1-2 seconds to turn the styler on. The unit will automatically default to the 320°F heat setting. The white 320°F and fan LEDs will start to blink. Both LEDs will become solid and the fan will start to release cool air once the temperature has been reached.

 

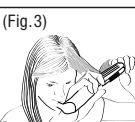 
Press the +/- button to select your desired temperature. To style without the fan, press the ON/OFF/FAN button (⏻) 2 times quickly to turn off the fan. The fan LED will turn off. Press the ON/OFF/FAN button (⏻) 2 times quickly again to turn on fan. The fan LED will turn on.



Press and hold the ON/OFF/FAN button (⏻) for 1-2 seconds to turn the unit off. All LED lights and fan will turn off. Unplug the unit. Allow the styler to cool down before storing.

TO STYLE HAIR

Hair should be clean and completely dry before using the styler. Ensure hair is dry and combed through.

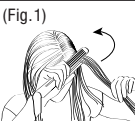FOR CURLS AND WAVES

1. Separate a section of hair. The smaller the section, the more defined the curl. The larger the section, the looser the curl or wave. 
2. Press the spoon handle to open plates. Take a section of hair and place it between the plates, roughly 2 inches from the roots. (See Fig. 1.) Release the spoon handle to hold hair in between plates. 
3. Turn the styler 180° away from face so that the hair is wrapped once around the outside of the styler (Fig. 2).
4. Slowly glide the styler along the length of hair from roots to ends in a downward motion (Fig. 3).
5. Release the hair from the styler. The cool air channels set the style. 
6. Repeat for each section of hair.



BEAUTY TIPS

To achieve the looks you love and for more great InfinitiPRO by Conair® products, visit conair.com

INSTRUCTIONS AND STYLING GUIDE

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

SET AND PROTECT COOL AIR LUXE

model CD2115 - all versions

Please register this product at register.conair.com

For info on any Conair® or InfinitiPRO by Conair® product, call 1-800-3-CONAIR or visit us on the web at www.conair.com

Service Center
Conair LLC
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2022 Conair LLC

