

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. Always unplug appliance immediately after using.
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in.
2. Do not pull, twist, or wrap line cord around appliance.
3. This appliance should not be used by, on or near children or individuals with certain disabilities.

FEDERAL COMMUNICATIONS COMMISSION NOTICE

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.

5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped, damaged, or dropped into water. Return the appliance to an Authorized Service Center for examination and repair.

6. Keep the cord away from heated surfaces.

7. Never use while sleeping.

8. Never drop or insert any object into any opening or hose.

9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

10. Unit is hot when in use. Do not let heated surface touch eyes or skin.

11. Do not place the heated unit directly on any surface while it is hot or plugged in.

12. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of hair, lint and other debris.

13. Do not use an extension cord with this appliance.

14. Do not touch hot surfaces of the appliance. Use handles or knobs.

15. Do not attempt to touch the housing of your appliance near the plates, as it is hot when in use.

16. This appliance is not a toy. Keep away from children.

17. Do not use with a voltage converter.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This appliance is intended for household use. Use on Alternating Current (60 hertz) only. This unit is designed to be operated at 120V AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

NOTE: Do not use this styling appliance on hair extensions.

STYLING WITH THE NEW TOURMALINE CERAMIC, EASY-GLIDE FLOATING PLATES

Both plates of your new flat iron are designed with a little give to "float" in the iron. This provides better contact with hair and eliminates gaps to achieve straighter results faster. The plates of your new flat iron have a tourmaline ceramic, easy-slide surface, the newest technology. This means it's not only simpler to clean off styling product residue, etc., after each use, but you'll find that hair glides easily over the surface of the plates as you straighten. The tourmaline ceramic surface also helps smooth down flyaways and frizzies.

It evenly distributes heat so that the style you create has a salon-perfect, silky smooth, shiny finish. Hair also slips right off the plates after it's straightened.

Tourmaline ceramic has natural ions for less frizz and more shine.

GETTING STARTED SWITCH ACTIVATION CONTROL

IMPORTANT! This appliance features delayed activation control. Immediately after turning the appliance on, you are able to adjust the temperature. After 5 seconds of the appliance being turned on, the control buttons will automatically lock. To adjust the controls, hold down the heat control buttons "HIGH" or "LOW" button for 1-2 seconds. This will deactivate the lock mode and allow the settings to be changed.

To turn off the appliance while in lock mode, hold down the ON/OFF button until the appliance switches off.

Plug the iron cord into any household outlet (120V). Press and hold the ON/OFF button for approximately 1 second to turn the appliance on. The unit will heat up very quickly. Press HIGH or LOW button to select your desired temperature. Once the temperature has stopped blinking on the LED, the unit is ready to use. To turn unit off, press and hold the power ON/OFF button again until light goes off.

WARNING: The iron's plates will get very hot within a few seconds and should not be placed in contact with the skin after the iron has been turned on.

The iron's unique 5 ultra-high heat temperature settings and instant heat technology provide styling versatility for all hair types. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or hard-to-curl hair, keep the heat setting on high. You can vary the iron's temperature according to your particular need!

TEMPERATURE SETTING GUIDE

Low 300°F	Fragile Hair
Medium 340°F	Fine Hair
Med-High 375°F	Medium/Normal Hair
High 410°F	Wavy/Curly Hair
High/Max 455°F	Textured/Thick Hair

TO STRAIGHTEN HAIR

Hair should be clean and completely dry before using the flat iron. For best results, use a light styling product before blow-drying hair.

1. Start with a hair section that is 1½ inches wide and no more than ½ inch thick.
2. Open the iron and place the hair section between the two hot plates, close to the scalp. Trap hair between the plates by firmly squeezing the handles together.

3. While maintaining the tension, slowly pull the unit down along the hair section toward the ends. At the ends, release the pressure on the handle and allow the hair to slide out.

4. Repeat the process on additional sections of hair until you achieve the hairstyle you desire. It may be necessary to repeat the process on certain areas, depending on the texture of your hair.

Some experience is necessary when learning to use this flat iron. After using the iron several times, you will learn the ideal way to straighten and style your hair.

ADD VOLUME AND SHAPE

To add flips and waves, secure ends between plates and wrap hair around the outer housing. It's an easy way to add shape to straight styles. Turn your wrist up or under to create flips and add curl or more body.

NOTE: Never leave your flat iron on and unattended. However, should you fail to turn the iron off, it will shut itself off automatically within 60 minutes.

GET TO KNOW YOUR FLAT IRON



INFINITI PRO
BY CONAIR



INSTRUCTIONS AND STYLING GUIDE

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

LIMITED FIVE-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

BEAUTY TIPS

To achieve the looks you love and for more great InfinitiPRO by Conair® products, visit infinity.conair.com

Please register this product at www.conair.com/registration

For info on any Conair or InfinitiPRO by Conair product, call 1-800-3-CONAIR or visit us on the web at www.conair.com/infinity


Service Center

Conair LLC
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2022 Conair LLC

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE
SWITCH IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

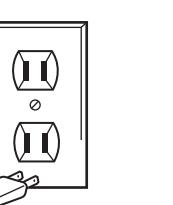

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SUPPLIER'S DECLARATION OF CONFORMITY

Brand: InfinitiPRO by Conair®

Model No.: CS1000

Description: Flat Iron

Responsible Party: Conair LLC,
1 Cummings Point Road, Stamford, CT 06902
(203) 351-9000

Standards: FCC Part 15 Subpart B,
ANSI C63.4-2014

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation.

DATE OF ISSUE: MM/DD/YYYY

USER MAINTENANCE

Your appliance is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an Authorized Service Center only. No repairs should be attempted by the consumer.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

ALWAYS UNPLUG SMALL APPLIANCES

MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, especialmente en presencia de niños, siempre se deben tomar precauciones básicas de seguridad, entre ellas las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DEL USO

MANTÉNGALO ALEJADO DEL AGUA

PELIGRO — Cualquier aparato enchufado permanece en tensión, aunque esté apagado. Para reducir el riesgo de electrocución:

1. Siempre desenchufe el aparato inmediatamente después del uso.
2. No la use en el baño o la ducha.
3. No coloque ni guarde el aparato donde pueda caerse o ser empujado a una bañera o un lavabo.
4. No coloque el aparato ni lo deje caer al agua u otro líquido.
5. Si el aparato se cae al agua, desenchúfelo inmediatamente; no trate de alcanzarlo en el agua.

ADVERTENCIA — Para reducir el riesgo de quemaduras, electrocución, incendio o lesiones personales

AVISO DE LA COMISIÓN FEDERAL DE COMUNICACIONES (FCC)

ADVERTENCIA: Se advierte que las modificaciones no aprobadas expresamente por la autoridad competente en materia de conformidad podrían rescindir el permiso del usuario para operar el equipo.

Este artefacto cumple con la Sección 15 de la Normativa FCC. Su funcionamiento está sujeto a las dos condiciones siguientes: (1) Este artefacto no debe causar ninguna interferencia perjudicial, y (2) Este artefacto debe aceptar cualquier interferencia recibida, incluso aquellas que puedan causar un funcionamiento no deseado.

NOTA: Este equipo ha sido probado y se ha determinado que cumple con los límites de un dispositivo digital de Clase B, según la Sección 15 de la Normativa FCC. Estos límites están diseñados para proporcionar una protección razonable contra las interferencias perjudiciales en una instalación residencial. Este equipo genera, usa y puede irradiar energía de radiofrecuencia (RF) y, si no ha sido instalado o usado conforme a las instrucciones puede ocasionar interferencias perjudiciales para las comunicaciones por radio. No obstante, no hay garantía de que aquellas interferencias no ocurran en una instalación particular. Si este equipo produce alguna interferencia perjudicial en la recepción de radio o televisión, lo que podrá determinarse encendiendo y apagando el equipo, se recomienda tratar de corregir la interferencia, adoptando una o más de las siguientes medidas:

1. Nunca descuide/deje el aparato sin vigilancia mientras está conectado.
2. No jale, retuerza ni enrolle el cable alrededor del aparato.
3. Este aparato no debe ser usado por, en cerca de niños o personas con ciertas discapacidades.
4. Use este producto solo para el uso previsto y como se describe en este manual. Solo use accesorios/aditamentos recomendados por el fabricante.
5. **No use este aparato si el cable o el enchufe están dañados, si no funciona correctamente, si está dañado, o después de una caída/caída al agua; devuélvalo a un centro de servicio autorizado para su revisión y reparación.**
6. Mantenga el cable lejos de las superficies calientes.
7. Nunca lo use mientras duerm.
8. Nunca deje caer ni inserte ningún objeto ninguna de las aberturas.
9. No use el aparato en exteriores, ni lo ha funcionado donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.
10. Este aparato se pone muy caliente durante el uso; mantenga los ojos y la piel alejados de las superficies calientes.
11. **No coloque el aparato sobre ninguna superficie mientras está caliente o enchufado.**
12. Nunca obstruya los orificios de ventilación ni coloque el aparato sobre una superficie blanda, tal como una cama o un sofá, donde se puedan obstruir. Mantenga los orificios de

- ventilación libres de pelusas, cabellos y elementos similares.
13. No use un cable alargador/extens con este aparato.
14. No toque las superficies calientes; use mangos/asas/agarraderas y los botones/perillas.
15. La carcasa del aparato cerca de placas se pone muy caliente durante el uso; no la toque.
16. Este aparato no es un juguete; manténg fuera del alcance de los niños.
17. No use este aparato con un convertidor de voltaje.

GUARDE ESTAS INSTRUCCIONES INSTRUCCIONES DE OPERACIÓN

Para uso doméstico solamente. Úselo solamente con corriente alterna (60 Hz). Este aparato ha sido diseñado para funcionar con corriente de 110-120 V AC.

El cable de este aparato cuenta con un enchufe polarizado (una pata es más ancha que la otra). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente polarizada. Si no entra en la toma de corriente, inviértalo. Si aun así no entra completamente, comuníquese con un electricista. No intente modificar esta función de seguridad.

NOTA: No use este aparato en cabello sintético/extensiones.

NUEVAS PLACAS FLOTANTES CON REVESTIMIENTO DE CERÁMICA/TURMALINA DE FÁCIL DESLIZAMIENTO

Su nueva plancha alisadora cuenta con placas "flotantes" diseñadas para proporcionar un mejor contacto con el cabello y obtener resultados más lisos, más rápidamente. Las placas están cubiertas con una capa de cerámica/turmalina de deslizamiento suave, lo último en tecnología de peluquería. Notará que el cabello se desliza fácilmente sobre el revestimiento y que los residuos de productos de peinado son muy fáciles de limpiar después de cada uso. El revestimiento de cerámica/turmalina también ayuda a controlar la estática y el frizz.

Distribuye el calor uniformemente, para crear peinados sedosos y brillantes, igual que en el salón. Además, las placas no retienen el cabello después de alisarlo.

La cerámica/turmalina emite iones naturales, para menos frizz y más brillo.

FUNCIONAMIENTO BÁSICO

FUNCIÓN DE BLOQUEO DE LA TEMPERATURA

¡IMPORTANTE! Este aparato cuenta con una función de bloqueo de la temperatura. Podrá ajustar la temperatura solamente inmediatamente después de encender el aparato. Después de 5 segundos, los controles se bloquearán automáticamente. Para ajustar la temperatura después de este tiempo, mantenga presionados los botones HIGH y LOW por 1 a 2 segundos; esto desactivará el modo de bloqueo y permitirá ajustar la temperatura. Para apagar el aparato mientras está en el modo de bloqueo, mantenga presionado el botón ON/OFF por 1 a 2 segundos.

Enchufe el aparato en una toma de corriente de 120 V. Mantenga presionado el botón ON/OFF por aprox. 1 segundo para encender el aparato. El aparato se calentará muy rápidamente. Elija la temperatura deseada, presionando el botón HIGH (alto) o LOW (bajo). Cuando el indicador luminoso del botón de temperatura usado deje de parpadear, el aparato está listo para su uso. Para apagar el aparato, mantenga presionado el botón ON/OFF hasta que el indicador luminoso se apague.

ADVERTENCIA: Las placas se ponen muy calientes en segundos; evite el contacto con la piel después de encender el aparato.

Este aparato también cuenta con calentamiento instantáneo y 5 ajustes de temperatura ultra-alta únicas para proporcionar mayor versatilidad, cualquiera que sea su tipo de cabello. Si su cabello es fino/delgado, se recomienda usar el ajuste de temperatura bajo para conseguir mejores resultados. Si su cabello es espeso, grueso, ondulado o resistente, se recomienda usar un nivel de temperatura alto.

¡Personalice la temperatura según su tipo de cabello!

GUÍA DE TEMPERATURA

Control de temperatura con luces LED	Tipo de cabello
Bajo 300 °F (138 °C)	Cabello frágil
Medio 340 °F (160 °C)	Cabello fino/delgado
Medio-Alto 375 °F (182 °C)	Cabello medio/normal
Medio-Alto 410 °F (182 °C)	Cabello ondulado/rizado
Alto-Máximo 455°F (205 °C)	Cabello con textura/espeso

CÓMO ALISAR EL CABELLO

El cabello debe estar limpio y seco. Para obtener resultados óptimos, aplique una loción fijadora ligera en el cabello antes de secarlo.

1. Divida el cabello en secciones de 1½ i (4 cm) de ancho por un máximo de ½ in. (1.5 cm) de grueso.

2. Coloque el aparato cerca del cuero cabelludo. Abra las placas y coloque una sección de cabello entre ellas. Cierre las placas, apretando firmemente el mango.

3. Manteniendo la tensión, baje lentamente plancha hacia las puntas. Suelte el cabello al llegar a las puntas.

4. Repita el proceso en cada sección, has conseguir el estilo deseado. Dependiendo de la textura del cabello, puede que sea necesario repetir el proceso varias veces en algunas secciones.

Nota: Será necesario experimentar un poco al principio. Con práctica, encontrará la manera perfecta para alisar y peinar su cabello fácil y rápidamente.

CÓMO DAR VOLUMEN

Para doblar las puntas o crear ondas, agarre las puntas del cabello entre las extremidades de las placas y enrolle el cabello alrededor de las placas cerradas. Es una manera fácil de dar volumen a cualquier peinado liso. Gire la muñeca hacia arriba o abajo para doblar las puntas hacia fuera/dentro, rizar o dar cuerpo.

NOTA: Nunca descuide/deje el aparato sin vigilancia después de encenderlo.

Para su seguridad, el aparato se apagará automáticamente después de 60 minutos.

FAMILIARÍSE CON SU PLANCHA ALISADORA



INFINITIPRO BY CONAIR



SERIE CERÁMICA DIGITAL

INSTRUCCIONES Y GUÍA DE PEINADO

Para su seguridad y para disfrutar plenamente de este producto, siempre lea atentamente las instrucciones antes del uso.

Para registrar este producto, visítenos en: www.conair.com/registration

Para más información sobre los productos Conair® o InfinitiPRO by Conair®, llame al 1-800-3-CONAIR o visítenos en www.conair.com/infiniti

Centro de servicio

Conair LLC
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2022 Conair LLC

22PA082571

IB-17464B

PLANCHAS ALISADORAS

REVESTIMIENTO DE CERÁMICA/TURMALINA
modelos CS1000/CS1001 (todas las versiones)