



This message about...

GROUND

FAULT

CIRCUIT

INTERRUPTERS

...can save a life!

IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI* NOW!

Your local electrician can help you decide which type is best for you — a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCIs in the bathrooms, garages, and outdoor outlets of all new homes.

WHY DO YOU NEED A GFCI? Electricity and water don't mix. If your hair dryer falls into water while it's plugged in, the electric shock can kill you...**even if the switch is off.** A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.



A GFCI can save your life! Compared to that, the price is small! Don't wait...install one now!

*A GFCI is a sensitive device that reacts immediately to a small electric current leak by stopping the electricity flow.

USER MAINTENANCE

Your dryer is virtually maintenance free. No lubrication is needed. For proper operating performance, the dryer must be kept clean.

When cleaning is needed, unplug the cord, and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a cloth only.

Blocked or clogged air intake vents will cause the dryer to overheat. If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat cycles off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

CAUTION

NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.**

If the cord or dryer is damaged or does not operate properly, return it for repair to an authorized Conair service representative only. No repairs should be attempted by the consumer.

STORAGE – Important

When not in use, your dryer should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children. **Do not wrap line cord around dryer.** Allow the cord to hang or lie loose and straight at the point of entry into the dryer.

LIMITED TWO-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace, at our option, your appliance free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your sales slip and \$5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a receipt, the warranty period shall be 24 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Please register this product at www.conair.com/registration

SERVICE CENTER

CONAIR CORPORATION
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2018 CONAIR CORPORATION

For info on any Conair product, call 1-800-3-CONAIR or visit us on the web at www.conair.com

18PD052272

IB-15626



IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER DANGER

— Any hair dryer is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. **Always unplug it immediately after using.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in. Do not pull, twist, or wrap line cord around dryer.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged, or dropped into water. Return the appliance to a Conair Service Center for examination and repair.**
5. Keep the cord away from heated surfaces.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord with this appliance.
11. Do not direct hot air toward eyes or other heat-sensitive areas.
12. Attachments may be hot during use. Allow them to cool before handling.
13. Do not place appliance on any surface while it is operating
14. While using the appliance, keep your hair away from the air inlets.
15. Do not use with a voltage converter.
16. This appliance is not a toy. Keep away from children.

FOR AN AUTOMATIC DUAL VOLTAGE HAIR DRYER
17. Before plugging in, read the information about AUTOMATIC DUAL VOLTAGE contained in the OPERATING INSTRUCTIONS section of this manual.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This appliance is intended for household use only. Use on Alternating Current (60 hertz) only. This dryer is designed to operate at 125/240 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

AUTOMATIC DUAL VOLTAGE

This appliance will automatically adjust to the proper voltage.

For use in several countries overseas, the voltage will automatically change to 240 volts. Voltage will be indicated on LED readout as 125 in green and 240 in blue. For connection to a 240-volt supply, use an attachment plug adapter of the proper configuration for the power supply receptacle.

IMPORTANT

1875 WATT OPERATING GUIDE


Use of this dryer on the same circuit or fuse with other electrical products or appliances may trip a 15 amp circuit breaker or blow a 15 amp fuse. **NEVER replace the fuse with one rated higher than the capacity of the circuit. Doing so could result in an electrical fire.**

CHECK ALCI SAFETY FEATURE EVERY TIME YOU USE DRYER

This hair dryer is equipped with an Appliance Leakage Circuit Interrupter (ALCI), a safety feature that renders it inoperable under some abnormal conditions, such as immersion in water.

To make sure the ALCI is functioning properly, perform the following test. The purpose of this test is to allow you to make sure the exclusive water sensing system (ALCI) is working.

1. **Plug in the appliance and press test button on plug.**
2. **The appliance will stop working. There will be an audible click and reset button will pop out. This indicates the ALCI is functioning properly.**
3. **To reset ALCI, unit should be unplugged. Then push reset button in and reinsert plug into outlet.**

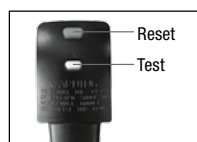

4. **If ALCI is not functioning properly, return appliance to nearest service center.**
5. It is important that if immersion occurs, this unit be brought to a service center. Do not try to reset.
6. Be sure to repeat test every time you use the unit to confirm ALCI is operational.

Should the appliance go off and the reset button pop up during use, this could indicate a malfunction in the unit. Remove plug from outlet and allow the appliance to cool. Reinsert plug into outlet.

The appliance should then function normally. If not, return it to an authorized Conair Service Center for evaluation and repair.

SUPER STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

DRYING BASICS

1. Shampoo and condition hair with the products of your choice. Rinse thoroughly. Towel-blot hair to remove excess moisture. Section hair. Using the dryer along with your styling brush, direct hot air through a section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct airflow at hair, not scalp.
2. Keep dryer's air intake vents unobstructed and free from hair while drying.
3. To avoid overdrying, do not concentrate heat on any one section for an extended length of time. Keep dryer moving as you style.

4. For quick touch-ups between shampoos, dampen hair with a mist of water before styling with the dryer.
5. When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, then finish styling with cool shot feature to close hair shaft and lock in style.

BODY & VOLUME

To create extra volume, turn head upside down while drying. Position the airflow toward the roots for maximum lift. When hair is dry, toss head back and brush hair into place.



STRAIGHTENING

Work with hair in sections when creating a super-straight look. Using a large, round brush (approximately 2" in diameter), hold hair taut in each section and bend ends slightly under as you dry.



MAKING WAVES

Tousled, natural-looking waves are easily created by grasping hair at the roots and scrunching between fingertips while drying.



GET TO KNOW YOUR DRYER



The Conair® 1875 Watt Worldwide Travel Dryer with dual voltage is very effective, even at lower temperatures, and helps create healthier-looking, shiny, more manageable hair with maximum styling control.

SMART VOLTAGE TECHNOLOGY detects foreign voltage and adjusts automatically while maintaining full power. LED indicator light shows green for 125V and blue for 240V.

THE IONIZING FUNCTION generates a cloud of negative ions that can:

- help reduce frizz
- contribute to shine

TOURMALINE CERAMIC TECHNOLOGY will keep your hair healthy looking and shiny. It generates full spectrum, infrared heat and ions which work on hair molecules to dry them inside and out. This drying process is gentle and quick; it minimizes heat damage and makes hair less frizzy and more manageable.

select your setting

| speed/temp. | hair type |
|-------------|---------------------------------------|
| low/warm | delicate, thin, or easy-to-style hair |
| high/warm | average to thick or wavy hair |
| high/hot | hard-to-style hair types |



Este mensaje sobre los...

GROUND FAULT CIRCUIT INTERRUPTERS

(Interruptores de circuito

de falla a tierra)

...puede salvar una vida.

MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, especialmente en presencia de niños, siempre debe tomar precauciones básicas de seguridad, entre ellas las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO MANTÉNGALO ALEJADO DEL AGUA

PELIGRO — Cualquier aparato enchufado permanece bajo tensión, aunque esté apagado. Para reducir el riesgo de electrocución o lesiones por descarga eléctrica:

- Siempre desenchufe el aparato inmediatamente después del uso.**
- No lo use en el baño o la duch
- No coloque ni guarde el aparato donde pueda caerse o ser empujado a una bañera o un lavabo.
- No coloque el aparato ni lo deje caer al agua u otro líquido.
- Si el aparato se cae al agua, desconéctelo inmediatamente; **no toque el agua.**

ADVERTENCIA — Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

- Nunca descuide/deje el aparato sin vigilancia mientras está conectado. No jale, retuerza ni enrolle el cable alrededor del aparato.**

¡SI DEBE USAR EL SECADOR EN EL CUARTO DE BAÑO, INSTALE UN INTERRUPTOR DE CIRCUITO DE FALLA A TIERRA* AHORA!

Su electricista le puede ayudar a decidir cuál sistema escoger: un sistema removible que se conecta a la toma de corriente o un sistema permanente que él instalará. El Código Nacional de Electricidad ahora exige que todos los enchufes ubicados en los cuartos de baño, los garajes y las partes exteriores de las casas nuevas sean equipados con un interruptor de circuito de falla a tierra (GFCI, por sus siglas en inglés).



¿POR QUÉ NECESITA UN INTERRUPTOR DE CIRCUITO DE FALLA A TIERRA? La electricidad y el agua no deben juntarse. Si el aparato se cae al agua mientras está conectado, una descarga eléctrica puede causar su muerte... **aunque el interruptor esté en la posición de apagado.** Un fusible o un disyuntor/interruptor de circuito regular no le protegerán en esta situación. Un interruptor de circuito de falla a tierra ofrece más protección.

¡Un interruptor de circuito de falla a tierra puede salvar su vida! ¡Comparado con ella, el precio es bajo! ¡No espere... instale uno ahora mismo!

*Un interruptor de circuito de falla a tierr (GFCI, por sus siglas en inglés) es un dispositivo sensible que reacciona inmediatamente a una pequeña pérdida de corriente, deteniendo el flujo de electricidad.

- Este aparato no debe ser usado por, en o cerca de niños o personas con ciertas discapacidades
- Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Solo use accesorios recomendados por el fabricante
- No utilice este aparato si el cable o el enchufe están dañados, si no funciona correctamente, si está dañado, o después de que se haya caído, incluso en el agua; regréselo a un centro de servicio autorizado para su revisión y reparación.**
- Mantenga el cable alejado de superficies calientes.
- Nunca bloquee las aberturas de aire ni coloque el aparato sobre una superficie blanda, tal como una cama o un sofá, donde se puedan obstruir. Mantenga las aberturas de aire libres de pelusas, cabellos y elementos similares.
- No lo use mientras due
- Nunca deje caer ni inserte ningún objeto en ninguna de las aberturas.
- No utilice el aparato en exteriores, ni lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.
- No utilice una extensión con este aparato.
- No dirija el aire caliente hacia los ojos u otras áreas sensibles al calor.
- Los accesorios pueden ponerse calientes durante el uso; permita que se enfrien antes de manipularlos.
- No coloque el aparato sobre ninguna superficie mientras está funcionando.
- Mantenga su cabello alejado de las entradas de aire durante el uso.
- No utilice este aparato con un convertidor de voltaje.
- Este aparato no es un juguete; manténgalo fuera del alcance de los niños.

INSTRUCCIONES DE MANTENIMIENTO

Su secador requiere poco mantenimiento. No necesita lubricación. Para que funcione correctamente, debe mantenerlo limpio.

Cuando sea necesario limpiarlo, desconéctelo, permita que se enfríe y quite el polvo y las pelusas de las aberturas de aire con un cepillo pequeño o el cepillo accesorio de una aspiradora. La superficie exterior del secador solo se debe limpiar con un paño limpio.

El secador se recalentará si las aberturas de aire están obstruidas o tapadas. En caso de que esto suceda, un sistema de seguridad apagará el secador o cortará la temperatura automáticamente para evitar daños al aparato o lesiones personales. En caso de que est suceda, desenchufe el aparato y permita que se enfríe por 10 a 15 minutos antes de encenderlo de nuevo. Asegúrese de que las ventilaciones de aire están limpias.

El cable de este aparato está dotado de un enchufe polarizado (una pata es más ancha que la otra). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente polarizada. Si el enchufe no entra en la toma de corriente, inviértalo. Si aun así no entra completamente, comuníquese con un electricista. No intente ir en contra de esta función de seguridad.

DOBLE VOLTAJE CON SELECCIÓN AUTOMÁTICA DE TENSIÓN

Este aparato se adaptará automáticamente al voltaje adecuado.

Si lo conecta a una red de 220–240 V, elegirá automáticamente la opción de voltaje adecuada (240 V). El indicador luminoso LED cambiará de color para indicar el voltaje usado: verde para 125 V, o azul para 240 V. Nota: puede que sea necesario utilizar un adaptador de viaje (no incluido) para conectar el aparato a una red de 220–240 V.

PRECAUCIÓN

NUNCA jale, retuerza ni doble mucho el cable. Nunca lo enrolle con fuerza alrededor del aparato; esto puede dañar la junta flexible que lo conecta al aparato, produciendo su ruptura o un cortocircuito. Revise el cable con frecuencia para asegurarse de que no está dañado. **Deje de usar el aparato inmediatamente si el cable está visiblemente dañado, o si el aparato deja de funcionar o funciona de manera intermitente.**

Si el cable o el aparato están dañados o si el aparato no funciona correctamente, regréselo a un centro de servicio autorizado. No trate de reparar este aparato.

GARANTÍA LIMITADA DE DOS AÑOS (VÁLIDA EN LOS EE. UU. Y EN CANADÁ SOLAMENTE)

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 24 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado al dorso, junto con su recibo de compra y un cheque o giro postal de US\$5.00 para cubrir los gastos de manejo y envío. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones envío. En ausencia del recibo de compra, el período de garantía será de 24 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 24 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitacione mencionadas pueden no regir para usted. Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

SECADOR DE VIAJE

DE 1875 VATIOS

Tecnología de voltaje inteligente



Instrucciones y guía de peinado

Modelos 420



El secador de viaje de 1875 vatios Conair® seca el cabello de manera muy eficaz, incluso con calor bajo. Ayudará a mantener su cabello resplandeciente de salud, brillante y dócil mientras brindará máximo control durante el peinado.

TECNOLOGÍA DE VOLTAJE INTELIGENTE Detecta el voltaje de la toma de corriente y ajusta automáticamente el voltaje del secador, manteniendo la potencia máxima. El indicador luminoso LED cambia de color para indicar el voltaje usado: verde para 125 V, o azul para 240 V.

LA FUNCIÓN IÓNICA Genera una nube de iones negativos que pueden:

- ayudar a reducir el frizz
- agregar brll

TECNOLOGÍA CERÁMICA/TURMALINA La tecnología cerámica/turmalina ayudará a mantener su cabello brillante y resplandeciente de salud. Genera calor infrarrojo de amplio espectro e iones negativos que actúan al nivel molecular para ayudar a secar el cabello desde el interior. Este método de secado suave y rápido minimiza los daños causados por el calor, reduce el frizz y deja el cabello más dócil.

| Escoja el ajuste deseado | |
|--------------------------|------------------------------------|
| velocidad/ calor | tipo de cabello |
| LOW/WARM (bajo/tibio) | Cabello delicado, fino o dócil |
| HIGH/WARM (alto/tibio) | Cabello normal a grueso u ondulado |
| HIGH/HOT (alto/caliente) | Cabello rebelde/ resistente |