



MULTI-PURPOSE
for all your home
haircutting and
grooming needs

Instructions for Clipper Care and Use
Model HC221RGB

CONAIR®
HOME HAIRCUTTING KIT

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING FOR HOUSEHOLD USE ONLY KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live, even when the switch is off. To reduce the risk of death or injury by electric shock:

1. Always unplug this appliance from electrical outlet immediately after using.
2. Unplug this appliance before cleaning. Unplug the appliance when not in use.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not use while bathing or in a shower.
5. Do not place in, or drop into water or other liquids.
6. Do not reach for an appliance that has fallen into water. Unplug immediately.

WARNING — To reduce the risk of burns, electric shock, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in. Do not pull, twist, or wrap line cord around appliance.

2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate this appliance.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
5. Keep the cord away from heated surfaces.
6. Never drop or insert any object into any opening on this appliance.
7. Do not place appliance on any surface while it is operating.
8. Do not use this appliance with a damaged or broken comb or with teeth missing from the blades as injury may occur. Before use, make certain blades are aligned properly. (See "Care of Your Clippers.")
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Never operate the appliance with the air openings blocked or while on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other debris.
11. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to OFF, then remove plug from outlet.
12. Avoid skin contact with moving blade.
13. Keep lubricating oil out of reach of children.
14. When using the appliance with its cord, be mindful of tangles or kinks in the cord. If

soiled, straighten cord before operating again.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This appliance is intended for household use. Use on Alternating Current 120V/60 hertz only.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in the outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not attempt to defeat this safety feature.

Your new Conair® Haircut Kit has everything you need to achieve professional haircuts at home. Its powerful high torque motor clipper, with stainless steel blades for long-lasting cutting precision, features a new 5-position adjustable taper control. Whatever hair length you set the lever for, the clipper will automatically cut all hair in that section at the desired length. Also included are 10 comb attachments for different hair lengths (including left and right ear taper combs), barber scissors, a styling comb with angled teeth, a barber comb with straight teeth, a full-length barber cape, a case for easy storage, 3 styling clips to assist you in cutting longer hair styles and a neck brush. It also comes with lubricating oil, a cleaning brush and a blade guard for easy maintenance and protection of the clipper blades.

THE CONAIR GUIDE TO CUTTING HAIR AT HOME

Before you start:


1. Inspect your clipper. Make sure it's free of hair and dirt, properly oiled, and running smoothly.
2. Place a towel around the neck of the person whose hair is being cut.
3. Seat the person so that his or her head is at your eye level. This gives you greater visibility and control.
4. First, comb hair until it's tangle free. Then hold clipper in a comfortable grip. Now you're ready to cut.

MEDIUM TO LONG CUT

To begin with, cut only a small amount of hair until you become used to the length each attachment leaves the hair. Try the longest attachment on the clipper first. If you want a shorter cut, you can then use shorter combs.

- Short comb attachment (number 1) cuts hair to 1/8" (3mm).
- Medium-Short comb attachment (number 2) cuts hair to 1/4" (6mm).
- Medium-Long comb attachment (number 3) cuts hair to 3/8" (9.5mm).
- Long comb attachment (number 4) cuts hair to 1/2" (12.5mm).
- Long comb attachment (number 5) cuts hair to 5/8" (16mm).
- Long comb attachment (number 6) cuts hair to 3/4" (19mm).
- Long comb attachment (number 7) cuts hair to 7/8" (22mm).
- Long comb attachment (number 8) cuts hair to 1" (25mm).

- Left ear comb attachment lightly tapers over left ear.
- Right ear comb attachment lightly tapers over right ear.



NOTE: Never push or shove the clipper through the hair to make it move more quickly. Professional experience shows that the clipper works most efficiently when it cuts through the hair at its own speed. To begin cutting hair:


1. The hair should be combed in its natural direction.
2. Using the largest comb attachment, trim sides from the bottom upward. Hold clipper lightly against the hair with teeth of the comb attachment pointing upward, yet flat against the head. Gradually lift the clipper upward and outward through the hair, trimming just a little at a time.



Repeat around sides and back of head.



If you want hair to be even shorter:

A) Apply more pressure to the head with the comb attachment that is in place. This takes a little practice, of course. **OR B)** Just switch to a shorter comb attachment. Remember, it's better to leave too much hair than too little. For longer hair on top, use the barber comb and lift hair on the top of the head, cutting over the comb. Or hold the hair between the fingers and cut to desired length. Always working from the front to the back of the head, gradually cut the hair shorter by reducing the space between the comb or fingers and the head. Comb often to check for uneven strands and to get rid of trimmed hair.

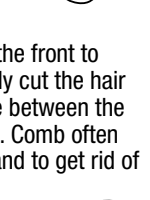

OUTLINING

Outlining requires no attachments. Comb hair into the desired style. Position the clipper between the sideburns and the ear (see illustration), making sure the corner edge of the blade is against the hairline. With the outline of the hair as your guide, slowly move the clipper over, around and behind the ears. For the back of the neck and the sideburns, hold the clipper upside down (see illustration) and, holding it against the skin at the length desired, move the clipper downward.

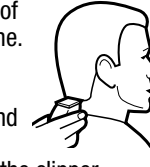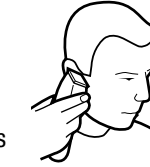

STOP. COMB. CHECK.

For best results, do as the professionals do: Comb hair often, and check clipping results as you comb. This way you avoid uneven sides, bangs, neckline, etc.

SHORT CUTS TO PERFECT FLATTOPS, CREW CUTS, ETC.

Always cut from the back of the neck to the crown, using the longest comb setting.

Hold the comb attachment flat against the head and slowly move the clipper up through the hair. Use the same technique for the sides, cutting from the bottom to the upper side of the head.

For the front to the crown, cut the hair against the direction in which it grows. Then even it up with the sides.

For a flattop, use the flat comb, not the comb attachment #1. Comb hair and check for uneven spots. Outline sideburns and neck areas (see "Outlining").


To taper hair down to the neckline, use comb attachment #1. Comb hair and check for uneven spots. Outline sideburns and neck areas (see "Outlining").




Model COMB-11



Model SC-1

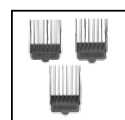

Model COMB-2

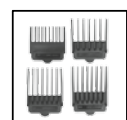

Model COMB-1




Model BLD-7



Model HCNB-1




Model CAPE-1

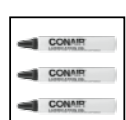

Model HC OIL



Model BG30

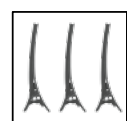

Model CLP-1



Model COMB-3

LIMITED FIVE-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

CONSUMER NOTICE: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Please register this product at www.conair.com/registration

Service Center
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307


©2014 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 North Glen Harbor Blvd., Glendale, AZ 85307

14PG007129

IB-13146

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

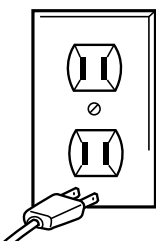

Everyone knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically alive even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

This clipper has a detachable blade that makes cleaning easy. Just push up on the top of the blade and it will pop off easily. Remove any loose hair with the cleaning brush provided and then place blade back in position. To secure properly, line up the base of the blade with the lower back of the clipper. Push down into place until you hear a snap to know it's locked in place.

If the clipper stops cutting, but does not stop running, you will need to check the blades. For new blades, send check or money order for \$6.50, which includes postage and handling to:

Conair Corporation
150 Milford Rd.
East Windsor, NJ 08520

STORAGE

When not in use, your clipper should be disconnected, allowed to cool and stored in a safe, dry location, out of reach of children.

Any other servicing should be performed by an authorized service representative. This appliance has no user-serviceable parts. The product is for household use.


NOTE: Never pull on the clipper cord. Never twist or wrap the cord around the clipper. To store your clipper, lay it flat with the cord coiled up, then place in case.



Detachable blade set

Adjustable taper lever

On/Off switch

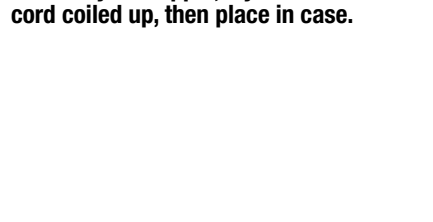

Close Cut
Longer Cut

USER MAINTENANCE INSTRUCTIONS

CARE OF YOUR CLIPPER'S DETACHABLE BLADE SET

Your clipper is equipped with a detachable blade set for routine maintenance, cleaning and replacement.

To remove the blade: The front of the clipper should be facing you. Push up under the blade with your thumb and the blade will pop out. (See Fig. 1)

To replace the blade: Make sure the taper control is set to the longest position and with the back of the clipper facing you, insert the bottom side (with screws) of the blade into the clipper and push down until it snaps into place. (See Fig. 2)

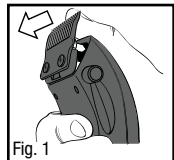


Fig. 1


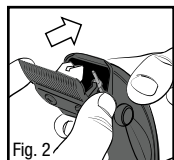


Fig. 2

SPECIAL OIL
To maintain the blades of your Conair® clipper in peak condition, oil them after every three or four haircuts. Gently place a few drops of oil on the teeth of the blades, using the special Conair oil included with your set. Turn the clipper on for a minute, then turn off. This light, natural oil was formulated specifically for the Conair® high-speed clipper. Because it is the right oil to use, it will not slip down the blades. Never use any other product; there is no substitute for Conair oil.

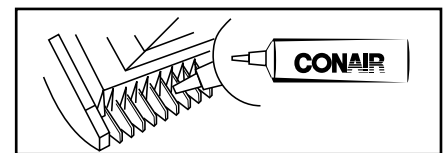

HAIRCUT KIT REPLACEMENT PARTS & ACCESSORIES ORDER FORM

Pricing in effect through December 31, 2015. Orders postmarked after this date will be accepted, and the customer will be notified if pricing has changed.

ITEM	PART #	PRICE	QUANTITY	AMOUNT
Clipper Blade Set for HC221	BLD-7	\$6.50		
4 Attachment Combs (1/8", 1/4", 3/8", 1/2")	COMB-1	\$5.00		
3 Attachment Combs (5/8", 3/4", 7/8")	COMB-2	\$5.00		
1" Attachment Comb	COMB-3	\$1.00		
Left/Right Ear Attachment Combs	COMB-11	\$2.00		
Neck Brush	HCNB-1	\$1.50		
Deluxe Vinyl Cape	CAPE-1	\$5.00		
Lubricating Oil (pkg of 3 tubes)	HC OIL	\$2.00		
Barber Scissors	SC-1	\$2.00		
Blade Guard	BG30	\$1.00		
Styling Clips (set of 3)	CLP-1	\$1.50		
			Subtotal	
			Sales Tax*	
			TOTAL	

Enclose check or money order made payable to Conair. (We cannot accept cash, stamps or C.O.D. orders.) *CT, IL, AZ, and PA residents should add applicable state sales tax. Minimum order of \$10.00 or a \$2.00 handling charge will be added to order.

All prices include handling and return postage. Prices are subject to change without notice. Prices are valid only for shipments within the continental United States. Please allow 4-6 weeks for delivery.

To avoid delays, please print clearly. We must have a street address, as UPS cannot deliver to a P.O. box.

NAME _____

ADDRESS _____ APT. _____

CITY _____ STATE _____ ZIP _____

TELEPHONE () _____ (We call only if we have a question about your order.)

For information on other Conair haircut kit parts call: 1-800-3-CONAIR.

Mail to:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730

PALANCA DE AJUSTE DE LONGITUD DE CORTE

Al igual que las cortadoras profesionales, su cortadora está equipada con una palanca de ajuste de longitud de corte que permite ajustar el largo del corte a medida que corta el cabello.


La palanca de ajuste de longitud de corte permite cortar el cabello más corto o más largo, sin tener que instalar una guía. Para obtener un corte más corto, deslice el botón hacia arriba. Para obtener un corte más largo, deslice la palanca hacia abajo. El ajuste más bajo dejará el cabello tan corto como la guía más corta.

Usar el ajuste de longitud de corte prolonga la vida útil de las cuchillas, puesto que éstas nunca utilizan el mismo ángulo para cortar.

Su cortadora puede perder velocidad si recortes de cabello están trabados en las cuchillas.

Para limpiar las cuchillas sin tener que removerlas, siga el ejemplo de los profesionales: con el aparato encendido, mueva la palanca de ajuste de longitud de corte desde arriba hasta abajo varias veces.

Hacer esto después de cada uso, especialmente cuando se corta mucho cabello, mantendrá las cuchillas en condición óptima.

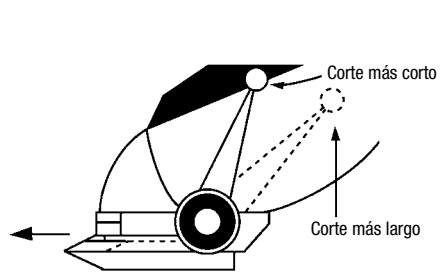

Instrucciones de uso y mantenimiento
Modelo HC221RGB

CONAIR®
JUEGO DE PELUQUERÍA

Este aparato está equipado con cuchillas extraíbles para facilitar la limpieza. Simplemente presione la parte superior de la cuchilla y ésta se desprenderá fácilmente del cabezal. Limpie la cuchilla con el cepillo de limpieza provisto y vuelva a instalarla. Alinee la parte inferior de la cuchilla con la parte posterior del cabezal. Empuje hasta que haga clic y quede firme en su lugar.

Si la cortadora deja de cortar, pero sigue funcionando, revise las cuchillas. Cámbielas si están embotadas. Puede pedir nuevas cuchillas por correo, mandando un cheque o un giro postal de US\$6.50 (incluye gastos de envío y manejo) a la dirección más abajo.



Conair Corporation
150 Milford Rd.
East Windsor, NJ 08520

ALMACENAJE

Después de usar el aparato, desconéctelo, permita que se enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños.

Cualquier otro servicio debe ser realizado por un técnico autorizado. Este aparato no contiene partes que puedan ser reparadas por el usuario. Para uso doméstico solamente.

NOTA: nunca jale el cable. Nunca retuerza ni enrolle el cable alrededor del aparato. Enrolle el cable sin apretar al lado del aparato y guárdelo en la caja de almacenaje.

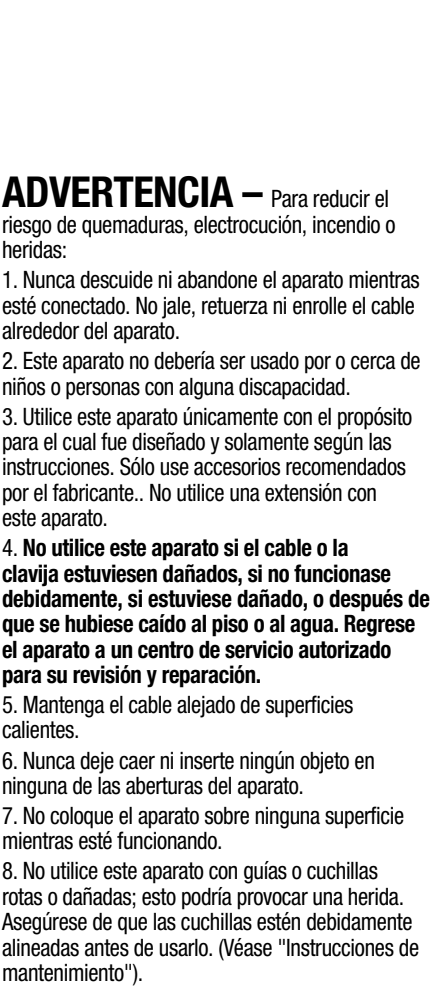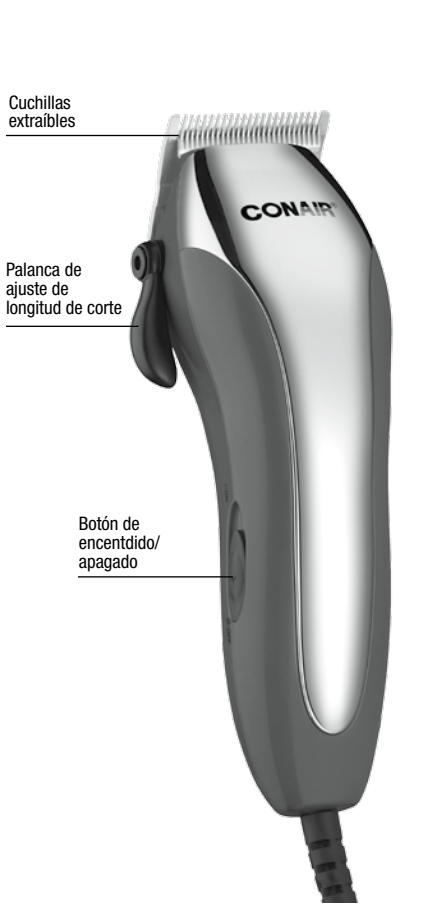


Instrucciones de uso y mantenimiento
Modelo HC221RGB

CONAIR®
JUEGO DE PELUQUERÍA

ADVERTENCIA: SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO

MANTÉNGALO ALEJADO DEL AGUA

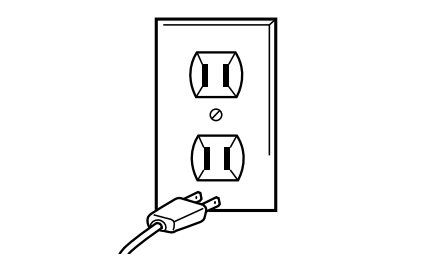

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿Sabe usted que un aparato eléctrico permanece bajo tensión aunque esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe los aparatos eléctricos después de usarlos.

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

GARANTÍA LIMITADA DE CINCO AÑOS

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 60 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado al dorso, junto con su recibo de compra y un cheque o giro postal de US\$3.00 por gastos de manejo y envío. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 60 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 60 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.



largos (incluso guías para cortar el cabello alrededor de las orejas), tijeras de peluquero, un peine de modelado con dientes sesgados, un peine de corte con dientes rectos, una capa grande, 3 pinzas, un cepillo para la nuca y una caja de almacenaje. Aceite lubricante, un cepillo de limpieza y un protector de cuchillas le permitirán mantener su cortadora en condición óptima.

GUÍA DE CONAIR PARA CORTAR EL CABELLO EN CASA

Antes de empezar:

- Revise el aparato. Cerciórese que está limpi que funciona correctamente y que las cuchillas están lubricadas.
- Coloque una toalla o una capa de cor alrededor del cuello de la persona a quien le va a cortar el cabello.
- Siente a la persona de manera que su cabe esté al nivel de sus ojos, para mayor visibilidad y control.
- Desenrede el cabello. Sostenga la cortado cómodamente en su mano. Ya está listo/a para empezar.

CORTES MEDIANOS A LARGOS

Empiece cortando poco cabello, hasta acostumbrase a cada guía. Use la guía más larga para empezar, y luego acorte el cabello con guías más cortas si desea.

- Guía 1 – Corta el cabello a 1/8" (3 mm)
- Guía 2 – Corta el cabello a 1/4" (6 mm)
- Guía 3 – Corta el cabello a 3/8" (9.5 mm)
- Guía 4 – Corta el cabello a 1/2" (12.5 mm)
- Guía 5 – Corta el cabello a 5/8" (16 mm)
- Guía 6 – Corta el cabello a 3/4" (19 mm)
- Guía 7 – Corta el cabello a 7/8" (22 mm)
- Guía 8 – Corta el cabello a 1" (25 mm)

Su nuevo juego de peluquería Conair® tiene todo lo que usted necesita para lograr cortes de cabello profesionales en su casa. Incluye una cortadora de cabello equipada con un potente motor de alto torque, duraderas cuchillas de acero inoxidable, y un botón ajuste de longitud de corte con 5 posiciones, para lograr resultados precisos. Simplemente elija el largo de cabello deseado y la cortadora ajustará automáticamente la altura de las cuchillas. Su conjunto también incluye 10 guías de distintos

Nuevamente, gracias por comprar un producto de Conair.

Las cuchillas de su cortadora Conair® son de acero inoxidable. Han sido diseñadas para proporcionar resultados precisos y profesionales. Si siente que las cuchillas tironean o enganchan el cabello, esto significa que están perdiendo el filo y debe reemplazarlas lo más pronto posible.

También deberá cambiar las guías si se pierden o se dañan. Se le hará más fácil cortar e cabello con exactitud profesional teniendo las herramientas adecuadas.

Conair ofrece una gran variedad de accesorios para cortar el cabello. Si su juego de peluquería no los incluye, los puede pedir por correo.

Las guías para la oreja izquierda y derecha permiten cortar el cabello alrededor de las orejas fácilmente y con precisión. Las pinzas son muy convenientes para sostener el cabello durante el corte. El peine de modelado permite desvanecer o cortar el cabello en ángulo. La capa de corte ofrece mayor comodidad durante el corte y la bolsa de almacenaje permite guardar su cortadora y todos sus accesorios en un mismo lugar.


Centro de servicio
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

©2014 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 North Glen Harbor Blvd., Glendale, AZ 85307



- Guía para la oreja izquierda – Corta el cabello alrededor de la oreja izquierda.
- Guía para la oreja derecha – Corta el cabello alrededor de la oreja derecha.

Deslice la guía encima de las cuchillas, y luego enganche la parte trasera.

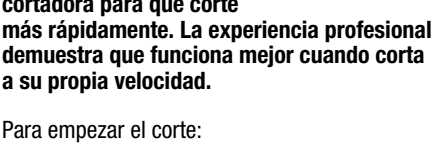

Para quitar la guía, jale la pata trasera hacia arriba, según se indica.

NOTA: nunca empuje la cortadora para que corte más rápidamente. La experiencia profesional demuestra que funciona mejor cuando corta a su propia velocidad.

Para empezar el corte:

- Peine el cabello en dirección de crecimiento natural.
- Empiece el recorte en un lado de la cabez usando la guía más larga, y cortando desde abajo hasta arriba. Sostenga la cortadora ligeramente contra el cabello, con los dientes de la guía apuntando hacia arriba y planos contra la cabeza. Pase la cortadora en el cabello gradualmente hacia arriba y hacia fuera, cortando poco cabello a la vez.

Haga lo mismo en el otro lado y atrás de la cabeza.


Nuevamente, gracias por comprar un producto de Conair.

Las cuchillas de su cortadora Conair® son de acero inoxidable. Han sido diseñadas para proporcionar resultados precisos y profesionales. Si siente que las cuchillas tironean o enganchan el cabello, esto significa que están perdiendo el filo y debe reemplazarlas lo más pronto posible.

También deberá cambiar las guías si se pierden o se dañan. Se le hará más fácil cortar e cabello con exactitud profesional teniendo las herramientas adecuadas.

Conair ofrece una gran variedad de accesorios para cortar el cabello. Si su juego de peluquería no los incluye, los puede pedir por correo.

Las guías para la oreja izquierda y derecha permiten cortar el cabello alrededor de las orejas fácilmente y con precisión. Las pinzas son muy convenientes para sostener el cabello durante el corte. El peine de modelado permite desvanecer o cortar el cabello en ángulo. La capa de corte ofrece mayor comodidad durante el corte y la bolsa de almacenaje permite guardar su cortadora y todos sus accesorios en un mismo lugar.

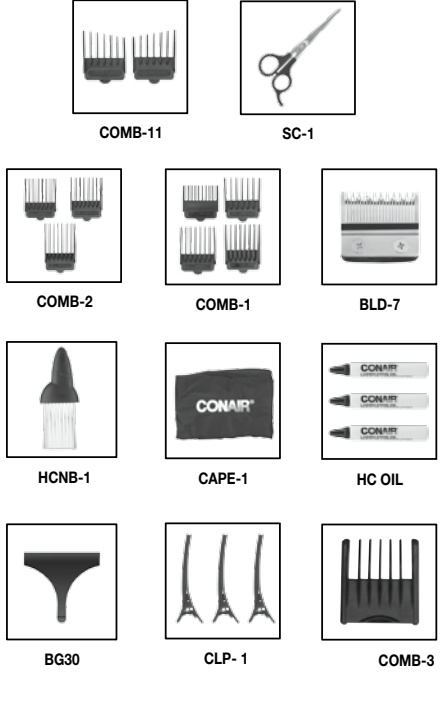

Favor de incluir un cheque o giro postal al nombre de Conair. Sentimos no poder aceptar dinero en efectivo, estampillas, ni pedidos contra reembolso. Los residentes de CT, IL, AZ y PA deben sumar al subtotal el impuesto estatal a las ventas. Se requiere un pedido mínimo de \$10.00; de lo contrario se sumará \$2.00 al pedido por gastos administrativos.

Los precios incluyen gastos de manejo y envío. Los precios están sujetos a cambio sin previo aviso. Precios válidos únicamente para envíos en la parte continental de los EE.UU. La entrega demora entre 4 y 6 semanas.

Para evitar demoras, por favor escriba claramente. Favor de incluir su dirección completa; UPS no puede hacer entregas a casillas postales.

NOMBRE _____
DIRECCIÓN _____
CIUDAD _____ ESTADO _____ CÓDIGO POSTAL _____
TELÉFONO () _____ (en caso de pregunta)
Para información sobre otras piezas de repuesto y accesorios, llame al: 1-800-3-CONAIR.

DESCRIPCIÓN	MODELO	PRECIO	CANTIDAD	TOTAL
Juego de cuchillas para el modelo HC221	BLD-7	\$6.50		
Juego de 4 guías (1/8", 1/4", 3/8", 1/2")	COMB-1	\$5.00		
Juego de 3 guías (5/8", 3/4", 7/8")	COMB-2	\$5.00		
Guía de 1"	COMB-3	\$1.00		
Guías para las orejas	COMB-11	\$2.00		
Cepillo para la nuca	HCNB-1	\$1.50		
Capa de vinilo deluxe	CAPE-1	\$5.00		
3 tubos de aceite lubricante	HC OIL	\$2.00		
Tijeras de peluquero	SC-1	\$2.00		
Protector de cuchillas	BG30	\$1.00		
3 pinzas	CLP-1	\$1.50		
			Subtotal	
			*Impuesto a la venta	
			TOTAL	

Favor de incluir un cheque o giro postal al nombre de Conair. Sentimos no poder aceptar dinero en efectivo, estampillas, ni pedidos contra reembolso. Los residentes de CT, IL, AZ y PA deben sumar al subtotal el impuesto estatal a las ventas. Se requiere un pedido mínimo de \$10.00; de lo contrario se sumará \$2.00 al pedido por gastos administrativos.

Los precios incluyen gastos de manejo y envío. Los precios están sujetos a cambio sin previo aviso. Precios válidos únicamente para envíos en la parte continental de los EE.UU. La entrega demora entre 4 y 6 semanas.

Para evitar demoras, por favor escriba claramente. Favor de incluir su dirección completa; UPS no puede hacer entregas a casillas postales.

NOMBRE _____
DIRECCIÓN _____
CIUDAD _____ ESTADO _____ CÓDIGO POSTAL _____
TELÉFONO () _____ (en caso de pregunta)
Para información sobre otras piezas de repuesto y accesorios, llame al: 1-800-3-CONAIR.



INSTRUCCIONES DE MANTENIMIENTO

MANTENIMIENTO DE SU CORTADORA CUCHILLAS EXTRAÍBLES

Su cortadora está equipada con cuchillas extraíbles, para facilitar el mantenimiento, la limpieza, y el reemplazo de las mismas.

Para retirar el juego de cuchillas: Sostenga la cortadora con el interruptor adelante. Empuje las cuchillas hacia arriba con el pulgar para desencajarlas. (Fig. 1)

Para instalar el juego de cuchillas: Asegúrese de que el botón o la palanca de ajuste de longitud de corte esté en la posición más larga. Sostenga la cortadora con la parte trasera adelante y enganche las cuchillas en su lugar hasta que calcen emitiendo un chasquido (Fig.2)

MANTENIMIENTO DE LAS CUCHILLAS
Lubrique las cuchillas antes, durante y después del uso. Esto asegurará un rendimiento óptimo. Sostenga el aparato boca abajo, lejos de su cuerpo, y aplique aceite sobre los dientes y en el costado de las cuchillas. Limpie el exceso de aceite con un paño suave seco.

ACEITE ESPECIAL

Para mantener las cuchillas de su cortadora Conair® en condición óptima, lubriquelas cada tres o cuatro cortes de cabello. Ponga unas cuantas gotas del aceite lubricante provisto en los dientes de las cuchillas. Encienda el aparato durante un minuto, y luego apáguelo. El aceite lubricante provisto ha sido específicamente diseñado para las cortadoras de alta velocidad de Conair®. Por lo tanto, no reducirá la velocidad de las cuchillas. Nunca utilice otro producto. No hay ningún sustituto al aceite de Conair.

