

3. For soft, romantic curls and volume, use large-sized rollers. **IMPORTANT: After using the styling setter several times, you will find the best combination for your hair and the results you desire.**
4. To remove rollers, hold roller in one hand and remove clip with the other hand. Gently drop roller (DO NOT PULL), and let curl bounce back once roller has been removed from hair. Let cool for one minute for a good set, then style your hair as desired.

MAINTENANCE

Your setter is designed for household use and is virtually maintenance free. This product represents the highest standards of workmanship and engineering research.

If cleaning becomes necessary, disconnect the appliance from the power source. Allow the setter to cool. Clean the unit with a cloth. (Occasionally you may want to clean rollers. Use a damp cloth and mild detergent or soap.) If any abnormal condition occurs, unplug the styling setter, allow it to cool, and return it to an authorized service representative for repair.

STORAGE

Allow setter to cool. Handle cord carefully to prolong its life; avoid jerking or straining at plug connections. Place setter out of reach of children in a safe, dry location.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER — To reduce the risk of electrocution:

1. **Always unplug this appliance immediately after using.**
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquids.
5. **Do not reach for an appliance that has fallen into water. Unplug immediately.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:


1. **An appliance should never be left unattended when plugged in.**
2. Do not touch the posts that hold the rollers. They are hot.
3. This appliance should not be used by, on, or near children or individuals with certain disabilities.

4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Conair.
5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized Conair service center for examination and repair.**
6. Keep the cord away from heated surfaces.
7. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
8. Never use while sleeping.
9. Never drop or insert any object into any opening.
10. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
11. Use setter on a level surface.
12. Do not wrap the cord around the appliance.
13. Do not use with a voltage converter.
14. Do not use an extension cord with this appliance.
15. Center of rollers will be hot. Hold rollers by ends to roll hair.

SAVE THESE INSTRUCTIONS

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

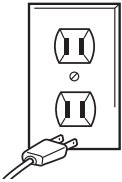

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

OPERATING INSTRUCTIONS

How to Operate Your Setter

1. Place setter on a firm, flat surface. With the pouch lid closed, plug cord into outlet. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
2. Once plugged in, the rollers will heat up in minutes. The fastest, most efficient heat-up is provided when the pouch lid is closed. Once the rollers are hot, you can begin styling your hair. (Please refer to **How To Curl and Style Your Hair** for further instruction.)
3. Never leave your setter plugged in and unattended. Always unplug the setter when not in use. Allow the setter to cool down after use. Store unit in a safe place.
4. When using the setter, your hair should be clean and dry (or slightly damp), never wet.

LIMITED ONE-YEAR WARRANTY (U.S. & CANADA ONLY)


Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.


INSTANT HEAT 12-ROLLER COMPACT SETTER

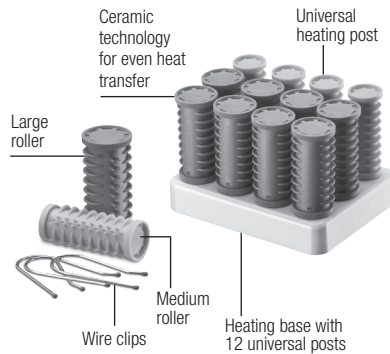

Features:

- 12 ceramic rollers: 8 large (1 in.), 4 medium (¾ in.) for better heat transfer
- 12 wire clips
- Compact pouch for easy storage and travel
- Dual voltage (120 or 230 volts, 60/50 Hz)
- Starter strips grip hair on rollers
- Heating base with 12 universal posts

How to Order Extra Rollers and Clips

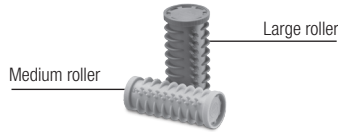

Each replacement pack comes with three rollers and clips. Each order for any size roller must be for three rollers minimum. Fill out order form and send check or money order payable to:

Conair Corporation
150 Milford Rd.
East Windsor, NJ 08520

Model	Description	Price
RP308	3 Large Rollers	\$6.00
RP309	3 Medium Rollers	\$5.00

Please add postage and handling to all orders. Postage and handling are as follows: Any order up to \$5.00 – add \$.50 to order. Any order from \$5.01 to \$10.00 – add \$1.00 to order. Any order from \$10.01 and over – add \$1.50 to order.

Name: _____

Address: _____

City: _____ State: _____ ZIP: _____

Daytime Phone: (____) _____

Model #: _____

Qty: _____

Note: Prices subject to change without notice.

compact
rollers



CONAIR®

Instruction & Styling Guide

Model HS29T

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

How To Curl and Style Your Hair

MEDIUM ROLLERS

Use on short to medium-length hair to create fullness or a tight curl. Tight curls can be created at the nape of the neck, and used to frame your face.




LARGE ROLLERS

Can be used on medium to long hair to create a romantic, pretty, and full curl.



1. Place ends of hair in teeth of starter strip and wind toward scalp. Roll hair firmly and secure roller with a clip by crossing clip over roller.

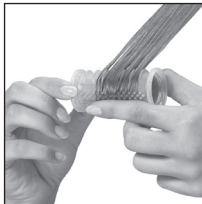

2. The firmness of the curl is regulated by several factors: heat-up time, diameter of roller, and length of time roller is left in the hair. For tight, firm curls, use small rollers. For longer-lasting curls, the rollers should be allowed to heat up longer and left in the hair for a longer period of time before removing.

3. Para crear ondas suaves y románticas y volumen, utilice rulos más grandes. **IMPORTANTE: la experiencia le enseñará cuánto tiempo dejar los rulos en el cabello para conseguir los resultados deseados.**
4. Para quitar los rulos, sostenga el rulo con una mano y retire el clip con la otra. Deslice suavemente el rulo (NO LO JALE) y permita que el cabello rebote libremente. Permita que el cabello se enfríe por un minuto antes de peinarlo para “fijar” los rizos.

MANTENIMIENTO

Este producto ha sido diseñado para uso doméstico y requiere poco mantenimiento. Ha sido fabricado usando un alto nivel de tecnología y competencia.

Cuando sea necesario limpiarlo, desenchúfelo, y permita que se enfríe. Limpie el aparato con un paño ligeramente humedecido. De vez en cuando, limpie los rulos usando un paño húmedo y detergente o jabón suave. En caso de mal funcionamiento, desconecte el aparato, permita que se enfríe y regréselo a un centro de servicio autorizado.

ALMACENAJE

Permita que el aparato se enfríe. Manipule el cable con cuidado para prolongar su vida útil. No lo tiree ni lo retuerza, especialmente al nivel del enchufe. Guarde el aparato en un lugar seco y seguro, fuera del alcance de los niños.

MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, especialmente en la presencia de niños, siempre debe tomar precauciones básicas de seguridad, incluso las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO MANTÉNGALO ALEJADO DEL AGUA

PELIGRO — Para reducir el riesgo de electrocución:

1. **Desconecte el aparato inmediatamente después del uso.**
2. No lo use en el baño o la ducha
3. No coloque ni guarde el aparato donde pue caerse o ser empujado a una bañera o un lavabo.
4. No coloque el aparato ni lo deje caer en agua ni en ningún otro líquido.
5. **No trate de alcanzar el aparato después de que se hubiese caído al agua; desconéctelo inmediatamente.**


ADVERTENCIA – Para reducir el riesgo de quemaduras, electrocución, incendio o heridas

1. Nunca descuide ni abandone el aparato mientras está conectado.
2. No toque las barras calentadoras q sostienen los rulos; están muy calientes.
3. Este aparato no debe ser usado por, sob

GUARDE ESTAS INSTRUCCIONES

ADVERTENCIA: SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO.

MANTÉNGALO ALEJADO DEL AGUA

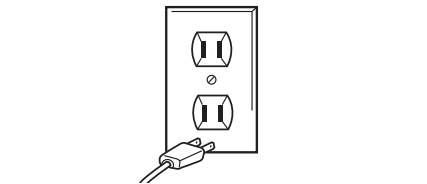

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿Sabe usted que un aparato eléctrico permanece bajo tensión aunque esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe los aparatos eléctricos después del uso.

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

INSTRUCCIONES DE OPERACIÓN

Modo de empleo

1. Ponga el aparato sobre una superficie plana y segura. Cierre la cubierta y conecte el cable a una toma de corriente. el cable de este aparato está dotado de una clavija polarizada (una pata es más ancha que otra). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente polarizada. Si no entrara en la toma de corriente, invírtala. Si aún no entrara completamente, comuníquese con un electricista. No intente ir en contra de esta función de seguridad.
2. Una vez conectado el aparato, los rulos calentarán en tan solo minutos. Mantenga la cubierta cerrada hasta que los rulos estén calientes; esto logrará un calentamiento más rápido y efectivo. Empiece a marcar el cabello cuando los rulos lleguen a la temperatura deseada. (véase la sección “**CÓMO MARCAR EL CABELLO**” para más información).
3. Nunca descuide ni abandone el aparato después de encenderlo. Desconecte el aparato después del uso. Permita que el aparato se enfríe antes de guardarlo. Guárdelo en un lugar seguro.
4. Su cabello debe estar limpio y seco, ligeramente húmedo. No fije el cabello mojado.

GARANTÍA LIMITADA DE UN AÑO (válida en los EE.UU. y en Canadá solamente)

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 12 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación. Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado al dorso, junto con su recibo de compra y un cheque o giro postal de US\$5.00 para cubrir los gastos de manejo y envío. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 12 meses a partir de la fecha de fabricación. **CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 12 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted. CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.**

Para registrar su producto, visítenos en: www.conair.com/registration

CENTRO DE SERVICIO
CONAIR CORPORATION
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307


©2016 Conair Corporation
150 Milford Road
East Windsor, NJ 08520
7475 N. Glen Harbor Blvd.,
Glendale, AZ 85307

tal.2017.04.01

16PH022328

IB-14494

Cómo pedir más rulos/clips

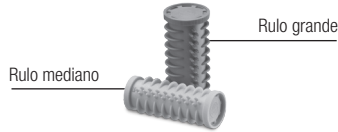

Cada paquete de accesorios de repuesto incluye tres rulos y tres clips. Por lo tanto, debe pedir un mínimo de tres rulos. Llene el formulario a continuación y mande un cheque o un giro postal a:

Conair Corporation
150 Milford Rd.
East Windsor, NJ 08520

Modelo	Producto	Precio
RP308	3 rulos grandes	\$6.00
RP309	3 rulos medianos	\$5.00

Gastos de manejo y envío (dentro de los EE.UU.): US\$0.50 para pedidos de menos de \$5.00, US\$1.00 para pedidos entre \$5.01 y \$10.00 US\$1.50 para pedidos de \$10.01 y más.

Nombre: _____

Dirección: _____

Ciudad: _____ Estado: _____

Código postal: _____

Teléfono: () _____

Modelo: _____

Cantidad: _____

Nota: los precios están sujetos a cambio sin previo aviso.

Cómo marcar el cabello

RULOS MEDIANOS

Úselos para dar volumen y crear rizos apretados sobre el cabello corto o medio-largo. Los rizos apretados son perfectos en la nuca y alrededor del rostro.




RULOS GRANDES

Úselos para crear rizos suaves y románticos sobre el cabello medio-largo a largo.



1. Coloque las puntas sobre la tira, y enrolle el rulo hacia el cuero cabelludo. Enrolle el cabello firmemente y sujete el rulo con un clip puesto alrededor del mismo.

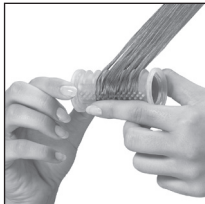

2. La textura de los rizos dependerá del diámetro de los rulos, de su temperatura y del tiempo de pausa. Para obtener rizos apretados y firmes, utilice los rulos más pequeños. Para conseguir rizos más duraderos, permita que los rulos se calienten por más tiempo y déjelos en el cabello por más tiempo.

compact rollers



CONAIR®

Instrucciones

Modelo HS29T

Para su seguridad y para disfrutar plenamente de este producto, siempre lea cuidadosamente las instrucciones antes de usarlo.