

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

DANGER – Any appliance is electrically live even when the switch is off. To reduce the risk of death by electric shock:

1. **Always unplug appliance immediately after using.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or

3. This appliance should not be used by, on or near children or individuals with certain disabilities.
4. Use this appliance only for its intended use, as described in this manual. Do not use attachments not recommended by the manufacturer.

5. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**

6. Keep the cord away from heated surfaces.
7. Never use while sleeping.
8. Never drop or insert any object into any opening or hose.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Unit is hot when in use. Do not let heated surfaces touch eyes or skin.
11. **Do not place the heated unit directly on any surface while it is hot or plugged in.**
12. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of hair, lint and other debris.
13. Do not use an extension cord with this appliance.
14. Do not touch hot surfaces of the appliance. Use handles or knobs.

15. Do not attempt to touch the housing of your appliance near the straightening plates, as it is hot when in use.
16. Do not use with a voltage converter.
17. This appliance is not a toy. Keep away from children.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This flat iron is intended for household use. Use on Alternating Current (60 hertz) only. This unit is designed to be operated at 120 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

NOTE: Do not use this styling appliance on hair extensions.

STYLING WITH THE NEW EASY-GLIDE, SHEA BUTTER-INFUSED, CERAMIC-COATED FLOATING PLATES

Both plates of your new flat iron are designed with a little give, to “float” in the iron. This provides better contact with hair and eliminates gaps to achieve straighter results faster. The shea butter-infused, easy-glide, ceramic-coated surface is one of the latest and best technological advances in hair appliances. The ceramic, even-heat distribution produces the ultimate in silky, shiny, healthy-looking hair. You’ll find that hair glides easily over the surface of the plates as you’re straightening, and that it is easier to clean styling product residue, etc., off the plates after each use. The ceramic surface also helps smooth down flyaways. As you smooth your hair, heat is evenly distributed so that the style you create has a salon-perfect, silky smooth, shiny finish. Hair also glides right through the plates after it’s straightened.

USING INSTANT HEAT, THE HIGH HEAT TEMPERATURE SETTINGS & UNIFORM HEAT RECOVERY SYSTEM

This flat iron maintains constant temperature during use for precision styling.

Conair’s professional salon standards of engineering provide you with a uniform and improved heat recovery system that maintains the iron at constant temperatures. There is a constant surge of power to ensure that heat is continuously and quickly delivered for optimal styling results, unlike other units, which lose heat during use. This provides consistent styling power so that every strand of your hair gets the same level of heat and comes out the same way for a perfect finish.

The appliance’s 5 temperature settings and instant heat technology combine to provide styling versatility for all hair textures. If you have fine hair, a low temperature will provide the best results. If you have thick, wavy or coarse hair, keep the heat setting high. You can vary the appliance’s temperature according to your particular need!

TEMPERATURE SETTING GUIDE

LED TEMP. CONTROL	HAIR TYPE
Power/Low 338°F	Fine/Thin Hair
Medium 365°F	Medium/Normal Hair
Med-High 392°F	Wavy/Curly Hair
High/Max 419°F/455°F	Coarse/Thick Hair

SHEA BUTTER-INFUSED PLATES

Your new flat iron is designed with shea butter-infused ceramic plates, which help protect hair, minimize damage and add shine with each pass.

GETTING STARTED

Plug the flat iron cord into any household outlet (120V). Press the ON/OFF button. The power light will illuminate. Press the "+" and "-" buttons to selected your desired heat setting. To turn off, press the ON/OFF button.

WARNING: The flat iron’s shea butter-infused, ceramic-coated plates will get very hot within a few seconds and should not come into contact with the skin after the flat iron has been turned on.

Never leave your flat iron on and unattended. However, should you fail to turn the unit off, it will shut itself off automatically within 60 minutes.

GET TO KNOW YOUR FLAT IRON



TO STRAIGHTEN HAIR

Hair should be clean and completely dry before using the flat iron. For best results, use a light styling product before blow-drying hair.

1. Start with a hair section that is 1½ inches wide and no more than ½ inch thick.
2. Open the iron and place the hair section between the two hot plates, close to the scalp. Trap hair between the plates by firmly squeezing the handles together.
3. While maintaining the tension, slowly pull the unit down along the hair section toward the ends. At the ends, release the pressure on the handle and allow the hair to slide out.
4. Repeat the process on additional sections of hair until you achieve the hairstyle you desire. It may be necessary to repeat the process on certain areas, depending on the texture of your hair.

Some experience is necessary when learning to use this flat iron. After using the iron several times, you will learn the ideal way to straighten and style your hair.

ADD VOLUME AND SHAPE

To add flips and waves, secure ends in between plates and wrap hair around the outer housing. It’s an easy way to add shape to straight styles. Turn your wrist up or under to create flips, add curl or more body.

FEDERAL COMMUNICATIONS COMMISSION NOTICE

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SUPPLIER’S DECLARATION OF CONFORMITY

Brand: InfinitiPRO by Conair®
Model No.: CS3011NR
Description: 1 inch Flat Iron
Responsible Party: Conair Corporation, 1 Cummings Point Road, Stamford, CT 06902 (203) 351-9000
Standards: FCC Part 15 Subpart B, ANSI C63.4-2014
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesirable operation.
DATE OF ISSUE: 12/31/2018

USER MAINTENANCE

Your flat iron is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow it to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION


NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your iron is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. **Do not jerk or strain cord at plug connections.** Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

**WARNING:
IF YOU THINK THE
POWER IS OFF WHEN
THE SWITCH IS OFF,
YOU’RE WRONG.**

KEEP AWAY FROM WATER

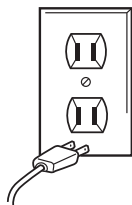

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

LIMITED FIVE-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

BEAUTY TIPS

To achieve the looks you love and for more great InfinitiPRO by Conair® products, visit infiniti.conair.com

Please register this product at www.conair.com/registration

SERVICE CENTER

CONAIR CORPORATION
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307
©2021 Conair Corporation

For info on any Conair product, call 1-800-3-CONAIR or visit us on the web at www.conair.com

INFINITI PRO
BY CONAIR
— ULTRA-HIGH HEAT —



INSTRUCTIONS AND STYLING GUIDE

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

1 IN. (25MM) SHEA BUTTER-INFUSED FLAT IRON

model CS3011NR – all versions

20PA074587

IB-16930

MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, especialmente en presencia de niños, siempre debe tomar precauciones básicas de seguridad, entre ellas las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO MANTÉNGALO ALEJADO DEL AGUA

PELIGRO – Cualquier aparato enchufado permanece bajo tensión, aunque esté apagado. Para reducir el riesgo de electrocución:

- Siempre desenchufe el aparato inmediatamente después del uso.**
- No lo use en el baño o la duch
- No coloque ni guarde el aparato don pueda caerse o ser empujado a una bañera o un lavabo.
- No coloque el aparato ni lo deje caer agua u otro líquido.
- Si el aparato se cae al agua, desenchúfe inmediatamente; **no trate de alcanzar la unidad en el agua.**

ADVERTENCIA

– Para reducir

AVISO DE LA COMISIÓN FEDERAL DE COMUNICACIONES (FCC)

ADVERTENCIA: Se advierte que las modificaciones no aprobadas expresamente por la autoridad competente en materia de conformidad podrían rescindir el permiso del usuario para operar el equipo.

Este artefacto cumple con la Sección 15 de la Normativa FCC. Su funcionamiento está sujeto a las dos condiciones siguientes: (1) Este artefacto no puede causar ninguna interferencia perjudicial, y (2) Este artefacto debe aceptar cualquier interferencia recibida, incluso aquellas que pueden causar un funcionamiento no deseado.

NOTA: Este equipo ha sido probado y se ha determinado que cumple con los límites de un dispositivo digital de Clase B, según la Sección 15 de la Normativa FCC. Estos límites han sido concebidos para proporcionar una protección razonable contra interferencias perjudiciales en las instalaciones de edificios. Este equipo genera, usa y puede irradiar energía de radiofrecuencia (RF) y, si no ha sido instalado o usado conforme a las instrucciones, puede ocasionar interferencias perjudiciales para las comunicaciones por radio. No obstante, no hay garantía de que aquellas interferencias no ocurran en una instalación particular. Si este equipo produce alguna interferencia perjudicial en la recepción de radio o televisión, lo que podrá determinarse encendiendo y apagando el equipo, se recomienda tratar de corregir la interferencia, adoptando una o más de las siguientes medidas:

- Reorientar o reubicar la antena receptora.
- Aumentar la distancia entre el equipo y el receptor.

el riesgo de quemaduras, electrocución, incendio o heridas:

- Nunca descuide/deje el aparato sin vigilancia mientras está conectado.**
- No jale, retuerza ni enrolle el cable alrededor del aparato.**
- Este aparato no debe ser usado por, o cerca de niños o personas con cierta discapacidades.
- Use este aparato únicamente con propósito para el cual fue diseñado y solamente según las instrucciones. Solo use accesorios recomendados por el fabricante.
- No use este aparato si el cable o el enchufe están dañados, si no funciona correctamente, si está dañado, o después de que se haya caído, incluso en el agua; devuélvalo a un centro de servicio autorizado para su revisión y reparación.**
- Mantenga el cable alejado de superfici calientes.
- No lo use mientras duerme.
- Nunca deje caer ni inserte ningún obje en ninguna de las aberturas.
- No lo use en exteriores, ni lo ha funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.
- Este aparato se pone muy calie durante el uso; mantenga los ojos y la piel alejados de las superficies calientes.
- No coloque el aparato sobre ninguna superficie mientras está caliente o enchufado.**

12. Nunca obstruya los orificios ventilación, ni coloque el aparato sobre una superficie blanda, tal como una cama o un sofá, donde se puedan obstruir. Mantenga los orificios de ventilación libres de pelusas, cabellos y elementos similares.

13. No use un cable alargador/de extens con este aparato.

14. No toque las superficies calientes; use los mangos/asas y los botones/perillas.

15. La carcasa del aparato cerca de placas se pone muy caliente durante el uso; no la toque.

16. No use este aparato con un converti de voltaje.

17. Este aparato no es un juguue manténgalo fuera del alcance de los niños.

12. Nunca obstruya los orificios ventilación, ni coloque el aparato sobre una superficie blanda, tal como una cama o un sofá, donde se puedan obstruir. Mantenga los orificios de ventilación libres de pelusas, cabellos y elementos similares.

13. No use un cable alargador/de extens con este aparato.

14. No toque las superficies calientes; use los mangos/asas y los botones/perillas.

15. La carcasa del aparato cerca de placas se pone muy caliente durante el uso; no la toque.

16. No use este aparato con un converti de voltaje.

17. Este aparato no es un juguue manténgalo fuera del alcance de los niños.

GUARDE ESTAS INSTRUCCIONES DE OPERACIÓN

Para uso doméstico solamente. Úselo solamente con corriente alterna (60 Hz). Este aparato ha sido diseñado para funcionar con corriente de 120 V AC

El cable de este aparato cuenta con un enchufe polarizado (una pata es más ancha que la otra). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente polarizada. Si no entra en la toma de corriente, inviértalo. Si aun así no entra completamente, comuníquese con un

electricista. No intente ir en contra de esta función de seguridad.

NOTA: No use este aparato en cabello sintético/extensiones.

REVESTIMIENTO DE FÁCIL DESLIZAMIENTO DE CERÁMICA CON INFUSIÓN DE MANTECA DE KARITÉ

Su nueva plancha alisadora cuenta con placas “flotantes” diseñadas para proporcionar un mejor contacto con el cabello y obtener resultados más lisos, más rápidamente. El revestimiento de fácil deslizamiento de cerámica con infusión de manteca de karité es lo último—y lo mejor—en tecnología de aparatos de peluquería. La cerámica distribuye el calor uniformemente y deja el cabello sedoso, brillante y resplandeciente de salud. Notará que el cabello se desliza fácilmente entre las placas y que estas son muy fáciles de limpiar después de cada uso. El revestimiento de cerámica también ayuda a controlar la estática.

A medida que alisa el cabello, el calor se distribuye uniformemente. El resultado es un cabello liso, sedoso y brillante. Además, las placas no retienen el cabello después de alisarlo.

CALENTAMIENTO INSTANTÁNEO, TEMPERATURA VARIABLE Y SISTEMA DE RECUPERACIÓN DEL CALOR

Este aparato calienta muy rápidamente y mantiene la temperatura constante durante el uso, para resultados precisos.

Disfruta de los mismos estándares de calidad e ingeniería que los aparatos profesionales y cuenta con un sistema de recuperación del calor. A diferencia de otras herramientas cuya temperatura baja durante el uso, este sistema mantiene la temperatura constante, sin pérdida de calor. El aparato usa la misma temperatura para peinar cada sección, lo que permite obtener resultados uniformes y peinados perfectos.

Este aparato cuenta con 5 opciones de temperatura para todo tipo de cabello, y se calienta muy rápidamente. Si su cabello es fino/delgado, le recomendamos que use temperatura baja. Si su cabello es espeso, grueso, ondulado o resistente, le recomendamos que use un nivel de temperatura alto. *¡Personalice la temperatura según su tipo de cabello!*

AJUSTE DE TEMPERATURA	TIPO DE CABELLO
Encendido/Bajo (338 °F)	Cabello fino/delgado
Medio (365 °F)	Cabello medio/normal
Medio-alto (392 °F)	Cabello ondulado/rizado
Alto/Máx. (419 °F/455 °F)	Cabello grueso/espeso

GUÍA DE TEMPERATURA

GARANTÍA LIMITADA DE CINCO AÑOS (VÁLIDA EN LOS EE.UU. Y EN CANADÁ SOLAMENTE)

Conair reparará o reemplazará (a su opción) este producto sin cargo por un período de 60 meses a partir de la fecha de compra si presenta defectos de fabricación o materiales.

Para obtener servicio técnico bajo esta garantía, devuelva el producto defectuoso al Centro de Servicio indicado en el reverso, junto con su recibo de compra. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 60 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO, PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 60 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones en la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE

PLACAS CON INFUSIÓN DE MANTECA DE KARITÉ

Las placas de su nueva plancha alisadora cuentan con revestimiento de cerámica con infusión manteca de karité para ayudar a proteger el cabello, minimizar los daños y dar brillo con cada pasada.

FUNCIONAMIENTO BÁSICO

Enchufe el aparato en una toma de corriente de 120 V. Oprima el botón ON/OFF; la luz de encendido se encenderá. Presione repetidamente los botones “+” y “–” para elegir el ajuste de temperatura deseado. Para apagar el aparato, presione el botón ON/OFF.

ADVERTENCIA: Las placas con revestimiento de cerámica con infusión de manteca de karité se ponen muy calientes en segundos; evite el contacto con la piel después de encender el aparato.

Nunca descuide/deje el aparato sin vigilancia después de encenderlo. Para su seguridad, el aparato se apagará automáticamente después de 60 minutos.

FAMILIARÍCESE CON SU PLANCHA ALISADORA

Placas de 1 in. (25 mm) con revestimiento de cerámica con infusión de manteca de karité

Placas extralargas para resultados mejores y más rápidos

Diseño ultradelgado

Sistema de recuperación del calor

Calentamiento instantáneo

Elemento calentador de cerámica

5 ajustes de temperatura ultra-altos con indicadores LED

Botón de encendido/apagado

Apagado automático

Voltaje único

Cable giratorio

PARA ALISAR EL CABELLO

El cabello debe estar limpio y seco. Para obtener resultados óptimos, aplique una loción fijadora ligera en el cabello antes de secarlo.

1. Divida el cabello en secciones de 1½ i (4 cm) de ancho por un máximo de ½ in. (1.5 cm) grueso.

2. Coloque el aparato cerca del cue cabelludo. Abra las placas y coloque una sección de cabello entre ellas. Cierre las placas.

3. Manteniendo la tensión, baje lentamen la plancha hacia las puntas. Suelte el cabello tras llegar a las puntas.

4. Repita el proceso en cada sección cabello, hasta conseguir el estilo deseado. Dependiendo de la textura del cabello, puede que sea necesario repetir el proceso varias veces en algunas secciones.

Nota: Será necesario experimentar un poco al principio. Con práctica, encontrará la manera perfecta para alisar y peinar su cabello fácil y rápidamente.

CÓMO DAR VOLUMEN

Para doblar las puntas y crear ondas, agarre las puntas del cabello entre las extremidades de las placas y enrolle en cabello alrededor de las placas cerradas. Es una manera fácil de dar volumen a cualquier peinado liso. Gire la muñeca hacia arriba o abajo para doblar las puntas hacia fuera/dentro, rizar o dar cuerpo.

REVISIÓN DE LA GARANTÍA DE CINCO AÑOS (VÁLIDA EN LOS EE.UU. Y EN CANADÁ SOLAMENTE)

INFINITI PRO BY CONAIR TEMPERATURA ULTRA-ALTA

INSTRUCCIONES Y GUÍA DE PEINADO

Para registrar su producto, visítenos en: **www.conair.com/registration**

Para más información sobre los productos Conair®, llame al 1-800-3-CONAIR o visítenos en **www.conair.com**

Para registrar su producto, visítenos en: **www.conair.com/registration**

CENTRO DE SERVICIO
CONAIR CORPORATION
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307
©2021 Conair Corporation

Para más información sobre los productos Conair®, llame al 1-800-3-CONAIR o visítenos en **www.conair.com**

20PA074587 **IB-16930**

PLANCHA ALISADORA
DE 1 IN. (25 MM) CON
INFUSIÓN DE MANTECA DE KARITÉ
modelo CS3011NR (todas las versiones)