


TO ORDER EXTRA ROLLERS

If you need extra rollers or clips:

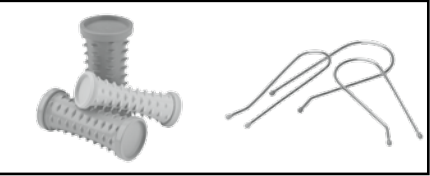

	Large	Medium	Small	Clips
Each box comes packed with three rollers. Each order for any size roller must be for three rollers minimum. Clips come packed 12 clips per carton.				
Model	Description			Price
RP38S	3 Small Rollers			\$3.25
RP38M	3 Medium Rollers			\$3.75
RP38L	3 Large Rollers			\$4.00
RP38CL	12 Clips			\$1.75

Please add postage and handling to all orders as follows:
Orders up to: \$5.00 – add \$.50
\$5.01 to \$10.00 – add \$1.00
\$10.01 add over – add \$1.50


MAIL ORDER TO: **Conair Corporation**
150 Milford Road
East Windsor, NJ 08520

OR: **Conair Corporation**
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

Include return name and address and model number of replacement rollers. Please make check payable to Conair Corporation.

WARNING: IF YOU THINK
THE POWER
IS OFF WHEN THE
SWITCH IS OFF,
YOU'RE WRONG.

KEEP AWAY FROM WATER

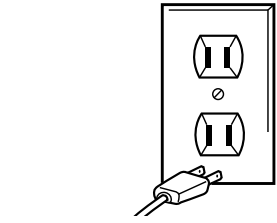

Everyone knows that electricity and water are a dangerous combination. But did you know that an electrical appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG
SMALL APPLIANCES

IMPORTANT SAFETY
INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS
BEFORE USING
KEEP AWAY FROM WATER

DANGER — To reduce the risk of electrocution:

1. Always unplug this appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. Do not reach for an appliance that has fallen into water. Unplug immediately.

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.

3. Use this appliance only for its intended use as described in the manual. Do not use attachments not recommended by Conair.
4. Never operate this appliance if it is not working properly, has a damaged cord or plug, or if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.
5. Do not wrap the cord around the appliance.
6. Keep the cord away from heated surfaces.
7. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
8. Never use while sleeping.
9. Never drop or insert any object into any opening or hose.
10. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
11. Center of rollers will be hot. Hold rollers by ends to roll hair.
12. Use hairsetter on a level surface.
13. Do not touch the posts that hold the rollers. They are hot.
14. Do not use an extension cord with this appliance.
15. Do not operate the unit with a voltage converter.

SAVE THESE
INSTRUCTIONS
OPERATING
INSTRUCTIONS

1. Place hairsetter on flat surface and plug into outlet. Red light should illuminate, indicating the hairsetter is on and heating rollers. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
2. Allow rollers to heat with lid closed, as this will provide the fastest, most efficient heat-up. Once the rollers are hot, you can begin setting your hair. Allow rollers to heat longer for tighter curls. One roller has a “ready dot” on top. The ready dot will turn from red to transparent white, indicating optimum curling temperature has been reached. Never leave your hairsetter on and unattended. Always unplug the hairsetter when not in use. Allow hairsetter to cool, and store in a safe place.
3. Hair should be clean and dry or slightly damp – never wet – when setting. Hair will not set correctly if too damp.

LIMITED ONE YEAR WARRANTY
(U.S. AND CANADA ONLY)

Conair, will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or material.


To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

COMPACT HAIRSETTER
20 MULTI-SIZED ROLLERS

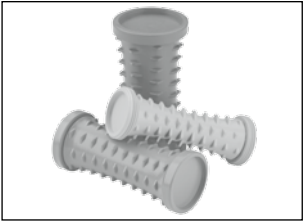

20 TANGLE-FREE ROLLERS:
6 large, 6 medium, 8 small


MAINTENANCE

Your hairsetter is designed for household use and is virtually maintenance free. This product represents the highest standards of workmanship and engineering. If cleaning becomes necessary, disconnect the appliance from the power source. Allow to cool, and wipe unit with a damp cloth. Occasionally you may want to clean your rollers. To do so, use a damp cloth and mild detergent or soap. If abnormal conditions occur, unplug the hairsetter, allow it to cool, and return it to an authorized service representative for repair.

STORAGE


Allow hairsetter to cool. Handle cord carefully for longer life; avoid jerking or straining at plug connections. Place hairsetter out of reach of children in a safe, dry location.

HOW TO CURL YOUR HAIR:

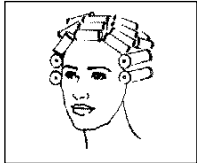


SMALL ROLLERS

Use on short to medium-length hair to create fullness or a tight curl. Tight curls can be created at the nape of the neck and used to frame your face.

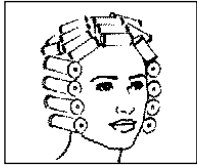

MEDIUM ROLLERS

Can be used on medium to long hair to create a loose, yet bouncy and full curl.

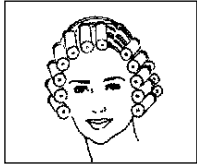

LARGE ROLLERS

Can be used on medium to long hair to create loose curls and volume, or the smooth, sleek lines of sophisticated hairstyles.



Instruction Book for Model HS38

CONAIR®


For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IB-15078

1. Place ends of hair on roller and wind toward scalp. Roll hair firmly and secure roller with a clip by crossing clip over roller.
2. The firmness of the curl is regulated by several factors: heat-up time, diameter of roller, and length of time roller is left in the hair. For tight, firm curls, use small-sized rollers. For longer-lasting curls, the rollers should be allowed to heat up longer and left in the hair for a longer period of time before removing.
3. For soft, curvy curls and volume, use medium or large-sized rollers. After using your hairsetter several times, you will find the best timing and roller sizes needed to attain the hairstyle desired.
4. To remove rollers, hold roller in one hand and remove clip with the other hand. Gently drop roller (DO NOT PULL) and let curl bounce back once roller has been removed from hair. Let cool for one minute for a good set, then style your hair as desired.

CÓMO PEDIR MÁS RULOS

Si necesita más rulos o clips:

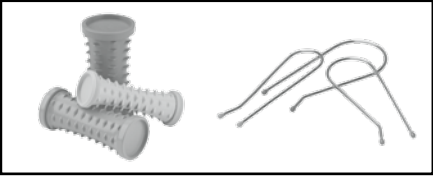

Rulos

Clips

Los rulos vienen en paquetes de tres. Por lo tanto, debe pedir un mínimo de tres rulos. Los clips vienen en paquetes de doce.

Modelo	Producto	Precio
RP38S	3 rulos pequeños	\$3.25
RP38M	3 rulos medianos	\$3.75
RP38L	3 rulos grandes	\$4.00
RP38CL	12 clips	\$1.75

Gastos de manejo y envío:

Añada:	\$0.50 para los pedidos de hasta \$5.00
	\$1.00 para los pedidos desde \$5.01 hasta \$10.00
	\$1.50 para los pedidos de más de \$10.01

MANDE SU PEDIDO A: **Conair Corporation**
150 Milford Road,
East Windsor, NJ 08520

O: **Conair Corporation**
7475 North Glen Harbor Blvd.,
Glendale, AZ 85307

Incluya su nombre, dirección y el modelo deseado. Favor de incluir un cheque a nombre de Conair Corporation.

MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, especialmente en la presencia de niños, debe tomar precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO MANTÉNGALO ALEJADO DEL AGUA

PELIGRO — Para reducir el riesgo de electrocución:


1. **Desconecte el aparato inmediatamente después del uso.**
2. No lo use en el baño o la ducha.
3. No coloque ni guarde el aparato donde pueda caer o ser empujado a una bañera o un lavabo.
4. No coloque el aparato ni lo deje caer al agua u otro líquido.
5. **No trate de alcanzar el aparato después de que hubiese caído al agua; desconéctelo inmediatamente.**

ADVERTENCIA — Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

1. Nunca deje el aparato desatendido mientras está conectado.

ADVERTENCIA: SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO, ESTÁ EQUIVOCADO

MANTÉNGALO ALEJADO DEL AGUA

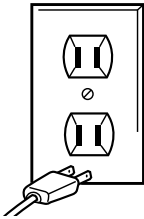

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿Sabe usted que un aparato eléctrico permanece bajo tensión aunque esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe los aparatos eléctricos después de usarlos.

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

2. Supervise el uso de este aparato cuidadosamente cuando esté usado por, sobre o cerca de niños o personas con alguna discapacidad.
3. Utilice este aparato únicamente con el propósito para el cual fue diseñado y solamente según las instrucciones. Sólo use accesorios recomendados por el fabricante.
4. **No utilice este aparato si el cordón o la clavija estuviesen dañados, después de que hubiese funcionado mal o que se hubiese caído o si estuviese dañado. Regréselo a un centro de servicio autorizado para su revisión y reparación.**
5. No enrolle el cable alrededor del aparato.
6. Mantenga el cable alejado de superficies calientes.
7. Nunca bloquee las aberturas de aire ni coloque el aparato sobre una superficie blanda, como una cama o un sofá, donde se puedan obstruir. Mantenga las aberturas libres de pelusas, cabellos y elementos similares.
8. Nunca utilice este aparato mientras duerme.
9. Nunca deje caer ni inserte ningún objeto en ninguna de las aberturas del aparato.
10. No lo utilice en exteriores, ni lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.
11. El centro de los rulos se vuelve muy caliente; sostenga los rulos por los extremos al enrollar el cabello.
12. Ponga el aparato sobre una superficie llana.
13. No toque los postes que sostienen los rulos; están muy calientes.
14. No utilice una extensión con este aparato.
15. No utilice este aparato con un convertidor de voltaje.

GARANTÍA LIMITADA DE UN AÑO (VÁLIDA EN LOS EE.UU. Y EN CANADÁ SOLAMENTE)

Conair reparará o reemplazará (a su opción) su aparato sin cargo por un período de 12 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación.


Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque o giro postal de US\$3.00 por gastos de manejo y envío. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 12 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 12 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

JUEGO DE RULOS CALIENTES COMPACTO

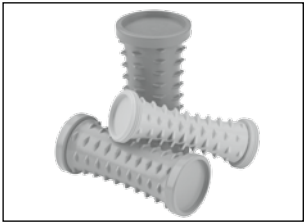

20 RULOS DE VARIOS TAMAÑOS 20 RULOS ANTIENTREDO:

6 grandes, 6 medianos y 8 pequeños

INSTRUCCIONES


DE MANTENIMIENTO

Este producto ha sido diseñado para uso doméstico y requiere poco mantenimiento. Ha sido fabricado usando un alto nivel de tecnología y competencia. Cuando sea necesario limpiarlo, desenchúfelo, permita que se enfríe y limpie el cuerpo del aparato con un paño ligeramente humedecido. De vez en cuando, limpie los rulos usando un paño húmedo y detergente o jabón suave. En caso de mal funcionamiento, desconecte el aparato, permita que se enfríe y regréselo a un centro de servicio autorizado.

ALMACENAJE


Permita que el aparato se enfríe. Manipule el cable con cuidado para prolongar su vida útil. No lo tiree ni lo retuerza, especialmente al nivel del enchufe. Guarde el aparato en un lugar seco y seguro, fuera del alcance de los niños.

CÓMO MARCAR EL CABELLO

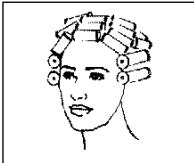

RULOS PEQUEÑOS

Úselos para dar volumen y crear rizos apretados sobre el cabello corto o medio-largo. Rizos apretados son perfectos en la nuca y alrededor del rostro.

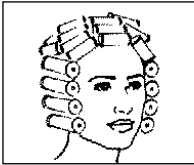

RULOS MEDIANOS


Úselos para crear rizos suaves, elásticos y con cuerpo sobre cabello medio-largo o largo.



RULOS GRANDES

Úselos para crear estilos sofisticados, con líneas suaves y elegantes, sobre cabello medio-largo o largo.

curls & waves

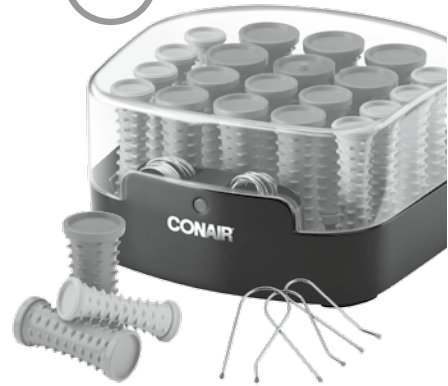

Instruction Book for Model HS38

CONAIR®

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

1. Separe una sección de cabello, coloque las puntas en el centro del rulo y enrolle éste hacia el cuero cabelludo. Enrolle el cabello firmemente y sujete el rulo con una pinza puesta alrededor del mismo.



2. La textura de los rizos dependerá del diámetro de los rulos, de su temperatura y del tiempo de pausa. Para obtener rizos apretados y firmes, utilice rulos más pequeños. Para conseguir rizos más duraderos, permita que los rulos se calienten por más tiempo y déjelos en el cabello durante más tiempo.
3. Para crear ondas y rizos suaves, utilice rulos medianos o grandes. La experiencia le enseñará cuánto tiempo dejar los rulos en el cabello para conseguir los resultados deseados.
4. Para quitar los rulos, sostenga el rulo con una mano y retire el clip con la otra. Deslice suavemente el rulo (NO LO JALE) y permita que el cabello rebote libremente. Permita que el cabello se enfríe durante un minuto antes de peinarlo para "fijar" los rizos.