

# IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

## READ ALL INSTRUCTIONS BEFORE USING

## KEEP AWAY FROM WATER

**DANGER — To reduce the risk of electrocution:**

1. **Always unplug this appliance immediately after using.**
2. Do not use while bathing.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquids.
5. **Do not reach for an appliance that has fallen into water. Unplug immediately.**

**WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:**

1. **An appliance should never be left unattended when plugged in.**
2. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in the manual. Do not use attachments not recommended by Conair.

4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Return the appliance to an authorized service center for examination and repair.**
5. Keep the cord away from heated surfaces. Do not tightly wrap the cord around the appliance.
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and other material.
7. Never use while sleeping.
8. Never drop or insert any object into any opening.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord with this appliance.
11. Do not immerse appliance in water.
12. Do not touch hot surfaces of the appliance.
13. Do not touch the posts that hold the curlers. They are hot.
14. Use appliance on level surface.
15. **CAUTION:** Do not use on wet hair. Hair should be dry. Do not use liquids or gels on hair when using rollers.
16. Do not use with voltage converter.
17. This appliance is not a toy. Keep away from children.

## SAVE THESE INSTRUCTIONS

# OPERATING INSTRUCTIONS

### Basic Use Procedure

1. Place hairsetter on a firm, flat surface. Before plugging unit into outlet, insert rollers into the hairsetter unit.
2. Plug into any ordinary household (120 AC) outlet. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
3. With lid closed, allow rollers to heat. This will provide the fastest, most efficient heat-up. It takes approximately 12 minutes for the hot sticks to fully heat up.
4. Never leave your hairsetter on and unattended. Always unplug the hairsetter when not in use. Allow hairsetter to cool, then store in a safe place.

### MAINTENANCE

Your hairsetter is designed for household use and is virtually maintenance free. If cleaning becomes necessary, disconnect the appliance from the power source. Allow the setter to cool and wipe unit with a damp cloth. Occasionally, you may want to clean your rollers. Use a damp cloth and mild detergent or soap and let dry before putting back in the hairsetter. If any abnormal condition occurs, unplug the hairsetter, allow it to cool, and return it to a Conair service center for repair.

### STORAGE

Unplug hairsetter and allow it to cool. Loosely wrap the cord around the base of unit for storage. Place in a safe, dry location, out of the reach of children.

### STYLING TIPS

The unique roller system provided with Hot Sticks® produces excellent curling power. You can achieve tight curls or a head full of spiral curls on any length hair, without leaving your home. Tight curls and full volume are possible, even on the straightest hair. With Hot Sticks® rollers, your tight or soft curls will form quickly and last longer.

Soft curls can be obtained by using a shorter heat-up time and removing rollers soon after you have completed your set.

The amount of hair per section will also determine the tightness of the curl: for spiral curls, use one-inch sections of hair; for softer waves use two-inch sections of hair.

After using Hot Sticks® rollers several times, you will find the best timing and technique for the texture of your hair and the style you desire.

### HOW TO USE

1. Place hairsetter on flat surface and plug into outlet.
2. With lid closed, allow rollers to heat. In minutes, your rollers will be hot and you can begin to set your hair. Ready dot will turn white, indicating optimum heat. Allow to heat longer for tight curls. For best use with short hair or for loose curls, remove a roller from unit and allow to cool for several seconds prior to use.

3. For optimal results, hair should be clean and dry. Take one section of hair at a time, as you would with any other roller. Comb section and hold with hand.

4. Placing the Hot Sticks® roller at the very end of hair section, start to roll the hair toward the scalp, using the ribs on the roller as a guide. When rolling, be sure to include the very ends of the hair to ensure the most consistently formed curl. You may want to secure the ends of the hair around roller with fingers. Hair adheres easily to the roller.

**PLEASE NOTE: Center of rollers will be hot. To prevent burns, be sure to hold rollers by ends to roll hair, and avoid contact with the scalp.**

5. Hot Sticks® rollers have an interlocking system that does not require clips. Simply bend both ends of roller together and secure by inserting one end (without hole) into center of the hole on opposite end of roller.

6. To create a larger diameter curl, use larger sections of hair, then simply place two rollers together and roll section of hair over both rollers (use ribs on rollers as a guide). Bend ends together and secure. For a looser curl, only roll hair halfway up before securing.

7. Repeat all steps until all sections of hair are set. After set is complete, unplug Hot Sticks® rollers. Leave Hot Sticks® rollers in hair for about 15 minutes or until they completely cool, to achieve the tightest curl. Soft curls will form well in only 5 minutes. The set time may vary depending on hair type.



### TO REMOVE HOT STICKS® ROLLERS

Carefully remove rollers by sliding end of roller from hole and gently unwinding. Once all rollers are removed, allow hair to cool, then style as desired, using fingers or a wide-tooth comb. We do not recommend using a brush, as brushing may change the look and shape of the curl and affect the style. Put rollers back into appropriate compartments for storage.

Hot Sticks® rollers are washable. If desired, use a damp cloth with mild detergent or soap and let dry before putting back in the hairsetter unit.

### HAIRSTYLES

#### Look 1: Tight Curls

Roll hair up all the way. Unroll when cool and then separate each curl with your fingers or with a wide-tooth comb.




#### Look 2: Loose Curls

Take a large section, and roll hair up halfway. Remove before rollers cool and then separate curls using your fingers or a wide-tooth comb.



### KEEP AWAY FROM WATER

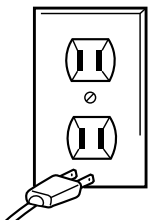

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

## ALWAYS UNPLUG SMALL APPLIANCES

### LIMITED ONE-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed, together with your purchase receipt. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

**ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY.** Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

**IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER.** Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Please register this product at [www.conair.com/registration](http://www.conair.com/registration)

#### Service Center

Conair LLC  
Service Department  
7475 N. Glen Harbor Blvd.  
Glendale, AZ 85307

©2022 CONAIR LLC

21NP081033

IB-17455

#### Instruction & Styling Guide

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

**CONAIR®**

Model HS18RT



# MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, especialmente en presencia de niños, siempre se deben tomar precauciones básicas de seguridad, entre ellas las siguientes:

## LEA TODAS LAS INSTRUCCIONES ANTES DEL USO

### MANTÉNGALO ALEJADO DEL AGUA

**PELIGRO — Para reducir el riesgo de descarga eléctrica:**

1. **Siempre desenchufe el aparato inmediatamente después del uso.**
2. No lo use en el baño o la ducha.
3. No coloque ni guarde el aparato donde pueda caerse o ser empujado a una bañera o un lavabo.
4. No coloque el aparato ni lo deje caer al agua u otro líquido.
5. **No trate de alcanzar el aparato después de una caída al agua; desenchúfelo inmediatamente.**

**ADVERTENCIA — Para reducir el riesgo de quemaduras, electrocución, incendio o lesiones personales:**

1. Nunca descuide/deje el aparato sin vigilancia mientras está conectado.
2. Supervise el uso de este aparato con cuidado cuando sea usado por, en o cerca de niños o personas con ciertas discapacidades.
3. Use este producto solo para el uso previsto y como se describe en este manual. Solo use accesorios recomendados por Conair.
4. **No use este aparato si el cable o enchufe están dañados, si no funciona correctamente, si está dañado, o después de una caída/caída al agua; devuélvalo a un centro de servicio autorizado para su revisión y reparación.**
5. Mantenga el cable lejos de las superficies calientes. No enrolle el cable con fuerza alrededor del aparato.
6. Nunca obstruya los orificios de ventilación, ni coloque el aparato sobre una superficie blanda, tal como una cama o un sofá, donde se puedan obstruir. Mantenga los orificios de ventilación libres de pelusas, cabellos y elementos similares.
7. Nunca lo use mientras duerme.
8. Nunca deje caer ni inserte ningún objeto en ninguna de las aberturas.
9. No use el aparato en exteriores, ni lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.
10. No use un cable alargador/de extensión con este aparato.
11. No sumerja el aparato en agua.
12. No toque las superficies calientes;
13. No toque las barras que sostienen los rulos; están muy calientes.
14. Ponga el aparato sobre una superficie nivelada.
15. PRECAUCIÓN: No use este producto en el cabello húmedo. El cabello debe estar seco. No use gel ni ningún tipo de producto de peinado líquido antes de marcar el cabello.

16. No use este aparato con un convertidor de voltaje.
17. Este aparato no es un juguete; manténgalo fuera del alcance de los niños.

## GUARDE ESTAS INSTRUCCIONES INSTRUCCIONES DE USO

### Instrucciones básicas

1. Coloque el aparato sobre una superficie plana y segura. Coloque los rulos en él antes de conectarlo a la toma de corriente.
2. Enchufe el aparato en una toma de corriente de 120 V AC. El cable de este aparato cuenta con un enchufe polarizado (una pata es más ancha que la otra). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente polarizada. Si el enchufe no entra en la toma de corriente, inviértalo. Si aun así no entra completamente, comuníquese con un electricista. No intente modificar esta función de seguridad.
3. Permita que los rulos se calienten con la tapa cerrada; esto logrará un calentamiento más rápido y efectivo. Nota: Los rulos Hot Sticks® tardan aprox. 12 minutos en calentarse por completo.
4. Nunca descuide/deje el aparato sin vigilancia después de encenderlo. Siempre desenchufe el aparato después del uso. Después del uso, permita que el aparato se enfríe y guárdelo en un lugar seguro.

### MANTENIMIENTO

Este aparato ha sido diseñado para uso doméstico y requiere poco mantenimiento.

Cuando sea necesario limpiarlo, desenchúfelo, permita que se enfríe y limpie la carcasa con un paño húmedo. De vez en cuando, limpie los rulos Si lo desea, límpielos con un paño humedecido con detergente o jabón suaves antes de guardarlos. En caso de mal funcionamiento, desenchufe el aparato, permita que se enfríe y devuélvalo a un centro de servicio autorizado para su reparación.

### ALMACENAMIENTO

Desenchufe el aparato y permita que se enfríe antes de guardarlo. Enrolle el cable sin apretar alrededor de la base. Guárdelo en un lugar seco y seguro, fuera del alcance de los niños.

### CONSEJOS DE PEINADO

Los rulos Hot Sticks® único tiene un excelente poder de rizado. Gracias a ellos, obtendrá rizos apretados o rizos en espiral en la comodidad de su casa, cualquiera que sea el largo de su cabello. Conseguirá rizos apretados y volumen hasta en el cabello más liso. Los rulos Hot Sticks® permiten obtener rizos apretados o suaves que duran por más tiempo, de forma rápida.

Para obtener rizos suaves, use rulos menos calientes y déjelos en el cabello durante menos tiempo. La textura de los rizos dependerá del tamaño de las secciones de cabello. Para obtener rizos en espiral, use secciones de cabello de 1 in. (2.5 cm). Para conseguir ondas suaves, use secciones de cabello de 2 in. (5 cm).

La experiencia le ayudará a determinar cuánto tiempo dejar los rulos en el cabello y qué técnica usar para conseguir los resultados deseados dependiendo la textura de su cabello.

### INSTRUCCIONES DE USO

1. Coloque el aparato en una superficie plana y enchúfelo en una toma de corriente.
2. Permita que los rulos se calienten con la tapa cerrada; los rulos estarán listos en tan solo minutos. El indicador térmico se pondrá blanco cuando los rulos estén listos.

Para obtener rizos apretados, permita que los rulos se calienten por más tiempo. Si tiene el cabello corto, permita que los rulos enfrien por varios segundos antes de usarlos.

3. Para obtener resultados óptimos, su cabello debe estar limpio y seco. Divida el cabello en secciones uniformes. Peine cada sección.

4. Coloque el rulo en las puntas del cabello y enróllelo hacia la cabeza, usando las estrías en el rulo como guía. Enrolle las puntas con cuidado alrededor del rulo, manteniéndolas en posición con el pulgar si es necesario. El cabello se adhiere fácilmente al rulo.

IMPORTANTE: El centro de los rulos se pone muy caliente; sostenga los rulos por los extremos y no permita que hagan contacto con el cuero cabelludo.

5. Los rulos Hot Sticks® no requieren pinzas/clips. Simplemente doble los extremos e introduzca el extremo recto en el anillo, en el lado opuesto del rulo.

6. Para obtener rizos gruesos, divida el cabello en secciones más gruesas y enrolle cada sección alrededor de dos rulos, usando las estrías en los rulos como guía. Doble los extremos juntos para asegurar los rulos. Para obtener rizos más suaves, enrolle el cabello solamente hasta la mitad, y luego sujete el rulo.

7. Repita estos pasos con cada sección de cabello. Después de fijar el cabello, desenchufe el aparato. Deje los rulos Hot Sticks® en el cabello por 15 minutos o hasta que estén fríos, para conseguir rizos apretados. Obtendrá rizos suaves en tan solo 5 minutos. El tiempo puede variar según la textura del cabello.




**Instrucciones y guía de peinado**  
Para su seguridad y para disfrutar plenamente de este producto, siempre lea atentamente las instrucciones antes del uso.

**CONAIR®**

Modelo HS18RT

**ADVERTENCIA: SI CREE QUE NO HAY CORRIENTE CUANDO EL APARATO ESTÁ APAGADO ESTÁ EQUIVOCADO.**

### MANTÉNGALO ALEJADO DEL AGUA

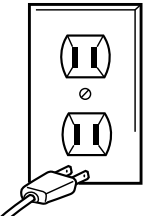

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿sabía usted que un aparato eléctrico permanece en tensión, aunque esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe los aparatos eléctricos después del uso.

## SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS



### PEINADOS

#### Look n.º 1: Rizos apretados

Enrolle el cabello hasta el cuero cabelludo. Retire los rulos cuando estén fríos, y separe los rizos con los dedos o un peine de dientes anchos

#### Look n.º 2: Rizos sueltos

Divida el cabello en secciones anchas y enróllelo solamente hasta la mitad. Retire los rulos antes de que se enfrien completamente, y separe los rizos con los dedos o un peine de dientes anchos.



Para registrar este producto, visítenos en:  
[www.conair.com/registration](http://www.conair.com/registration)

**Centro de servicio**  
Conair LLC  
Service Department  
7475 N. Glen Harbor Blvd.  
Glendale, AZ 85307

©2022 CONAIR LLC

21NP081033

IB-17455