

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — Any appliance is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. **Always unplug immediately after using.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in, or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in. Do not pull, twist, or wrap line cord around appliance.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.

3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate appliance.

4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an authorized service center for examination and repair.**

5. Keep the cord away from heated surfaces. **Do not pull, twist, or wrap line cord around appliance, even during storage.**

6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of hair, lint and other debris.

7. Never use while sleeping.

8. Never drop or insert any object into any opening or hose.

9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.

10. These curling irons and clips are hot when in use. Do not let heated surfaces touch eyes or bare skin.

11. **Do not place the heated iron directly on any surface while it is hot or plugged in. Use the counter rest provided.**

12. Do not touch the hot surface of this appliance. Use the handles or knobs.

13. When the iron is in use, do not touch the barrel as it is very hot.

14. This appliance is not a toy. Keep away from children.

SAVE THESE INSTRUCTIONS OPERATING INSTRUCTIONS

This curling iron is intended for household use. Use on alternating current (60 hertz) only. This unit is designed to be operated at 120 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

NOTE: Do not use this styling appliance on hair extensions.

GETTING STARTED

Plug the curling iron cord into a standard household electrical outlet (120V). When the red Ready Dot turns white, proper styling temperature has been reached.

GET TO KNOW YOUR CURLING IRON



TO CURL HAIR

Hair should be clean and completely dry before using the curling iron. Section hair evenly, and comb each section before winding. For best results, use a light styling product before blow-drying hair.

1. Start curling with a hair section that is 1 inch wide and no more than ½ inch thick. Open the spoon and place curling iron midway up the hair section, then spread hair evenly between spoon and barrel. Gently slide the curling iron down to hair ends. To avoid crimped ends, make sure they are securely wound under the spoon in the direction of the desired curl. Remember, always place the spoon above the hair strand when making a curl you want rolled under; place the spoon under the hair strand when creating a flip style.

2. Wind the hair up as far as you want it curled, being careful not to let the iron touch the scalp. Hold 8–12 seconds, depending on the length and texture of your hair. For tighter, bouncier curls, roll less hair. For looser, free-flowing curls, roll more hair. Repeat process on additional sections of hair until you achieve the hairstyle you desire.

3. To remove the curling iron, unwind the hair and press the handle and allow curl to slide out. To set curl, do not comb or brush curls until cool.

4. Some experimenting is necessary when first using the curling iron, or when changing to a different hairstyle.

To create soft, tousled waves, curl each hair section in random directions. Then, turn head upside down, shake, and gently scrunch hair with fingers. Bring head back to position and repeat for more volume.

For wide waves, pick up a section of hair and place the curling iron under it, close to the scalp, making half a turn downward. Remove the curling iron. Working with the same hair section, start where you left off and place the curling iron on top of the hair, curling it up half a turn. Proceed down the same hair section, alternating the curl upward and downward. Repeat process with remaining sections of hair. For best results, hair should be about 6–8 inches long.

MAINTENANCE

Your curling iron is designed for household use and is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the curling iron from the power source, allow it to cool, and wipe exterior with a cloth. If any abnormal condition occurs, unplug the curling iron, allow it to cool and return it to place of purchase or an authorized service representative only for repair. No repairs should be attempted by the consumer.


CAUTION

NEVER allow the power supply cord to be pulled or twisted. Never wrap the cord around the curling iron. Damage will occur at the high flex point of entry into the curling iron, causing it to rupture and short. Inspect the cord frequently for damage. Stop use immediately if unit stops or operates intermittently.


STORAGE

When not in use, your curling iron is easy to store. Allow curling iron to cool and store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the cord around the appliance.

Unsupervised use could result in fire or personal injury.

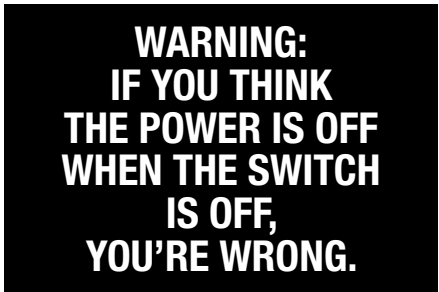

KEEP AWAY FROM WATER

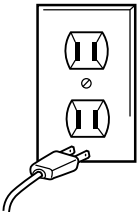

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

LIMITED ONE-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below, together with your purchase receipt and \$7.50 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

CONAIR SUPREME COLLECTION

½ in., ¾ in., and 1 in.



BEAUTY TIPS:

To achieve the looks you love and for more great Conair® products, visit www.conair.com

Service Center

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

Please register this product at www.conair.com/registration

For information on any Conair or InfinitiPRO by Conair product, call 1-800-3-CONAIR or visit us on the web at www.conair.com/infiniti

©2018 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

18PA050845

IB-13880A

Instructions & Styling Guide

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CB433 - All Versions

MEDIDAS DE SEGURIDAD IMPORTANTES

Al usar aparatos eléctricos, especialmente en presencia de niños, siempre debe tomar precauciones básicas de seguridad, incluidas las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO MANTÉNGALO ALEJADO DEL AGUA

PELIGRO — Cualquier aparato enchufado permanece bajo tensión, aunque esté apagado. Para reducir el riesgo de electrocución o lesiones por descarga eléctrica:

1. **Siempre desconecte el aparato inmediatamente después del uso.**
2. No lo use en el baño o la duch
3. No coloque ni guarde el aparato don pueda caerse o ser empujado a una bañera o un lavabo.
4. No coloque el aparato ni lo deje caer agua u otro líquido.
5. Si el aparato se cae al agua, desconéctelo inmediatamente; **no toque el agua.**

4. Será necesario experimentar un poco al principio.

Para crear ondas suaves y naturales, rice cada sección en diferentes direcciones. Después, incline la cabeza hacia abajo, ágítela y estruje el cabello con los dedos. Repita para obtener más cuerpo.

Para ondas sueltas, comience cerca del cuero cabelludo. Coloque una sección de cabello entre el tubo y la pinza, con el tubo abajo, y dele media vuelta hacia abajo. Retire el aparato. Ahora, coloque el aparato un poco más abajo, con el tubo arriba, y dele media vuelta hacia arriba. Siga alternando los rizos hacia arriba/abajo hasta llegar a las puntas. Repita la misma técnica alrededor de toda la cabeza. Obtendrá resultados óptimos con cabello de 6–8 pulgadas (15–20 cm) de largo.

ADVERTENCIA

— Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

1. **Nunca descuide/deje el aparato sin vigilancia mientras está conectado. No jale, retuerza ni enrolle el cable alrededor del aparato.**
2. Este aparato no debe ser usado por, o cerca de niños o personas con cierta discapacidades.
3. Utilice este aparato únicamente c el propósito para el cual fue diseñado y solamente según las instrucciones. Solo use accesorios recomendados por el fabricante. No utilice una extensión con este aparato.
4. **No utilice este aparato si el cable o el enchufe están dañados, si no funciona correctamente, si está dañado, o después de que se haya caído, incluso en el agua; regréselo a un centro de servicio autorizado para su revisión y reparación.**
5. Mantenga el cable alejado de superfici calientes. **No jale, retuerza ni enrolle el cable alrededor del aparato, incluso para guardarlo.**
6. unca bloquee las aberturas de aire ni coloque el aparato sobre una superficie blanda, tal como una cama o un sofá, donde se puedan obstruir. Mantenga las entradas de aire libres de pelusas, cabellos y elementos similares.
7. o lo use mientras duerme.
8. Nunca deje caer ni inserte ningún objeto ninguna de las aberturas.

9. No utilice el aparato en exteriores, lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.

10. Estas tenazas se ponen muy calien durante el uso. Mantenga los ojos y la piel alejados de las superficies calientes.

11. **No coloque el aparato sobre ninguna superficie mientras está caliente o conectado; utilice el soporte integrado.**

12. No toque las partes calientes de e aparato; utilice los mangos/asas o los botones/perillas.

13. No toque el tubo durante el uso. Está caliente.

14. Este aparato no es un juguete manténgalo fuera del alcance de los niños.

GUARDE ESTAS INSTRUCCIONES INSTRUCCIONES DE OPERACIÓN

Para uso doméstico solamente. Utilícelo solamente con corriente alterna (60 Hz). Este aparato ha sido diseñado para funcionar con corriente de 120 V AC

El cable de este aparato está dotado de una clavija polarizada (una pata es más ancha que la otra). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente polarizada. Si no entra en la toma de corriente, invíértala. Si aun así no

entra completamente, comuníquese con un electricista. No intente ir en contra de esta función de seguridad.

NOTA: no utilice este aparato en cabello sintético/extensions.

FUNCIONAMIENTO BÁSICO

Conecte el cable a una toma de corriente de 120 V. Permita que se caliente hasta que el indicador de temperatura rojo se vuelva blanco.

FAMILIARÍCESE CON SU TENAZA



Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

CONSEJOS DE BELLEZA:

Para conseguir los peinados que le gustan o descubrir más productos Conair® visite www.conair.com

Centro de servicio

Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

Para registrar su producto, visítenos en: www.conair.com/registration

Para más información sobre los productos Conair o InfinitiPRO by Conair, llame al 1-800-3-CONAIR o visítenos en www.conair.com/infiniti

©2018 Conair Corporation
150 Milford Road, East Windsor, NJ 08520
7475 N. Glen Harbor Blvd., Glendale, AZ 85307

18PA050845

IB-13880A

CÓMO RIZAR EL CABELLO

El cabello debe estar limpio y seco. Divida el cabello en secciones uniformes y peine cada sección. Para obtener resultados óptimos, aplique una loción fijadora ligera en el cabello antes de secarlo.

1. Divida el cabello en secciones de pulgada (2.5 cm) de ancho por ½ pulgada (1.5 cm) o menos de grueso. Abra la tenaza, presionando la manija. Coloque el aparato a la mitad de una sección de cabello y distribuya el cabello uniformemente entre el tubo y la pinza. Deslice el aparato suavemente hacia las puntas. Para evitar tener las puntas encrespadas, asegúrese de que están firmemente posicionadas entre el tubo y la pinza, en la dirección deseada. Consejo: para rizar el cabello hacia dentro, coloque el mechón debajo de la pinza. Para rizar el cabello hacia fuera, coloque la mecha encima de la pinza.

2. Enrolle el cabello hacia el cuero cabellud sin que el aparato llegue a tocar el cuero cabelludo. Mantenga la tenaza en esta posición de 8 a 12 segundos, dependiendo de la textura y de la longitud del cabello. Para obtener rizos apretados y elásticos, divida el cabello en secciones más delgadas. Para obtener rizos sueltos y naturales, enrolle secciones más gruesas. Repita el proceso en cada sección de cabello, hasta conseguir el estilo deseado.

3. Para sacar la tenaza, desenrolle el cabel y oprima la manija para soltarlo. Para “fijar” los rizos, deje que el cabello se enfríe antes de peinarlo.

S U P R E M E[®]
C O L E C C I Ó N
CONAIR
12.5 mm (½ pulgada), 19 mm (¾ de pulgada) y 25 mm (1 pulgada).




Instrucciones y guía de peinado

Para su seguridad y para disfrutar plenamente de este producto, siempre lea cuidadosamente las instrucciones antes de usarlo.

CB433 - Todas las versiones

**ADVERTENCIA:
SI CREE QUE NO HAY
CORRIENTE CUANDO
EL APARATO ESTÁ
APAGADO,
ESTÁ EQUIVOCADO.**

**MANTÉNGALO ALEJADO
DEL AGUA**

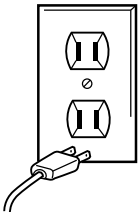

Todos sabemos que no se debe mezclar la electricidad y el agua. Pero ¿sabía usted que un aparato eléctrico permanece bajo tensión aunque esté apagado? Si está conectado, hay corriente. Por lo tanto, siempre desenchufe los aparatos eléctricos después del uso.

**SIEMPRE DESENCHUFE
LOS APARATOS PEQUEÑOS**

MANTENIMEIENTO

Este producto ha sido diseñado para uso doméstico y requiere poco mantenimiento. No necesita lubricación. Mantenga todas las aberturas libres de polvos y pelusas. Cuando sea necesario limpiarlo, desenchúfelo, permita que se enfríe y limpie la superficie exterior con un paño. En caso de mal funcionamiento, desconecte el aparato, permita que se enfríe y regréselo a un centro de servicio autorizado. No trate de reparar este aparato.

PRECAUCIÓN:

NUNCA jale, tuerza ni retuerza el cable eléctrico. Nunca lo enrolle alrededor del aparato; esto puede dañar la junta flexible que lo conecta al aparato, produciendo su ruptura o un cortocircuito. Revise el cable con frecuencia para asegurarse de que no esté dañado. Deje de usar el aparato inmediatamente si el aparato deja de funcionar o funciona de manera intermitente.

ALMACENAJE

Cuando no lo utilice, su aparato es fácil de almacenar. Permita que se enfríe y guárdelo en un lugar seco y seguro, fuera del alcance de los niños. No tiree ni retuerza el cable al nivel del enchufe. No enrolle el cable alrededor del aparato.

El uso sin supervisión de este aparato puede causar un incendio o una herida.