THE CHOPPER

Instructions for Care and Use

MODEL HCT420CSV

CONAIR

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — any appliance is electrically live, even when the switch is off.

To reduce the risk of death or injury by electric shock:

1. Unplug this appliance before cleaning.
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not use while bathing or in a shower.
4. Do not place in, or drop into, water or other liquid.
5. Do not reach for an appliance that has fallen into water. Unplug immediately.
6. Always unplug this appliance from electrical outlet immediately after using.

DO NOT REACH INTO THE WATER

WARNING — To reduce risk of burns, electrocution, fire, or injury to persons:

1. This appliance should never be left unattended when plugged in. Do not pull, twist, or wrap line cord around appliance.
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer. Do not use an extension cord to operate this appliance.
4. Never operate appliance if it has a damaged cord or plug, or if it is not working properly, if it has been dropped or damaged, or dropped into water. Return appliance to a service center for examination and repair.
5. Keep cord away from heated surfaces.
6. Never drop or insert any object into any opening on this appliance.
7. Do not place appliance on any surface while it is operating.
8. Do not use this appliance with a damaged or broken comb or with teeth missing from the blades, as injury may occur. Before use, make certain blades are aligned properly. (See "Care of your Clippers.")
9. Do not operate outdoors or where aerosol (spray) products are being used or oxygen is being administered.
10. Never operate the appliance with the air openings blocked or while on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
11. Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to "OFF," remove plug from outlet.
12. Avoid skin contact with moving blades.
13. Always check for tangles or kinks in the cord. If the cord does become tangled during use, turn unit off and straighten cord before operating.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This appliance is intended for household use. Use on Alternating Current (120V AC 60Hz) only. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in the outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

Your new Conair Haircut and Trimmer Kit has everything you need to achieve professional haircuts, beard trimming and detailing at home. Its powerful new torque motor clipper, with steel blades for long-lasting cutting precision, features a new 5-position adjustable taper control. Whatever hair length you set the button for, the clipper will automatically cut all hair in that section at the desired length. Also included are 9 attachment combs for different hair lengths (including left and right ear taper combs), barber scissors, a styling comb with angled teeth, a full-length barber cape, and a soft, foldable pouch for easy storage. It also comes with lubricating oil, a cleaning brush and a blade guard for easy maintenance and protection of the clipper blades.

In addition, your kit has a full size trimmer blade with three jawline combs and one 5-position comb designed to trim facial and neck hair precisely.

THE CONAIR GUIDE TO CUTTING HAIR AT HOME

Before you start:

1. Inspect your clipper. Make sure it's free of hair and dirt, properly oiled, and running smoothly.
2. Place cape around the neck of the person getting a haircut.
3. Seat the person so that his or her head is at your eye level. This gives you greater visibility and control.
4. First, comb hair until it's tangle-free. Then hold clipper in a comfortable grip. Now you're ready to cut.

MEDIUM TO LONG CUT

To begin with, cut only a small amount of hair until you become used to the length each attachment leaves the hair. Try the longest attachment comb and put the taper control in the highest setting. If you want a shorter cut, you can then use shorter combs.

- Short attachment comb (number 1) cuts hair to 1/8".
- Medium-Short attachment comb (number 2) cuts hair to 1/4".
- Medium-Long attachment comb (number 3) cuts hair to 3/8".
- Long attachment comb (number 4) cuts hair to 1/2".
- Long attachment comb (number 5) cuts hair to 5/8".
- Long attachment comb (number 6) cuts hair to 3/4".
- Long attachment comb (number 7) cuts hair to 7/8".
- Left ear attachment comb lightly tapers over left ear.
- Right ear attachment comb lightly tapers over right ear. These combs make this part of the haircut easier.

Attach combs by holding them teeth up, then sliding them onto the bottom of the clipper blade.

To remove comb attachments, place index finger and thumb as illustrated; then pull out and up.

NOTE: Never push or shove the clipper through the hair to make it move more quickly. Professional experience shows that the clipper works most efficiently when it cuts through the hair at its own speed.

To begin cutting hair:

1. The hair should be combed in its natural direction.
2. Using the largest attachment comb, trim sides from the bottom upward. Hold clipper lightly against the hair with teeth of the attachment comb pointing upward, yet flat against the head.

Gradually lift the clipper upward and outward through the hair, trimming just a little at a time.

Repeat around sides and back of head.

If you want hair to be even shorter:

A) Apply more pressure to the head with the attachment comb that is in place. This takes a little practice, of course.

OR

B) Just switch to a shorter attachment comb.

Remember, it's better to leave too much hair than too little. For longer hair on top, use the barber comb and lift hair on the top of the head, cutting over the comb, or hold the hair between the fingers and cut to desired length. Always working from the front to the back of the head, gradually cut the hair shorter by reducing the space between the comb or fingers and the head. Comb often to check for uneven strands, and to get rid of trimmed hair.

*Equipped with a turbo switch, this unit is designed to provide 15% extra power making it easier to cut thicker, coarser hair.

OUTLINING

Outlining requires no attachments. Comb hair into the desired style. Position the clipper between the sideburns and the ear (see below), making sure the corner edge of the blade is against the hairline. With the outline of the hair as your guide, slowly move the clipper over, around and behind the ears. For the back of the neck and the sideburns, hold the clipper upside down (see above) and, holding it against the skin at the length desired, move the clipper downward.

STOP. COMB. CHECK.

For best results, do as the professionals do: comb hair often, and check clipping results as you comb. This way you avoid uneven sides, bangs, neckline, etc.

FOR ULTRA CLOSE FADE STYLES:

A fade cut is a haircut that starts with very short hair at the bottom of the sides of the head, but lengthens as it nears the top.

1. Start with clean, dry hair. If hair is fairly long, use a long comb attachment (ideally #4) to remove the bulk of your hair before starting the fade cut.
2. Using the long comb attachment, trim hair, cutting against the growth of your hair (from base of neck up towards top of head). At first, until you become familiar with the different attachments, begin with a longer one. You can always go back and make your hair a little shorter. Brush or comb away cuttings as you go. Do not force the blades through the hair. Let the trimmer do the work. Using the #1 comb attachment, you can cut hair as short as 1/8".
3. Gradually trim hair from entire head, rotating trimmer when necessary. Keep cutting against the natural growth of your hair.
4. Establish the fade line. Remove comb attachments. With the taper control in position #1, start by blending the hair at the fade line by trimming up and out, repeating as you rotate around the head. Cut hair shorter on the sides and base of the head than on the top of the head.
5. With the taper control in the #5 position, the blade is as close as it can be to the head. Now repeat the above process, virtually removing all hair. Begin at the base of the scalp and blend towards the fade line. The goal is to blend the hair so there is no real line, just a perfect fade from bald on the sides to very short hair on the top. Continue blending – remember to comb or brush hair against the natural growth to remove cuttings as you go until you achieve the desired look.

FOR THE BALD CUT

Follow the instructions for the FADE CUT, cutting hair progressively shorter with each pass of the clipper. For a bald effect, remove all comb attachments and move the taper control to the #5 position. To receive maximum closeness, overlap strokes in a criss-cross pattern. To achieve a smooth bald look, we recommend you finish by using a razor with lather to shave entire head. To achieve a smooth, close shave use the Conair Hot Lather machines with your favorite shaving cream.

SHORTCUTS TO PERFECT FLAT TOPS, CREW CUTS, ETC.

Always cut from the back of the neck to the crown, using the longest comb setting. Hold the comb attachment flat against the head and slowly move the clipper up through the hair. Use the same technique for the sides, cutting from the bottom to the upper side of the head.

For the front to the crown, cut the hair against the direction in which it grows, then even it up with the sides.

For a flat top, use the flat comb, not the attachment comb. Just cut hair on top of the head over flat comb (see above).

USER MAINTENANCE

CARE OF YOUR CLIPPERS

DETACHABLE BLADE SET

This clipper comes with a detachable blade set. To remove the blades follow these steps:

1. Hold the front part of the clipper with your thumb pressing on the blade and place another hand against the blade. (see fig. 1)

2. When pressing the blade forward, the blade is detached. (see fig. 2)

TO REPLACE BLADE:

1. Set the Taper Control Button to lowest position "1"

(see fig. 3)

2. Place the blade onto the clipper body by inserting the "Blade Tongue" down below the "Lock Tap". (see fig. 4)

3. Snap the blade down into following position. The blade is now fixed onto the clipper body. (see fig. 5)

To taper hair down to the neckline, use attachment comb #1. Comb hair and check for uneven spots. Outline sideburns and neck areas (see "Outlining").

Use these instructions to switch between the clipper and beard trimmer blades and back.

SPECIAL OIL

To maintain the blades of your Conair clipper, oil them after every three or four haircuts. Gently place a few drops of oil on the teeth of the blades, using the special Conair oil included with your set. Turn the clipper on for a minute, then turn off. This light, natural oil was formulated specifically for the Conair high speed clipper. Because it is the right oil to use, it will not slow down the blades. Never use any other product. There is no substitute for Conair oil.

KEEP OIL OUT OF REACH OF CHILDREN.

ADJUSTABLE 5 POSITION TAPER CONTROL

Just like levers on professional clippers, the Conair taper control is positioned at the back of the unit, which functions for both the clipper and trimmer blade so you can hold the clipper in your hand and adjust the lever at the same time...while you're clipping/trimming. This taper control eliminates the need in some situations for an attachment comb, because it lets you gradually adjust the closeness of the cut. For the closest cut and the shortest hair, push taper control up as far as it will go to level #1. To increase cutting length, slowly push control down. If you push to the lowest position level #5 or #4, it will leave hair about the same length as the short attachment comb.

Because a different cutting edge is used in each setting, the taper lever lengthens the life of your blades. Packed-in hair can slow down any clipper. To remove it without removing the blades, take your cleaning brush and brush the hair from the blades. If you do this after every clipping, especially with heavy hair cutting, the blades should remain free of cut hair. If clipper stops cutting and this action doesn't help, try loosening the blades to remove the hair.

Any other servicing should be performed by an authorized service representative. The appliance has no user serviceable parts. The product is for household use. (see note).

If clipper stops cutting, check to see if there is a clump of hair lodged between the blades. If that is the problem, unplug the clipper and then loosen the blades to remove the hair.

If the clipper stops cutting but does not stop running, you will need to check the blades. For new blades, send check or money order for $6.50 which includes postage and handling to:

Conair Corporation
150 Milford Rd.
East Windsor, NJ 08520

NOTE:
Never pull on the clipper cord. Never twist or wrap the cord around the clipper. To store your clipper, lay it flat with the cord coiled up, then place in cylinder.

MEDIDAS DE SEGURIDAD IMPORTANTES

Cuando se usan aparatos eléctricos, especialmente cuando se encuentran niños presentes, hay que seguir ciertas precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO

MANTENGA EL APARATO ALEJADO DEL AGUA

PELIGRO — Cualquier aparato electrodoméstico siempre está provisto de una toma de corriente. Para reducir el riesgo de muerte o lesiones personales:

1. No use este aparato cuando se encuentre en la bañera o en la ducha.
2. No coloque ni guarde el aparato donde pueda caer o hundirse en la bañera o en el lavabo.
3. No lo use mientras se encuentre en la bañera o en la ducha.
4. No coloque ni deje caer el aparato en el agua o en otro líquido.
5. Si por accidente el aparato se cayera en el agua, no trate de sacarlo. Desenchúfelo inmediatamente.
6. Siempre desconecte el aparato inmediatamente después de usarlo.

ADVERTENCIA — Para reducir el riesgo de quemaduras, electrocución, incendio o lesiones personales:

7. Nunca deje este aparato sin supervisión cuando esté enchufado. No lo deje cuando se encuentre en el proceso de cambio de accesorios.
8. Este aparato no debe ser usado por niños o personas con alguna discapacidad.
9. Use este aparato solamente para el propósito para el que fue destinado y de la forma descrita en este manual. No use accesorios no recomendados por el fabricante.
10. Nunca coloque este aparato en una superficie caliente o cerca de ella.
11. Siempre coloque este aparato en una superficie firme y estable. No lo use en lugares inestables.
12. Evite que el cable quede colgando por el borde de una mesa o encimera o que entre en contacto con superficies calientes.
13. Siempre asegúrese de que todas las piezas estén bien ensambladas. Si el cabezal se encuentra desmontado, asegúrese de que esté bien colocado antes de encender el aparato.
14. Nunca deje caer ni inserte ningún objeto en ninguna de las aberturas.
15. Mantenga el cabello alejado de aberturas cerradas.
16. Apague el aparato y desenchúfelo cuando no esté en uso.
17. Para desenchufar, apague el aparato y quite el enchufe de la toma de corriente. Nunca tire del cable.
18. Nunca bloquee las aberturas de aire o coloque el aparato sobre una superficie blanda, como una cama o un sofá, donde las aberturas de aire puedan quedar bloqueadas. Mantenga las aberturas de aire libres de pelusa, cabellos y cualquier otro objeto que pueda reducir el flujo de aire.
19. Nunca bloquee las aberturas de ventilación del cabezal. Mantenga las aberturas de aire libres de pelusa, cabellos y cualquier otro objeto que pueda reducir el flujo de aire.
20. Nunca deje caer ni inserte ningún objeto en ninguna de las aberturas.
21. No use este aparato al aire libre o donde se estén usando productos en aerosol (spray) o donde se esté suministrando oxígeno.
22. Para desenchufar, apague todos los controles y luego retire el enchufe de la toma de corriente. Agarre el enchufe para desenchufar. No tire del cable.
23. Mantenga el cabello, ropa suelta y dedos alejados de las piezas móviles.
24. Compruebe si hay cables torcidos o enredados antes de usar el aparato. Si el cable se enredara durante el uso, apague el aparato y espere a que se detenga por completo antes de desenredar el cable.
25. Use este aparato solamente para el propósito para el que fue destinado y de la forma descrita en este manual. No use accesorios no recomendados por el fabricante.
26. No use el aparato si el cable o la clavija están dañados.
27. Si el aparato no funciona correctamente, si se ha caído o dañado, o si ha caído al agua, llévelo a un centro de servicio autorizado para que lo examinen y lo reparen.
28. Este aparato debe ser usado solamente con el accesorio de recambio suministrado.
29. Este aparato no está diseñado para ser usado por niños o personas con discapacidades físicas, sensoriales o mentales, a menos que estén supervisados o reciban instrucciones sobre el uso del aparato por parte de una persona responsable de su seguridad.
30. Los niños deben ser supervisados para asegurarse de que no jueguen con el aparato.
31. Use este aparato solamente para el propósito para el que fue destinado y de la forma descrita en este manual. No use accesorios no recomendados por el fabricante.

GUARDE ESTAS INSTRUCCIONES

OPERATING INSTRUCCIONES DE USO

GUÍA DE CONAIR PARA CORTAR EL CABELLO EN SU CASA

Antes de empezar:

1. Inspeccione el aparato para asegurarse que está limpio de aceite y pelusa, que está funcionando correctamente y que tiene suficiente aceite.
2. Coloque a la persona que va a cortarse el cabello sentada a una buena altura para trabajar.
3. Asegúrese de que la persona se encuentre cómoda y relajada. Esto le ayudará a tener un mejor control.
4. Peine el cabello hasta que no haya ningún nudo. Luego sujete el aparato con firmeza y empiece a cortar.

PARA EMPEZAR A CORTAR EL CABELLO

Para empezar a cortar el cabello, use el peine largo para quitar la mayor cantidad de pelo posible. Empiece con el peine más largo y vaya cortando el cabello poco a poco hasta que esté satisfecho con el resultado. Si quiere cortarse el cabello más corto, puede utilizar los peines más cortos.

- Peine corto para cortar el cabello hasta 1/8".
- Peine mediano-corto para cortar el cabello hasta 1/4".
- Peine mediano para cortar el cabello hasta 3/8".
- Peine largo para cortar el cabello hasta 1/2".
- Peine largo para cortar el cabello hasta 5/8".
- Peine largo para cortar el cabello hasta 3/4".
- Peine largo para cortar el cabello hasta 7/8".
- Peine para cortar el cabello de la oreja izquierda.

- Peine para cortar el cabello de la oreja derecha.

PARA CORTAR EL CABELLO

1. Empiece cortando el cabello por la parte de atrás y vaya subiendo hacia la coronilla.
2. Empuje el peine hacia arriba y hacia fuera a través del cabello.
3. Corte el cabello lentamente. Para evitar cortes accidentales, no empuje el peine demasiado rápido.
4. Cuando haya terminado de cortar el cabello, peine el cabello hacia abajo y corte los pelos sueltos.

PARA CORTAR EL CABELLO CON EL PEINE

1. Empuje el peine hacia arriba y hacia fuera a través del cabello.
2. Empuje la cuchilla hacia delante, desde la parte posterior de la cabeza.

PARA CORTAR EL CABELLO CON LA CUCHILLA

1. Empuje la cuchilla hacia delante, desde la parte posterior de la cabeza.

PARA ARREGLAR LAS PATILLAS

1. Peine las patillas hacia abajo.
2. Corte el pelo de la nuca y de las patillas, siguiendo la forma natural.

PARA AFEITAR LA NUCA

Para cortar el pelo de la nuca y en las patillas, use el peine de cortar. Sostenga la cuchilla de afeitar en un ángulo de 45 grados y empuje la cuchilla hacia arriba y hacia fuera.

PARA AFEITAR LAS CUCHILLAS

Para afeitar las cuchillas, use el peine de cortar. Sostenga la cuchilla de afeitar en un ángulo de 45 grados y empuje la cuchilla hacia arriba y hacia fuera.

PARA AFEITAR LA BARBA

Para afeitar la barba, use el peine de cortar. Sostenga la cuchilla de afeitar en un ángulo de 45 grados y empuje la cuchilla hacia arriba y hacia fuera.

PARA AFEITAR EL CUELLO

Para afeitar el cuello, use el peine de cortar. Sostenga la cuchilla de afeitar en un ángulo de 45 grados y empuje la cuchilla hacia arriba y hacia fuera.

PARA AFEITAR LA PERILLA

Para afeitar la perilla, use el peine de cortar. Sostenga la cuchilla de afeitar en un ángulo de 45 grados y empuje la cuchilla hacia arriba y hacia fuera.

PARA AFEITAR EL BIGOTE

Para afeitar el bigote, use el peine de cortar. Sostenga la cuchilla de afeitar en un ángulo de 45 grados y empuje la cuchilla hacia arriba y hacia fuera.

ACEITE ESPECIAL

Su cortadora puede perder velocidad si recibe de vez en cuando. Para mantener las cuchillas de afeitar afiladas, use el aceite especial para cuchillas de afeitar Conair. Aplique unas cuantas gotas de aceite afilador en las cuchillas de afeitar antes de cada afeitada. Esto ayudará a mantener las cuchillas de afeitar afiladas durante más tiempo.

Aceite afilador para cuchillas de afeitar

CORTE COMBINADO

Para hacer un corte combinado, siga el corte combinado. Para un efecto rápido, combine el corte combinado con el peine para cortar el cabello. Para dar el corte de pelo de forma rápida, peine el cabello hacia abajo y corte los pelos sueltos. Sostenga el peine de forma diagonal y corte el cabello. Siga combinando hasta que quede satisfecho con el resultado.

CORTE RAPIDO

Siga estas instrucciones para dar el corte combinado rápido:

A) Aplique una presión con el peine en una zona de la cabeza.

B) Empuje el peine asociado hacia arriba y hacia fuera a través del cabello.

C) Corte el cabello lentamente. Para evitar cortes accidentales, no empuje el peine demasiado rápido.

D) Cuando haya terminado de cortar el cabello, peine el cabello hacia abajo y corte los pelos sueltos.

DETENGASE. PEINE. VERIFIQUE.

Para resultados óptimos, siga el peine de corte en cada zona de la cabeza. Peine el cabello en la dirección natural. Luego use el peine asociado para cortar el cabello. Para ello, peine el cabello hacia abajo y corte los pelos sueltos. Sostenga el peine de forma diagonal y corte el cabello. Siga combinando hasta que quede satisfecho con el resultado.

CORTE DE PRECISION

Para dar el corte de precisión, siga el peine de corte en cada zona de la cabeza. Peine el cabello en la dirección natural. Luego use el peine asociado para cortar el cabello. Para ello, peine el cabello hacia abajo y corte los pelos sueltos. Sostenga el peine de forma diagonal y corte el cabello. Siga combinando hasta que quede satisfecho con el resultado.

CORTE DE PRECISION CON EL PEINE

Para dar el corte de precisión con el peine, siga el peine de corte en cada zona de la cabeza. Peine el cabello en la dirección natural. Luego use el peine asociado para cortar el cabello. Para ello, peine el cabello hacia abajo y corte los pelos sueltos. Sostenga el peine de forma diagonal y corte el cabello. Siga combinando hasta que quede satisfecho con el resultado.

CORTE DE PRECISION CON LA CUCHILLA

Para dar el corte de precisión con la cuchilla, siga el peine de corte en cada zona de la cabeza. Peine el cabello en la dirección natural. Luego use el peine asociado para cortar el cabello. Para ello, peine el cabello hacia abajo y corte los pelos sueltos. Sostenga la cuchilla de afeitar en un ángulo de 45 grados y empuje la cuchilla hacia arriba y hacia fuera

TO OPERATE TRIMMER

1. Make sure unit is "off". Remove wide clipper blade by simply placing your thumb in front of the blade and pushing back until the blade detaches. Use cleaning brush to remove any loose hair before attaching the trimmer blade. Attach the narrow blade from the back, (lining it up with the small tab) and then push forward until the blade snaps into place. Be sure that the taper control is set to the lowest setting (switch will be down from the blade) before replacing the blade. To begin trimming, push the taper control switch up to its highest setting.

2. To trim your mustache, comb hair in the direction of growth. Push the taper control button to its highest setting. Trimming only works in this setting. Hold trimmer in an upright position and bring the tip of the blade straight into the mustache to trim.

3. To clean the trimmer, turn unit to "OFF" position. Using your thumb, press upwards against the blade. This will make it easy to clean. Brush or blow hair clippings from the cutter blade.

4. Again, snap in the blade set until you hear a click. Be sure that the taper control is set to the lowest setting (switch will be away from the blade) before replacing the blade. This trimmer attachment works well on sideburns & necks as well as goatees and short beard styles and mustaches. For thick, full beards we recommend using the clipper blade.

TAKING CARE OF YOUR TRIMMER

OILING THE BLADES

About once a month you should oil the trimmer blades with the oil provided in your kit. It is best to do this over a piece of newspaper. Turn the trimmer on and hold it so that the blades are pointed downward. Spread one drop of oil across the blades, then turn the trimmer off and wipe away the excess oil with a soft cloth.

Be careful not to use too much oil and don't oil your trimmer more than necessary, as this could damage the motor. (Never attempt to oil the motor bearing, as it is permanently lubricated.) **KEEP OIL AWAY FROM CHILDREN.**

BLADE CARE

Because the trimmer blades are precision-made for a very special use, they should always be handled with care. Each time you finish using the trimmer, take the cleaning brush provided and brush away any loose hair that has collected in the blades. Then store the trimmer in its case to protect the blades until the next use.

Be especially careful when changing or adjusting blades.

To promote the long life of the appliance, use your trimmer blade only for the purpose intended by the manufacturer – to trim your beard and mustache.

TURBO FEATURE

This product is equipped with a turbo boost button. When activated, this will provide 15% more cutting power. This is especially useful for cutting through thicker hair.
To activate the turbo feature:

1. Turn the Power switch to the "ON" position.
2. Press the Turbo button.
3. Continue to press the Turbo button for as long as you need the extra power.
4. Release the Turbo button to return to normal power.

GROWING A BEARD AND MUSTACHE

There are three key factors that will determine which beard or mustache style is best for you:

1. The shape and dimensions of your face.
2. The natural growth of your beard/mustache.
3. The thickness of your beard/mustache. If you are unsure about the type of beard or mustache that would most suit your face, speak with a professional hair stylist and ask for an opinion on what style would be best. Once your beard or mustache has been styled, it is essential that you maintain its appearance. To do this, use your trimmer to trim your beard/mustache weekly.

For the best trimming results, your beard should be slightly damp (NOT WET) when using your trimmer. This will prevent the trimmer from removing more hair than desired.

TYPES OF BEARDS/MUSTACHES

GETTING STARTED:

OUTLINING YOUR BEARD

1. It is always best to begin with a clean, slightly damp beard.
2. After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your jawline.
3. Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns, and toward your hairline.

NOW YOU'RE READY TO TRIM YOUR BEARD

1. The trimmer includes 1 five-position comb for use with the 30mm facial hair blade, which provides lengths of 3/32" (shortest) to 3/8" (longest).
2. To use the 5-position comb, slide the unit over the trimmer blade and snap it down into position. At first, until you become familiar with the adjustments, use the longest trim setting. (You can always go back and make your beard a little shorter.)

3. To use the taper control, push upward for shorter cuts and downward for longer cuts. At first, until you become familiar with the adjustments, use the longest trim setting (3/8"). (You can always go back and make your beard a little shorter.)
4. Begin trimming your beard using smooth, even strokes. Start with your sideburns and work downward toward your chin. (Never attempt to trim against the natural growth of your beard because the hair will be cut too short.)

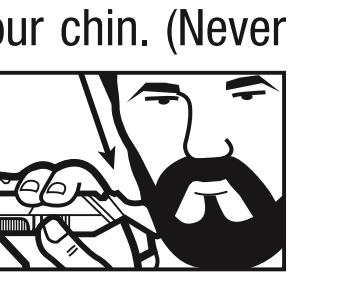

5. If you decide you want a closer trim, you can now adjust the 5-position comb attachment to a shorter setting (such as 3/32" or 5/32") and go over your beard again until you achieve the desired length.

BLENDING THE JAWLINE

1. The three jawline attachments will help you to achieve a neat, finished trim under your chin. To use one of the attachments, press it down over the trimmer blades until it clicks into position.
2. Hold the trimmer in an upright position and begin trimming under your jawline, using short, even strokes.

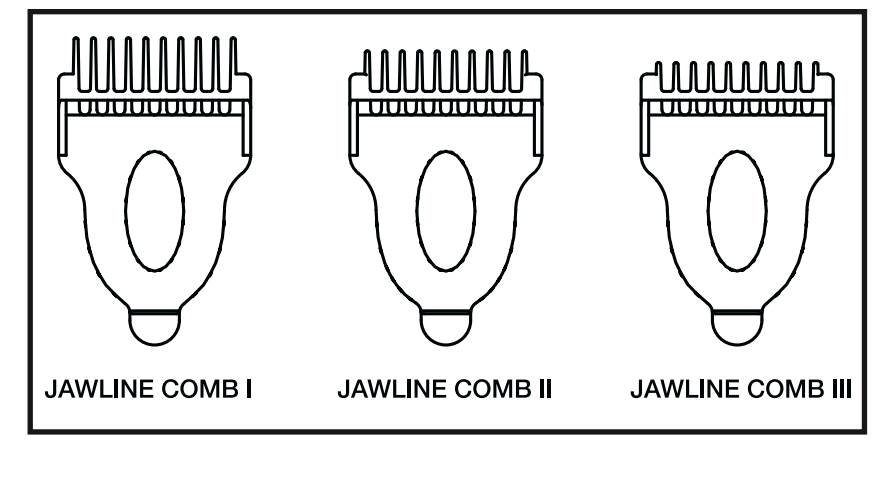

3. After your beard is blended, turn off the trimmer and remove the attachment by gently pulling up on the tab.

**WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.**

KEEP AWAY FROM WATER

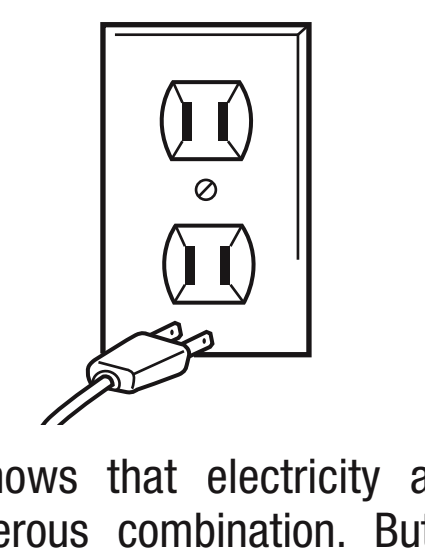

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically alive even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

Public Service ad from Association of Home Appliance Manufacturers and Underwriters Laboratories, Inc.

LIMITED FIVE YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 60 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed below that is nearest you, together with your purchase receipt and $3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 60 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 60 MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

©2006 Conair Corporation

Service Center
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

Once again, thanks for buying a Conair product.

Your Conair® clipper blades are made of high carbon stainless steel and sharpened with diamond dust. They are engineered for precise, professional results. If blades feel like they are pulling or grabbing hair, it means they are losing their sharpness and should be replaced as soon as possible.

Attachment combs should also be replaced if they are lost or broken. It is easier to cut hair with the accuracy of a pro when the necessary tools are at your fingertips.

Conair makes a variety of accessories for different haircut kits. If your haircut kit does not include them, you may want to consider adding them to your professional haircutting tools.

Left and right ear attachment combs provide effortless, precise cutting around the ears. Styling clips hold hair in place when you are sectioning hair. A styling comb makes it easy to taper or cut hair at an angle. A barber cape ensures a comfortable and neat haircut and a convenient storage pouch keeps all your essentials in one place.

Last but not least, an easy-to-follow 30-minute "Haircuts at Home" video is available. It demonstrates basic haircutting techniques and follows four popular haircuts step by step. It will give you the confidence and instruction you need to give great looking haircuts to every member of your family.

EXCITING NEW ITEMS FROM CONAIR

Combo mustache and personal trimmer trims hair in nose, ears, eyebrows as well as mustache and sideburns. Includes mustache comb and stand.

Rechargeable beard and mustache trimmer with turbo feature, stainless steel blades and 5 position attachment comb. Now with a nose /ear hair attachment.

New Hot Lather Machine
- Works with any brand of shaving cream. (no gels)
- Heats in about a minute.
- On and ready light indicators.
- Provides smooth shaves with more comfort.
- Hot Gel unit also available.

Model HC500 COMB-4 · Model HC500 BLD- 1 · Model HC500 COMB-2
Model HC500 COMB-1 · Model HC500 COMB-3 · Model SC- 1
Model HCNB-1 · Model CAPE-1 · Model HC OIL
Model CLP- 1 · Model DVD-1 · Model HC500 BLD-2

06NG9009

IB-7246

CUT HERE

HAIRCUT KIT REPLACEMENT PARTS & ACCESSORIES ORDER FORM

Pricing in effect through June 1, 2008. Orders postmarked after this date will be accepted, and the customer will be notified if pricing has changed.

ITEM	PART #	PRICE	QUANTITY	AMOUNT
Clipper Blade Set	HC500-BLD1	$6.50		
Trimmer Blade Set	HC500-BLD2	$6.50		
4 Attachment Combs (1/8", 1/4", 3/8", 1/2")	HC500-COMB1	$5.00		
3 Attachment Combs (5/8", 3/4", 7/8")	HC500-COMB2	$5.00		
1" Comb	HC500-COMB3	$2.00		
Left/Right Ear Attachment Combs	HC500-COMB4	$2.00		
Neck Brush	HCNB-1	$1.50		
Deluxe Vinyl Cape	CAPE-1	$5.00		
Lubricating Oil (pkg of 3 tubes)	HC OIL	$2.00		
Instructional DVD	DVD-1	$5.00		
Barber Scissors	SC-1	$2.00		
Styling Clips (set of 3)	CLP-1	$1.50		

Enclose check or money order made payable to Conair. (We cannot accept cash, stamps or C.O.D. orders.) CT, IL, AZ, and PA residents should add applicable state sales tax. Minimum order of $10.00 or a $2.00 handling charge will be added to order.
All prices include handling and return postage. Prices are subject to change without notice.
Prices are valid only for shipments within the Continental United States. Please allow 4-6 weeks for delivery.

Subtotal ____
*Sales Tax ____
TOTAL ____

To avoid delays, please print clearly.
We must have a street address, as UPS cannot deliver to a P.O. box.

NAME ______________________________
ADDRESS ______________________ APT. ________
CITY ____________________ STATE ________ ZIP ________
TELEPHONE ( ) ______________(We call only if we have a question about your order.)

For information on other Conair® haircut kit parts call: 1-800-3-CONAIR.

Mail to:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730

INSTRUCCIONES DE OPERACIÓN CORTADORA PARA LA BARBA Y EL BIGOTE

1. Asegúrese que el aparato esté apagado y que el botón de ajuste del recorte esté en la posición más baja. Saque la cuchilla para el cabello, empujándola hacia atrás con su dedo pulgar. Limpie los pelos sueltos con el cepillo de limpieza provisto. Alinee la lengüeta con la cuchilla para la barba y presione la cuchilla hasta que caiga en posición. Para empezar a cortar el pelo, deslice el botón de ajuste del recorte hacia arriba.

2. Para cortar su bigote, péinelo en la dirección del crecimiento natural del pelo. Coloque el botón de ajuste del recorte en la posición más larga. La cortadora para la barba y el bigote sólo funcionará en esta posición. Mantenga la cortadora recta y acerque los filos de la cuchilla al bigote.

3. Para limpiar las cuchillas, asegúrese que la cortadora esté apagada (OFF), luego empuje la cuchilla hacia arriba con el dedo pulgar. Limpie la cuchilla con el cepillo provisto, o soplando en los pelos sueltos.

4. Regrese la cuchilla en posición. La cuchilla para la barba y el bigote es perfecta para cortar la barba corta, el bigote, la perilla, las patillas. Para cortar barba más larga o espesa, le recomendamos que use la cuchilla para el cabello.

INSTRUCCIONES DE MANTENIMIENTO

LUBRICAR LAS CUCHILLAS

Lubrique las cuchillas aproximadamente una vez al mes, usando el aceite provisto. Para no ensuciar, hágalo encima de un periódico. Encienda el aparato y manténgalo bocabajo. Coloque unas gotas de aceite sobre las cuchillas, apague el aparato, y limpie el exceso de aceite con un paño suave. No use demasiado aceite y no lubrique el aparato más de lo necesario. Esto podría lastimar el motor. Nunca intente lubricar las piezas del motor, ya que son lubricadas de manera permanente. Después de lubricar las cuchillas, regrese el aparato y el aceite lubricante en la base de almacenamiento. **MANTENGA EL ACEITE FUERA DEL ALCANCE DE LOS NIÑOS.**

LIMPIAR LAS CUCHILLAS

Las cuchillas de su aparato fueron diseñadas con precisión para un uso específico, y deberían recibir un cuidado muy especial. Limpie las cuchillas después de cada uso con el cepillo de limpieza provisto, luego regrese el aparato en la base de almacenamiento. Tenga cuidado cuando sea necesario cambiar o ajustar las cuchillas. Asegúrese que las dos cuchillas siempre estén cambiadas o afiladas al mismo tiempo. Para seguir disfrutando de su aparato durante años, utilícelo únicamente con el propósito para el cual fue diseñado: cortar la barba y el bigote.

FUNCIÓN TURBO

Su cortadora está equipada con un botón Turbo. La función Turbo ofrece un 15% más fuerza, lo cual facilita el cortado del cabello espeso o grueso. Para activar la función Turbo:
Para activar la función Turbo:

1. Encienda el aparato ("ON")
2. Oprima el botón Turbo
3. Siga oprimiendo el botón Turbo mientras necesite más fuerza
4. Afloje el botón Turbo para regresar al poder normal

BARBAS Y BIGOTES

El tipo de barba o de bigote que más conviene a su rostro depende de:

1. La forma y el tamaño de su rostro
2. La forma del crecimiento natural de su barba o de su bigote
3. El espesor de su barba o de su bigote

Si no está seguro del tipo de barba o bigote que le conviene, busque el consejo de un estilista profesional. Después de darle forma a su barba o a su bigote, tendrá que mantener su aspecto, usando la cortadora una vez por semana.

Para lograr resultados óptimos, humedezca ligeramente (NO LA MOJE) su barba o su bigote antes del recorte. Esto logrará un cortado más preciso.

TIPOS DE BARBAS Y DE BIGOTES

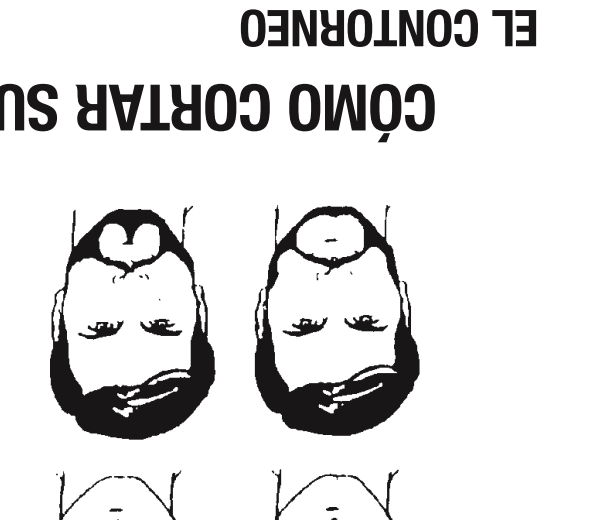

CÓMO CORTAR SU BARBA

EL CONTORNEO

1. Se le hará más fácil el contorneo y el recorte si su barba está limpia y ligeramente humedecida.
2. Peine su barba en la dirección del crecimiento natural del pelo antes de empezar a darle forma.
3. Déle forma a su barba empezando por debajo de la quijada y subiendo hacia la oreja por cada lado del rostro. Siga dando forma al área de la mejilla, a las patillas y al nacimiento del pelo.



EL RECORTE

1. Su cortadora incluye un peine accesorio (o guía) de 5 posiciones para uso con la cuchilla para la barba de 30mm, y que corta el pelo desde 2mm hasta 10mm.
2. Instale el peine accesorio encima de la cuchilla para la barba. Le recomendamos que utilice la posición más larga hasta acostumbrarse a lo largo del recorte (siempre podrá volver a acortar la barba).
3. Si desea usar el botón de ajuste de lo largo del recorte con el peine accesorio, empuje el botón hacia arriba para lograr cortes más cortos o hacia abajo para lograr cortes más largos. Le recomendamos que utilice la posición más larga hasta acostumbrarse a lo largo del recorte (siempre podrá volver a acortar la barba).



4. Empiece a cortar su barba con movimientos parejos y suaves, desde las patillas hasta la quijada. Nunca corte en la dirección opuesta a la del crecimiento natural del pelo. El recorte resultaría demasiado corto.



5. Si desea un recorte aún más corto, escoja un largo de recorte más corto, como 2mm o 4mm, y siga acortando su barba hasta conseguir el tamaño deseado.

IGUALAR LA QUIJADA

1. Los tres peines accesorios para la quijada le permitirán lograr un recorte neto y preciso. Ensarte el peine accesorio deseado sobre las cuchillas, presionando hasta que caiga en posición.
2. Mantenga la cortadora recta y corte el pelo con pequeños movimientos parejos.

3. Cuando haya terminado, apague la cortadora y saque el peine accesorio, jalando la lengüeta.

**ADVERTENCIA:
SI CREE QUE NO
HAY CORRIENTE,
SE EQUIVOCA**

MANTENGA ESTE APARATO ALEJADO DEL AGUA

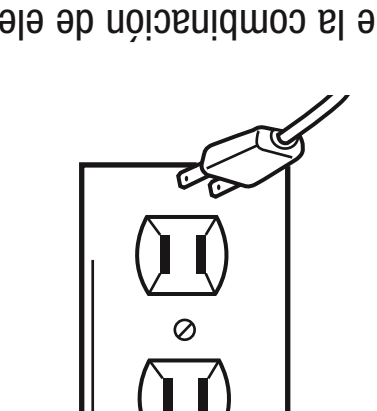

Todos saben que la combinación de electricidad y de agua es peligrosa. Pero ¿Sabe usted que un aparato eléctrico está eléctricamente activo aún cuando el interruptor está apagado? Si está conectado, hay corriente. De modo que cuando no use sus aparatos eléctricos, manténgalos desenchufados.

SIEMPRE DESENCHUFE LOS APARATOS PEQUEÑOS

Un Aviso Público de la Asociación de los Fabricantes de Electrodomésticos y de Underwriters Laboratories, Inc..

GARANTÍA LIMITADA POR CINCO AÑOS

Conair reparará o remplazará (a su opción) su aparato sin cargo por un período de 60 meses a partir de la fecha de compra si presenta defectos de mano de obra o en los materiales.

Para obtener servicio técnico bajo esta garantía, lleve o mande su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque de $3,00US por gastos de envío y manejo. Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-366-0937 para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 60 meses a partir de la fecha de fabricación

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 60 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE EN NINGÚN CASO POR ALGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O DE CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

©2006 Conair Corporation

Centro de Servicio
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

Nuevamente, gracias por comprar un producto de Conair.

Las cuchillas de su cortadora son de acero duro inoxidable y fueron afiladas con polvo de diamante para brindar resultados precisos y profesionales. Si siente que las cuchillas tironean o enganchan el pelo, significa que están perdiendo el filo y debe reemplazarlas lo más pronto posible.

También se deben cambiar los peines accesorios si se pierden o se dañan. Es más fácil cortar el pelo con exactitud profesional cuando se tienen las herramientas adecuadas.

Conair también fabrica una variedad de accesorios para cortar el cabello. Si su conjunto para recorte no los incluye, los puede ordenar por separado.

Peines para contornear la oreja izquierda y derecha brindan un corte de precisión sin esfuerzo. Los clips sostienen el cabello mientras lo está seccionando. El peine de modelar permite contornear o cortar el cabello en ángulo. La capa de peluquero asegura un corte confortable y limpio y el cómodo bolso de almacenamiento mantiene todo sus accesorios en el mismo lugar.

También puede ordenar el video de 30 minutos "Corte de cabello en casa" con instrucciones fáciles de seguir. El video muestra las técnicas básicas del corte de cabello y presenta cuatro atractivos cortes paso a paso. Le dará la confianza y los conocimientos que necesita para cortar el cabello a todos los miembros de la familia.

NOVEDADES FASCINANTES DE CONAIR

Cortadora para el bigote y cortadora personal 2-en-1, para el pelo de la nariz y de los oídos, las cejas, el bigote y las patillas. Incluye un peine para el bigote y una base de almacenamiento.

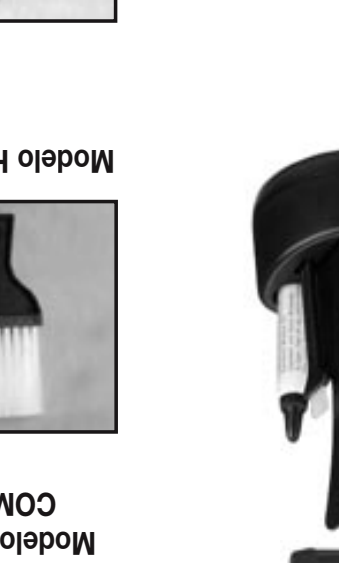

Cortadora recargable para la barba y el bigote con botón turbo, cuchillas de acero inoxidable y un peine accesorio de 5 posiciones. Ahora incluye también un peine accesorio para el pelo de la nariz y de los oídos.

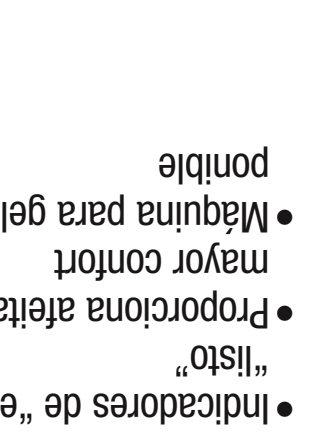

Nueva máquina de enjabonado en caliente.
- Funciona con cualquier marca de crema de afeitar (no geles)
- Calienta en un minuto
- Indicadores de "encendido" y "listo"
- Proporciona afeitadas suaves con mayor confort
- Máquina para geles también disponible

Modelo HC500 COMB-4 · Modelo HC500 BLD- 1 · Modelo HC500 COMB-2
Modelo HC500 COMB-1 · Modelo HC500 COMB-3 · Modelo SC- 1
Modelo HCNB-1 · Modelo CAPE-1 · Modelo HC OIL
Modelo CLP- 1 · Modelo DVD-1 · Modelo HC500 BLD-2

06NG9009

IB-7246

CORTE AQUÍ

FORMULARIO DE PEDIDO PARA PARTES DE REPUESTO Y ACCESORIOS

Precios válidos hasta el 1ero de junio del 2008. Aceptaremos los pedidos después de esa fecha y notificaremos los clientes si los precios han cambiado.

DESCRIPCIÓN	PANÚMERO	PRECIO	CANTIDAD	TOTAL
Cuchilla para cortar el cabello	HC500-BLD1	$6.50		
Cuchilla para cortar la barba y el bigote	HC500-BLD2	$6.50		
4 peines accesorios: 3 mm, 6 mm, 9 mm, 13 mm	HC500-COMB1	$5.00		
3 peines accesorios: 16 mm, 19 mm, 22 mm	HC500-COMB2	$5.00		
Peine accesorio: 25 mm	HC500-COMB3	$2.00		
Peines accesorios para la oreja izquierda y derecha	HC500-COMB4	$2.00		
Cepillo para el cuello	HCNB-1	$1.50		
Capa de vinilo	CAPE-1	$5.00		
Aceite lubricante (envase de 3)	HC OIL	$2.00		
DVD instructivo	DVD-1	$5.00		
Tijeras de peluquero	SC-1	$2.00		
Clips de modelado (envase de 3)	CLP-1	$1.50		

Incluya un cheque o giro postal a la orden de Conair (no podemos aceptar dinero en efectivo, estampillas, ni pedidos con pago con entrega). Los residentes de CT, IL, AZ y PA deben sumar al subtotal el impuesto estatal a las ventas que corresponda. Pedido mínimo de $10,00US o de lo contrario se sumará al pedido $2,00US por gastos administrativos. Todos los precios incluyen gastos administrativos y franqueo de envío. Los precios están sujetos a cambio sin previo aviso. Estos precios son válidos únicamente para los envíos en la parte continental de los Estados Unidos. La entrega demora entre 4 y 6 semanas.

Subtotal ____
Impuestos a la venta* ____
TOTAL ____

Para evitar demoras, por favor escriba claramente. Necesitamos una dirección completa ya que US no puede hacer entregas en casillas postales.

NOMBRE ______________________________
DIRECCIÓN ______________ APTO.. ______________
CIUDAD ______________ESTADO ________ CÓDIGO POSTAL ________
TELÉFONO ( ) ______________ (sólo le llamaremos si tengamos alguna pregunta sobre su pedido)

Para información sobre otras partes de los conjuntos de Conair®, llame 1-800-3-CONAIR

Enviar a:
Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520-9730