IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — Any hair dryer is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. **ALWAYS UNPLUG DRYER IMMEDIATELY AFTER USING.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a Conair Service Center for examination and repair.**
5. Keep the cord away from heated surfaces. **Do not pull, twist, or wrap line cord around dryer, even during storage.**
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord to operate dryer.
11. Do not direct hot air toward eyes or other heat-sensitive areas.
12. **Attachments may be hot during use. Allow them to cool before handling.**
13. Do not place appliance on any surface while it is operating.
14. **While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.**
15. Do not use with a voltage converter.
16. This appliance is not a toy. Keep away from children.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

This appliance is intended for household use. Use on Alternating Current (60 hertz) only. Standard dryers are designed to operate at 110 to 125 volts AC.

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

IMPORTANT

1875 WATT OPERATING GUIDE

Use of this dryer on the same circuit or fuse with other electrical products or appliances may trip a 15 amp circuit breaker or blow a 15 amp fuse.

NEVER replace the fuse with one rated higher than the capacity of the circuit. Doing so could result in an electrical fire.

IMPORTANT

CLEANING THE FILTER

NOTE: Clean the rear filter and inlet mesh weekly with the dryer unplugged. Lint and debris buildup can lead to a slowdown in the dryer's performance and can cause the dryer to stop operating over time. If the dryer stops operating, unplug the dryer from the outlet. Remove the rear filter and gently clean it and the outside of the inlet mesh with your fingers or the included brush.

WARNING: Do not attempt to remove the inlet mesh. It is permanently attached. If your dryer still does not operate after gently cleaning the rear filter and inlet mesh, do not attempt to use. Please call Customer Service at 1-800-3-CONAIR.

IMPORTANT SAFETY INSTRUCTIONS

AUTO-MONITORING ALCI SAFETY PLUG WITH LED INDICATOR

IF THE ALCI LED INDICATOR LIGHT IS FLASHING CONTINUOUSLY, THIS INDICATES THAT THE ALCI IS NOT FUNCTIONING PROPERLY. STOP USING AND RETURN APPLIANCE TO AN AUTHORIZED SERVICE CENTER.

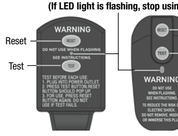

CHECK ALCI SAFETY FEATURE EVERY TIME YOU USE THE APPLIANCE.

This appliance is equipped with an auto-monitoring Appliance Leakage Circuit Interrupter (ALCI), a safety feature that provides protection against electric shock under abnormal conditions, such as immersion in water. To ensure that the ALCI is functioning properly, perform the following test.

1. Plug in the appliance with the power off and press the ALCI test button (see diagram).
2. If the ALCI is functioning properly, there will be an audible click, the reset button will pop out, the LED indicator will be off, and the appliance will not turn on.
3. To reset the ALCI, the unit should be unplugged. Then press the reset button and plug the unit back into the outlet. The appliance should work normally when switched on.
4. Be sure to repeat this test each time you use the unit to confirm that the ALCI is operating properly.
5. If the appliance shuts off and the reset button pops up during use, this could indicate a malfunction. Remove the plug from the outlet and allow the appliance to cool. Press the reset button and plug appliance into the outlet. The appliance should function normally. If not, send it to an authorized service center for evaluation.
6. **IF THE UNIT HAS BEEN IMMERSED IN WATER, DO NOT ATTEMPT TO RESET AND USE THE APPLIANCE. IT SHOULD BE SENT TO AN AUTHORIZED SERVICE CENTER IMMEDIATELY**.

FEDERAL COMMUNICATIONS COMMISSION NOTICE

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
• Reorient or relocate the receiving antenna.
• Increase the separation between the equipment and receiver.
• Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
• Consult the dealer or an experienced radio/TV technician for help.

SUPPLIER'S DECLARATION OF CONFORMITY

Brand: Conair®

Model No.: 999

Description: InfinitiPRO by Conair® DigitalAire Pro Dryer

Responsible Party: Conair LLC,
1 Cummings Point Road, Stamford, CT 06902
(203) 351-9000

Standards: FCC Part 15 Subpart B, ANSI C63.4-2014
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

DATE OF ISSUE: 08/17/2022

SUPER STYLING GUIDE

Your best looks begin with a good haircut that's well maintained. Always treat hair right with superior quality shampoos, conditioners, and finishing products.

DRYING BASICS

1. Shampoo and condition hair with products of your choice. Rinse thoroughly. Towel-dry hair to remove excess moisture. Using the dryer along with your styling brush, start at a lower setting and direct hot air through a section of hair at a time. Move dryer steadily across each section so that the hot air passes through hair. Direct airflow at hair, not scalp. Clouds of negatively charged ions will help to reduce static electricity, control frizzy flyaways, and contribute to your hair's shine.
2. Keep dryer's air intake vents unobstructed and free from hair while drying.
3. To avoid overdrying, do not concentrate heat on any one section for an extended length of time. Keep dryer moving as you style. For pinpoint airflow, use the snap-on concentrator attachment.
4. For quick touch-ups between shampoos, dampen hair with a mist of water before styling with the dryer.
5. When using your dryer to create curls and waves, dry hair almost completely on a warmer temperature setting, When using your dryer to create curls and waves, dry hair almost completely on a warmer setting while using the included diffuser, then finish styling with cold shot feature to quickly close hair shaft and lock in style.

BODY & VOLUME

To create extra volume, turn head upside down while drying. Position the airflow toward the roots for maximum lift. When hair is dry, toss head back and brush hair into place.

STRAIGHTENING

Work with hair in sections when creating a super-straight look. Using a large round brush (approximately 2" in diameter), hold hair taut in each section and bend ends slightly under as you dry.

MAKING WAVES

Tousled, natural-looking waves are easily created by grasping hair at the roots and scrunching between fingertips while drying.

MEDIDAS DE SEGURIDAD IMPORTANTES

ENCIENDE CON INTERRUPTOR DE CONTROL DE POTENCIA AUTOMÁTICO CON INDICADOR LED

SI EL INDICADOR LED EMPIEZA A PARPADEAR, ESTO SIGNIFICA QUE EL INTERRUPTOR DE CONTROL DE POTENCIA NO FUNCIONA CORRECTAMENTE. DEJE DE USAR EL APARATO Y CÉDELO A UN CENTRO DE SERVICIO AUTORIZADO.

6. **SI EL APARATO SE CAE A EL AGUA, NO INTENTE REINICIAR EL INTERRUPTOR DE CONTROL DE POTENCIA Y USAR EL APARATO. DEVUÉLVALO INMEDIATAMENTE A UN CENTRO DE SERVICIO AUTORIZADO.**

AVISO DE LA COMISIÓN FEDERAL DE COMUNICACIONES (FCC)

ADVERTENCIA: Se advierte que las modificaciones no aprobadas expresamente por el autorizado podrían rescindir el permiso del usuario para operar el equipo.

Este aparato cumple con la Sección 15 de la Normativa FCC. Su funcionamiento está sujeto a las dos condiciones siguientes: (1) Este aparato no debe causar ninguna interferencia perjudicial, y (2) Este aparato debe aceptar cualquier interferencia recibida, incluso aquellas que puedan causar un funcionamiento no deseado.

NOTA: Este equipo ha sido probado y se ha determinado que cumple con los límites de un dispositivo digital de Clase B, según la Sección 15 de la Normativa FCC. Estos límites están diseñados para proporcionar una protección razonable para interferencias perjudiciales en una instalación residencial. Este equipo genera, usa y puede irradiar energía de radiofrecuencia (RF) y, si no ha sido instalado o usado conforme a las instrucciones, puede ocasionar interferencias perjudiciales para las comunicaciones por radio. No obstante, no hay garantía de que aquellas interferencias no ocurran en una instalación particular. Si este equipo ocasiona alguna interferencia perjudicial en la recepción de radio o televisión, lo que podrá determinarse encendiendo y apagando el equipo, se recomienda tratar de corregir la interferencia, adoptando una o más de las siguientes medidas:
• Reorientar o reubicar la antena receptora.
• Aumentar la distancia entre el equipo y el receptor.
• Conectar el equipo a un circuito distinto al que está conectado el receptor.
• Consultar con el distribuidor o un técnico especializado en radio/TV.

MEDIDAS DE SEGURIDAD IMPORTANTES

ENCIENDE CON INTERRUPTOR DE CONTROL DE POTENCIA AUTOMÁTICO CON INDICADOR LED

SI EL INDICADOR LED EMPIEZA A PARPADEAR, ESTO SIGNIFICA QUE EL INTERRUPTOR DE CONTROL DE POTENCIA NO FUNCIONA CORRECTAMENTE. DEJE DE USAR EL APARATO Y CÉDELO A UN CENTRO DE SERVICIO AUTORIZADO.

6. **SI EL APARATO SE CAE A EL AGUA, NO INTENTE REINICIAR EL INTERRUPTOR DE CONTROL DE POTENCIA Y USAR EL APARATO. DEVUÉLVALO INMEDIATAMENTE A UN CENTRO DE SERVICIO AUTORIZADO.**

INSTRUCCIONES DE USO

Para uso doméstico solamente. Úselo solamente con para funcionar con corriente de 110-125 V AC.

Este aparato dispone de un enchufe polarizado (una pata es más ancha que la otra). Como medida de seguridad, se podrá enchufar de una sola manera en la toma de corriente polarizada. Si no entra en la toma de corriente polarizada, invierta. Si aún así no entra en la toma de corriente, invierta. Si aún así no entra, intente modificar esta función de seguridad.

INSTRUCCIONES IMPORTANTES

GUÍA DE USO DE LOS SECADORES DE 1875 VATIOS

Usar este aparato en el mismo circuito o con el mismo fusible que otros aparatos podría activar el desyuntor/interruptor de circuito de 15 amperios o quemar un fusible de 15 amperios. **NUNCA reemplace el fusible por uno de mayor capacidad que la del circuito; esto podría provocar un incendio eléctrico.**

PARENTE EL INTERRUPTOR DE CONTROL DE POTENCIA ANTES DE CADA USO.

NOTA: Limpie el filtro trasero y la malla interna cada semana, dependiendo de que el aparato esté desencendido. Si se acumulan pelusas y residuos en el filtro, el rendimiento del secador puede disminuir y, con el tiempo, el aparato puede dejar de funcionar. Si el secador se apaga de repente, desenchúfelo y continúe con la limpieza. Si el aparato aún no funciona después de haber limpiado la malla del secador, el botón de reinicio automático del aparato podría estar activado. Consulte con el Servicio de Atención al Cliente al 1-800-3-CONAIR.



IMPORTANTE

LIMPIEZA DEL FILTRO

NOTA: Limpie el filtro trasero y la malla interna cada semana, dependiendo de que el aparato esté desencendido. Si se acumulan pelusas y residuos en el filtro, el rendimiento del secador puede disminuir y, con el tiempo, el aparato puede dejar de funcionar. Si el secador se apaga de repente, desenchúfelo y continúe con la limpieza. Si el aparato aún no funciona después de haber limpiado la malla del secador, el botón de reinicio automático del aparato podría estar activado. Consulte con el Servicio de Atención al Cliente al 1-800-3-CONAIR.

GUARDE ESTAS INSTRUCCIONES

LEA TODAS LAS INSTRUCCIONES ANTES DEL USO

MANTÉNGALO ALEJADO DEL AGUA

PELIGRO — Cualquier aparato enchufado permanece en tensión, aunque esté apagado. Para reducir el riesgo de electrocución o lesiones por descarga eléctrica:

1. **SIEMPRE DESENCHUFE EL APARATO INMEDIATAMENTE DESPUÉS DEL USO.**
2. No use el aparato en el baño o la ducha.
3. No coloque ni guarde este producto donde cae o se resbala o se bañe o la bañera o el lavabo.
4. No coloque el aparato en lugares donde pueda caer o ser empujado a una bañera o otro líquido.
5. Si el aparato se cae al agua, desenchúfelo inmediatamente. **No intente alcanzarlo en el agua.**
6. Este aparato no es un juguete; manténgalo fuera del alcance de los niños.

ADVERTENCIA—

1. No use el aparato en el baño o la ducha.
2. Este aparato debe ser usado por, en o cerca de niños o personas con ciertas discapacidades.
3. Use aparatos eléctricos, especialmente en presencia de niños, siempre se deben tomar precauciones básicas de seguridad, entre ellas las siguientes:
4. **No use este aparato si el cable o el enchufe están dañados, si no funciona correctamente o si está dañado, o después de una caída/daño al agua; devuélvalo a un centro de servicio autorizado para su revisión y reparación.**
5. Manténgase el cable lejos de las superficies calientes. **No jale, retuerza ni enrolle el cable alrededor del aparato; incluso para guardarlo.**
6. No coloque ni guarde este producto donde pueda caer o ser empujado a una bañera o otro líquido.
7. No use este aparato con un convertidor de voltaje.
8. Este aparato no está diseñado para ser usado por personas (incluyendo niños) con capacidades físicas, sensoriales o mentales reducidas, o con falta de experiencia y conocimiento, a menos que estén bajo la supervisión o reciban instrucciones sobre el uso del aparato por parte de una persona responsable por su seguridad.
9. No use este producto en exteriores, ni lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.
10. No use un cable alargador/de extensión con este aparato.
11. No dirija el aire caliente hacia los ojos o otras áreas sensibles al calor.
12. **Los accesorios pueden ponerse calientes durante el uso; permita que se enfríen antes de manipularlos.**
13. No coloque el aparato sobre ninguna superficie durante el funcionamiento.
14. **Manténgase el cabello alejado del aparato y de los orificios de ventilación durante el uso.**
15. No use este aparato con un convertidor de voltaje.
16. Este aparato no es un juguete; manténgalo fuera del alcance de los niños.

IMPORTANTE

CUERPO & VOLUMEN

Para dar más volumen al cabello, incline la cabeza al abajo durante el secado. Dirija el flujo de aire hacia la raíz para obtener más cuerpo. Cuando el cabello esté seco, enderece la cabeza y péinese en la forma deseada.

ALISADO

Para conseguir resultados super lisos, trabaje sección por sección. Esfire cada sección con un cepillo redondo grande de alrededor 2 in (5 cm) de diámetro. Coloque el cepillo debajo de apox. 2 in (5 cm) de las puntas hacia dentro.

ONDULADO

Para crear ondas despeinadas de apariencia natural, sefrufle las raíces con los dedos mientras sea el cabello sin obstrucciones y libres de cabello durante el uso.

2. Mantenga los orificios de ventilación del aparato inclinado, ordenado ligeramente hacia abajo.

IMPORTANTE

FECHA DE PUBLICACIÓN: 08/17/2022

GUÍA PARA UN SÚPER PEINADO

La mejor apariencia empieza con corte de cabello bien mantenido. Siempre cuide su cabello después de cada corte de cabello.

FUNDAMENTOS DEL SECADO

1. Lava y acondiciona el cabello con los productos deseados. Enjuague bien. Seque el cabello con una toalla para eliminar el exceso de agua.
2. Aplique una pequeña cantidad de producto para peinado. Nuevamente, distribuya el producto en todo el cabello. Mueva el cepillo a lo largo de cada sección del cabello. Coloque el cepillo debajo de la sección y cepille. Coloque el cepillo debajo de la sección y cepille. Repita el proceso en la sección siguiente. Esfire cada sección simultáneamente hasta las puntas. Dirija el flujo de aire hacia el cepillo a lo largo de cada sección del cabello. Cepille hasta que el cabello esté seco. Cuando el cabello esté seco, trabaje sección por sección. Esfire cada sección simultáneamente hasta las puntas. Dirija el flujo de aire hacia el cepillo a lo largo de cada sección del cabello. Cepille hasta que el cabello esté seco. Cuando el cabello esté seco, enderece la cabeza y péinese en la forma deseada.



FAMILIARÍCESE CON SU SECADOR

El secador profesional digitalAire de InfinitiPRO by Conair® sece el cabello de manera muy eficaz, color interrumpe de amplio espectro, un calor suave desde el interior. Este proceso de secado fácil y rápido minimiza los daños causados por el calor mientras elimina el frizz y hace que el cabello sea más manejable.

POTENTE MOTOR DIGITAL — Produce un flujo de aire rápido, para facilitar el peinado, y proporciona una vida útil hasta 10x mas larga*.

FUNCIÓN IÓNICA — Genera una nube de iones negativos que pueden:
• Ayudar reducir el frizz hasta en 75 %**
• Neutralizar la estática
• Eliminar la estática
• Agregar brillo

*En comparación con los secadores equipados con motor DC
**En comparación con los secadores con fuente natural de iones

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

KEEP AWAY FROM WATER

DANGER — Any hair dryer is electrically live even when the switch is off. To reduce the risk of death or injury by electric shock:

1. **ALWAYS UNPLUG DRYER IMMEDIATELY AFTER USING.**
2. Do not use while bathing or in the shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink.
4. Do not place in or drop into water or other liquids.
5. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING — To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a Conair Service Center for examination and repair.**
5. Keep the cord away from heated surfaces. **Do not pull, twist, or wrap line cord around dryer, even during storage.**
6. Never block the air openings of the appliance or place it on a soft surface, such as a bed or couch, where the air openings may be blocked. Keep the air openings free of lint, hair, and the like.
7. Never use while sleeping.
8. Never drop or insert any object into any opening.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Do not use an extension cord to operate dryer.
11. Do not direct hot air toward eyes or other heat-sensitive areas.
12. **Attachments may be hot during use. Allow them to cool before handling.**
13. Do not place appliance on any surface while it is operating.
14. **While using the appliance, keep your hair out of it. Keep your hair away from the air inlets.**
15. Do not use with a voltage converter.
16. This appliance is not a toy. Keep away from children.

SAVE THESE INSTRUCCIONES

GETTING TO KNOW YOUR DRYER

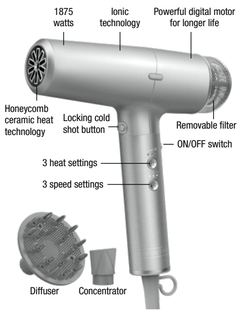

The InfinitiPRO by Conair® DigitalAire Pro Dryer is very effective, even at lower temperatures, and helps create healthier-looking, shiny, more manageable hair with maximum styling control.

HONEYCOMB CERAMIC HEAT TECHNOLOGY provides full-spectrum infrared heat that works on hair molecules to dry them inside and out. This fast and easy drying process minimizes heat damage and makes hair less frizzy and more manageable.

POWERFUL DIGITAL MOTOR delivers fast airflow for styling ease and provides up to 10x longer life.*

THE IONIZING FUNCTION generates a cloud of negative ions that can:
- help reduce frizz by up to 75%**
- neutralize the generally positive charge on flyaway, frizzy hair
- eliminate static electricity
- contribute to shine

**When compared to other DC motor hair dryer models.*
***When compared to hair dryers with natural ion generation.*

SELECT YOUR SETTING

speed/temp.	hair type
low/cool	delicate, thin, or easy-to-style hair
low/warm	average to thick or treated hair
high/hot	thick, coarse, or hard-to-style hair
cold shot	sets style in place for all hair types

ESCOJA EL AJUSTE DESEADO

Velocidad/Color	Tipo de cabello
LOW/COOL (bajo/frío)	cabello delicado, fino o dócil
LOW/WARM (bajo/tibio)	Cabello fino/normal o tratado
HIGH/HOT (alto/caliente)	cabello espeso, grueso, o resistente
Aire frío	Fijar el peinado (todo tipo de cabello)

Este mensaje sobre los...

GFCI

ROUND
AULT
IRCUIT
NTERRUPTERS

(Interruptores de circuito de falla a tierra)

...puede salvar una vida.

INFINITIPRO by CONAIR

DIGITALAIRE

STYLING ATTACHMENTS INCLUDED

INSTRUCTION & STYLING GUIDE

- MODEL 999 -

¡SI DEBE USAR EL SECADOR EN EL CUARTO DE BAÑO, INSTALE UN INTERRUPTOR DE CIRCUITO DE FALLA A TIERRA* AHORA!

Su electricista le puede ayudar a decidir qué sistema elegir. Un sistema removible que se conecta a la toma de corriente o un sistema permanente que está instalará. El Código Nacional de Electricidad ahora exige que todos los enchufes ubicados en los cuartos de baño, los garajes y las partes exteriores de las casas nuevas sean equipados con un interruptor de circuito de falla a tierra (GFCI, por sus siglas en inglés).

¿POR QUÉ NECESITA UN INTERRUPTOR DE CIRCUITO DE FALLA A TIERRA? La electricidad y el agua no deben juntarse. Si el aparato se cae al agua mientras está conectado, una descarga eléctrica puede causar su muerte... **asegúrese de que el interruptor esté en la posición de apagado.** Un fusible o un disyuntor/interruptor de circuito regular no le protegerán en esta situación. Un interruptor de circuito de falla a tierra ofrece más protección.

¡Un interruptor de circuito de falla a tierra puede salvar su vida! ¡Comparado con ella, el precio es baje! ¡No espere...instale uno ahora mismo!

**Un interruptor de circuito de falla a tierra (GFCI, por sus siglas en inglés) es un dispositivo sensible que reacciona inmediatamente a una pequeña pérdida de corriente, deteniendo el flujo eléctrico.*

INSTRUCCIONES DE MANTENIMIENTO

Este secador requiere poco mantenimiento. No requiere lubricación. Para una toma correctamente, debe mantenerlo limpio.

Cuando sea necesario limpiarlo, desenchúfelo, permita que se enfríe y quite el polvo y las pelusas de los orificios de ventilación con un cepillo pequeño o el cepillo accesorio de una aspiradora. La superficie exterior del secador solo se debe limpiar con un paño limpio.

El secador se recalentará si los orificios de ventilación están obstruidos o tapados. Si esto sucede, un sistema de seguridad apagará el secador o cortará la temperatura automáticamente para evitar daños al aparato o lesiones. En caso de que esto suceda, desenchufe el aparato y permita que se enfríe por 10 a 15 minutos antes de encenderlo de nuevo. Comprueba que los orificios de ventilación están limpios.

PRECAUCIÓN

NUNCA jale, retuerza ni doble mucho el cable. Nunca lo enrolle con lenza alrededor del aparato; esto puede dañar la junta flexible que lo conecta al aparato; produciendo su rotura o un cortocircuito. Revise el cable con frecuencia para comprobar que no está dañado. **Interrumpa el uso inmediatamente si el cable está visiblemente dañado, o si el aparato deja de funcionar, o funciona de manera intermitente.**

Si el cable o el aparato están dañados o si el aparato no funciona correctamente, devuélvalo a un centro de servicio autorizado, no intente repararlo.

ALMACENAMIENTO – importante

Después del uso, desenchufe el aparato, permita que se enfríe y guárdelo en un lugar seco y seguro, lejos del alcance de los niños. No enrolle el cable alrededor del aparato; permita que cuelgue, o que la junta que lo conecta al aparato se quiebre y rompa.

El secador Digitalaire detecta automáticamente las fallas técnicas y le informa a través del indicador "LED 1" en el mango.

Si el secador deja de funcionar o no se pone en marcha al encenderlo, el indicador "LED 1" empezará a parpadear. Si esto sucede, siga las instrucciones a continuación:

1. Apague el aparato y deje que se enfríe por 5 minutos.

2. Después de este tiempo, retire el filtro trasero y limpie suavemente esta y la malla interna con los dedos o el cepillo de limpieza provisto. Vuelva a instalar el filtro.

3. Enchufe el aparato otra vez y encíndalo. Si no se pone en marcha y el indicador luminoso "LED 1" sigue parpadeando, apague y desenchufe el aparato. El secador ha detectado una falla técnica y debe ser reparado o sustituido por Conair. Comuníquese con nuestro Servicio de Atención al Cliente al 1-800-3-CONAIR.

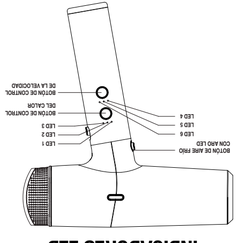

INDICADORES LED

GARANTÍA LIMITADA DE CUATRO AÑOS (VÁLIDA EN LOS EE. UU. Y EN CANADA SOLAMENTE)

Conair reparará o reemplazará (a su opción) este producto sin cargo por un período de 48 meses a partir de la fecha de compra si presenta defectos de fabricación o materiales.

Para obtener servicio técnico bajo esta garantía, devuelva el producto defectuoso al Centro de Servicio indicado en el reverso, junto con su recibo de compra. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-3-CONAIR para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 48 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITA, INCLUYENDO, PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 48 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones en la duración de una garantía implícita, de modo que la limitación mencionada pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

Para registrar este producto, visite:

register.conair.com

CENTRO DE SERVICIO

CONAIR LLC
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2023 CONAIR LLC

Para más información sobre los productos Conair® o InfinitiPRO by Conair®, llame al **1-800-3-CONAIR** o visite **www.conair.com**

22PD084657

IB-17759A

INFINITIPRO by CONAIR

DIGITALAIRE

ACCESORIOS INCLUIDOS

INSTRUCCIONES Y GUÍA DE PEINADO

- MODELO 999 -

This message about...

GFCI

ROUND
AULT
IRCUIT
NTERRUPTERS

...can save a life!

IF YOU MUST USE YOUR HAIR DRYER IN THE BATHROOM, INSTALL A GFCI* NOW!
Your local electrician can help you decide which type is best for you – a portable unit that plugs into the electrical outlet or a permanent unit installed by your electrician. The National Electrical Code now requires GFCIs in the bathrooms, garages, and outdoor outlets of all new homes.

WHY DO YOU NEED A GFCI? Electricity and water don't mix. If your hair dryer falls into water while it's plugged in, the electric shock can kill you...**even if the switch is off.** A regular fuse or circuit breaker won't protect you under these circumstances. A GFCI offers you far greater protection.

A GFCI can save your life! Compared to that, the price is small! Don't wait...install one now!

**A GFCI is a sensitive device that reacts immediately to a small electric current leak by stopping the electricity flow.*

USER MAINTENANCE

Your dryer is virtually maintenance free. No lubrication is needed. For proper operating performance, the dryer must be kept clean.

When cleaning is needed, unplug the cord, allow dryer to cool, and clean dust and lint from air intake openings with a small brush or the brush attachment of a vacuum cleaner. The outer surface of the dryer should be wiped clean with a cloth only.

Blocked or clogged air intake vents will cause the dryer to overheat. If overheating occurs, an automatic safety device will shut the dryer or the heat off to prevent damage or personal injury. If the unit or the heat turns off, unplug the cord and allow the dryer to cool for 10 to 15 minutes before restarting. Make sure the air vents are clean.

CAUTION

NEVER allow the power-supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the dryer. Damage will occur at the high flex point of entry into the dryer, causing it to rupture and short circuit. Inspect the cord frequently for damage. **Stop use immediately if damage is visible or unit stops or operates intermittently.**

If the cord or dryer is damaged or does not operate properly, return it for repair to an authorized Conair Service Representative only. No repairs should be attempted by the consumer.

STORAGE – Important
When not in use, your dryer should be disconnected, allowed to cool, and stored in a safe, dry location, out of reach of children. Do not wrap line cord around dryer. Allow the cord to hang or lie loose and straight at the point of entry into the dryer.

LED INDICATORS

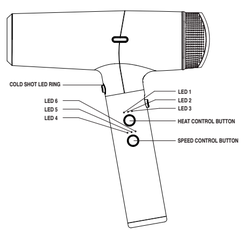

The DigitalAire automatically detects potential issues with the dryer and informs you through the LED indicators on the handle.

If the dryer stops working or will not start when switched on, LED 1 will start flashing. If this happens, follow the directions below:

1. Turn the power switch to the OFF position, unplug the dryer, and let it rest for 5 minutes.

2. After the dryer has rested for 5 minutes, remove the rear filter and gently wipe away any built-up debris with your fingers or the included brush. Reattach the rear filter.

3. Plug the dryer back into the outlet and turn it on to begin using. If the dryer does not go on and LED 1 is still flashing, turn the power switch to the OFF position and unplug the dryer. Your dryer has detected a fault and will need to be serviced or replaced by Conair. Please call Customer Service at 1-800-3-CONAIR.

LIMITED FOUR-YEAR WARRANTY (U.S. AND CANADA ONLY)

Conair will repair or replace (at our option) your unit free of charge for 48 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed on back, together with your purchase receipt. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 48 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 48-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

Please register this product at register.conair.com

SERVICE CENTER
CONAIR LLC
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

©2023 CONAIR LLC

For info on any Conair® or InfinitiPRO by Conair® product, call **1-800-3-CONAIR** or visit us on the web at **www.conair.com**

22PD084657

IB-17759A