

SOLID TEAK SPA BENCH

MODEL SBBF Instructions for Use:

Easy to Assemble • Includes Teakwood Seat with:

- 5 predrilled screw holes
- 5 plastic-capped screws
- 5 metal contoured washers
- 2 pre-assembled U-shaped legs

The Pollenex™ Solid Teak Spa Bench is partially assembled. Final assembly can be completed in minutes. No tools are required.

Remove all parts from the box. Turn wooden bench seat upside down on floor or table (**Fig. A**).

With both U-shaped legs reaching up, place one leg on top of the other. Indented centers should fit together in an X-shape (**Fig. B**).




Carefully align leg holes over predrilled bench holes. Place contoured washer over center hole (**Fig. C**).

Insert a plastic-capped screw through washer and screw loosely into predrilled hole (**Fig. D**).

Place a contoured washer over each of the remaining holes, and securely screw the plastic-capped screws into place. Now tighten the center plastic-capped screw (**Fig. E**).

Adjust bench to desired height by pushing in adjustment pin on each leg (**Fig. F**), and moving leg up or down to allow pin to “lock” into appropriate hole* (**Fig. G**).

***NOTE:** For safety and stability, be sure adjustment pins are securely locked into holes at the same height on each leg.

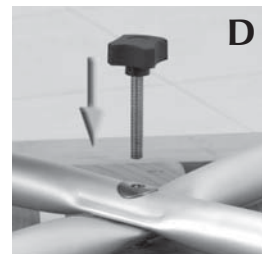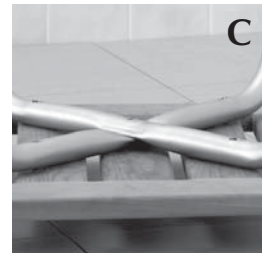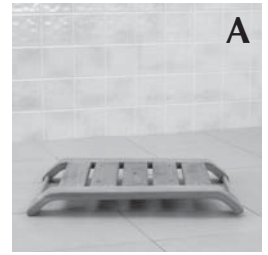

Pollenex